 
 
 


DATA TRANSLATION

UM-23015-F

DT9818
User's Manual



**Sixth Edition
January, 2014**

Copyright © 2014 by Data Translation, Inc.
All rights reserved.

Information furnished by Data Translation, Inc. is believed to be accurate and reliable; however, no responsibility is assumed by Data Translation, Inc. for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Data Translation, Inc.

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer software clause at 48 C.F.R. 252.227-7013, or in subparagraph (c)(2) of the Commercial Computer Software - Registered Rights clause at 48 C.F.R., 52-227-19 as applicable. Data Translation, Inc., 100 Locke Drive, Marlboro, MA 01752.

Data Translation, Inc.
100 Locke Drive
Marlboro, MA 01752-1192
(508) 481-3700
www.datatranslation.com
Fax: (508) 481-8620
E-mail: info@datx.com

Data Translation® is a registered trademark of Data Translation, Inc. DT-Open Layers™, DT-Open Layers for .NET Class Library™, DataAcq SDK™, Data Acquisition OMNI CD™, LV-Link™, and QuickDAQ™ are trademarks of Data Translation, Inc.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Radio and Television Interference

This equipment has been tested and found to comply with CISPR EN55022 Class A and EN61000-6-1 requirements and also with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications to this equipment not expressly approved by Data Translation could void your authority to operate the equipment under Part 15 of the FCC Rules.

Note: This product was verified to meet FCC requirements under test conditions that included use of shielded cables and connectors between system components. It is important that you use shielded cables and connectors to reduce the possibility of causing interference to radio, television, and other electronic devices.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

Table of Contents

About this Manual	11
Intended Audience	11
How this Manual is Organized	11
Conventions Used in this Manual	12
Related Information	12
Where To Get Help	13
Chapter 1: Overview	15
DT9818 Hardware Features	16
Supported Software	18
Accessories	21
Getting Started Procedure	22
Part 1: Getting Started	23
Chapter 2: Setting Up and Installing the Module	25
Unpacking	27
System Requirements	28
Attaching Modules to the Computer	29
Connecting Directly to the USB Ports	29
Connecting to an Expansion Hub	30
Configuring the DT9818 Device Driver	32
Chapter 3: Wiring Signals	33
Preparing to Wire Signals	35
Wiring Recommendations	35
Wiring to the DT9818-OEM or DT9818-32-OEM Module	35
Wiring to an EP353 Accessory Panel	36
Wiring to an EP355 Screw Terminal Panel	37
Wiring to an EP356 Accessory Panel	38
Connecting Analog Input Signals	39
Connecting Single-Ended Voltage Inputs	39
Connecting Pseudo-Differential Voltage Inputs	40
Connecting Differential Voltage Inputs	40
Connecting Current Loop Inputs	43
Connecting Analog Output Signals	44
Connecting Digital I/O Signals	45
Connecting Counter/Timer Signals	46
Event Counting	46
Up/Down Counting	47

Frequency Measurement	48
Period/Pulse Width Measurement.	48
Edge-to-Edge Measurement	49
Continuous Edge-to-Edge Measurement	50
Connecting Pulse Output Signals	51
Chapter 4: Verifying the Operation of a Module	53
Running the Quick DataAcq Application.	55
Testing Single-Value Analog Input	56
Testing Single-Value Analog Output	57
Testing Continuous Analog Input	58
Testing Single-Value Digital Input	59
Testing Single-Value Digital Output	60
Testing Frequency Measurement	61
Testing Pulse Output	62
Part 2: Using Your Module.	63
Chapter 5: Principles of Operation	65
Analog Input Features	67
Input Resolution	67
Analog Input Channels	67
Specifying a Single Channel	68
Specifying One or More Channels	69
Specifying Digital Input Lines in the Input Channel-Gain List	70
Specifying Counter/Timers in the Input Channel-Gain List	71
Input Ranges and Gains	73
Input Sample Clock Sources	74
Analog Input Conversion Modes	74
Continuous Scan Mode	75
Triggered Scan Mode	76
Software-Retriggered Scan Mode.	76
Externally-Retriggered Scan Mode	77
Input Triggers	78
Data Format and Transfer	78
Error Conditions	79
Analog Output Features	80
Output Resolution.	80
Analog Output Channels	80
Specifying a Single Analog Output Channel	80
Specifying Multiple Analog Output Channels and/or the Digital Output Port	80

Output Ranges and Gains	81
Output Triggers.....	82
Output Clocks	82
Output Conversion Modes	82
Continuously Paced Analog Output	83
Waveform Generation	84
Data Format and Transfer	86
Error Conditions	86
Digital I/O Features.....	87
Digital I/O Lines.....	87
Operation Modes.....	87
Counter/Timer Features	89
C/T Channels	89
C/T Clock Sources	90
Gate Types	90
Pulse Output Types and Duty Cycles	91
Counter/Timer Operation Modes	91
Event Counting	92
Up/Down Counting	92
Frequency Measurement	93
Edge-to-Edge Measurement	93
Continuous Edge-to-Edge Measurement	94
Rate Generation	94
One-Shot	95
Repetitive One-Shot	96
Chapter 6: Supported Device Driver Capabilities.....	97
Data Flow and Operation Options.....	99
Buffering	100
Triggered Scan Mode.....	100
Data Encoding.....	100
Channels	101
Gain	101
Ranges	102
Resolution	102
Current and Resistance Support	102
Thermocouple, RTD, and Thermistor Support	103
IEPE Support.....	104
Bridge and Strain Gage Support	104
Start Triggers.....	105
Reference Triggers	105
Clocks.....	106

Counter/Timers	107
Tachometers.....	108
Chapter 7: Troubleshooting	109
General Checklist	110
Technical Support	112
If Your Module Needs Factory Service	113
Chapter 8: Calibration	115
Using the Calibration Utility	117
Calibrating the Analog Input Subsystem	118
Connecting a Precision Voltage Source	118
Using the Auto-Calibration Procedure	118
Using the Manual Calibration Procedure	118
Calibrating the Analog Output Subsystem	120
Appendix A: Specifications	121
Analog Input Specifications	122
Analog Output Specifications.....	124
Digital Input and Digital Output Specifications	125
Counter/Timer Specifications	126
External Trigger Specifications.....	127
Internal Clock Specifications	128
External Clock Specifications	129
Power, Physical, and Environment Specifications.....	130
Connector Specifications.....	131
Regulatory Specifications	132
Appendix B: Connector Pin Assignments	133
DT9818-OEM and DT9818-32-OEM Pin Assignments.....	135
Connector J1 on the Module	135
Connector J2 on the Module	136
Connector J3 on the Module	138
EP353 Accessory Panel Pin Assignments.....	140
Connector J1 on the EP353 Panel	140
Connector J2 on the EP353 Panel	141
EP355 Screw Terminal Assignments	143
EP355 Screw Terminal Assignments when Attached to Connector J2 on the Module	144
EP355 Screw Terminal Assignments when Attached to Connector J3 on the Module	146

EP356 Accessory Panel Pin Assignments 148

 Connector J1 on the EP356 Panel 148

 Connector J2 on the EP356 Panel 149

Appendix C: BNC and STP Box Connections 151

 Wiring to the BNC Connection Box 152

 Wiring Signals to the BNC Connectors 153

 Connecting Single-Ended Analog Inputs 154

 Connecting Pseudo-Differential Analog Inputs 154

 Connecting Differential Analog Inputs 155

 Connecting Analog Output Signals 155

 Wiring Signals to the D-Sub Connectors 156

 Analog Input Connector 156

 Digital In/Out Connector 157

 C/T, DAC, Clk, Trig Connector 158

 Wiring to the STP Connection Box 159

 Screw Terminal Block TB1 160

 Screw Terminal Block TB2 161

 Screw Terminal Block TB3 162

 Screw Terminal Block TB4 163

 Screw Terminal Block TB5 164

 Screw Terminal Block TB6 165

 Screw Terminal Block TB7 166

Index 167

About this Manual

This manual describes how to install and set up your DT9818 module and device driver, and verify that your module is working properly.

This manual also describes the features of the DT9818 module, the capabilities of the DT9818 Device Driver, and how to program the DT9818 module using the DT-Open Layers for .NET Class Library™ software. Troubleshooting information is also provided.

Note: For more information on the class library, refer to the *DT-Open Layers for .NET Class Library User's Manual*. If you are using the DataAcq SDK or a software application to program your device, refer to the documentation for that software for more information.

Intended Audience

This document is intended for engineers, scientists, technicians, or others responsible for using and/or programming the DT9818 module for data acquisition operations in the Microsoft® Windows® XP, Windows Vista®, Windows 7, or Windows 8 operating system. It is assumed that you have some familiarity with data acquisition principles and that you understand your application.

Note: The DT9818 is available in a board-level OEM configuration that you can install in your own custom application (DT9818-OEM or DT9818-32-OEM) or in a metal BNC connection box (DT9818-8DI-BCN or DT9818-16SE-BNC). If the information in this manual applies to all versions of the module, the manual uses the product name "DT9818 module." Otherwise, the specific product name is mentioned.

How this Manual is Organized

This manual is organized as follows:

- [Chapter 1, "Overview,"](#) describes the major features of the DT9818 module, as well as the supported software and accessories for the module.
- [Chapter 2, "Setting Up and Installing the Module,"](#) describes how to install a DT9818 module, how to apply power to the module, and how to configure the device driver.
- [Chapter 3, "Wiring Signals,"](#) describes how to wire signals to a DT9818 module.
- [Chapter 4, "Verifying the Operation of a Module,"](#) describes how to verify the operation of the DT9818 module with the Quick DataAcq application.
- [Chapter 5, "Principles of Operation,"](#) describes all of the features of the DT9818 module and how to use them in your application.

- [Chapter 6, “Supported Device Driver Capabilities,”](#) lists the data acquisition subsystems and the associated features accessible using the DT9818 Device Driver.
- [Chapter 7, “Troubleshooting,”](#) provides information that you can use to resolve problems with the DT9818 module and device driver, should they occur.
- [Chapter 8, “Calibration,”](#) describes how to calibrate the analog I/O circuitry of the DT9818 module.
- [Appendix A, “Specifications,”](#) lists the specifications of the DT9818 module.
- [Appendix B, “Connector Pin Assignments,”](#) lists the pin assignments for the connectors on the DT9818 and on the supported accessory panels.
- [Appendix C, “BNC and STP Box Connections,”](#) describes how to wire signals to the optional BNC connection box and lists the pin assignments for the connectors on the BNC connection box.
- An index completes this manual.

Conventions Used in this Manual

The following conventions are used in this manual:

- Notes provide useful information or information that requires special emphasis, cautions provide information to help you avoid losing data or damaging your equipment, and warnings provide information to help you avoid catastrophic damage to yourself or your equipment.
- Items that you select or type are shown in **bold**.

Related Information

Refer to the following documents for more information on using the DT9818 module:

- *Benefits of the Universal Serial Bus for Data Acquisition*. This white paper describes why USB is an attractive alternative for data acquisition. It is available on the Data Translation web site (www.datatranslation.com).
- *QuickDAQ User's Manual (UM-24774)*. This manual describes how to create a QuickDAQ application to acquire and analyze data from DT-Open Layers data acquisition devices.
- *DT-Open Layers for .NET User's Manual (UM-22161)*. For programmers who are developing their own application programs using Visual C# or Visual Basic .NET, this manual describes how to use the DT-Open Layers for .NET Class Library to access the capabilities of Data Translation data acquisition devices.
- *DataAcq SDK User's Manual (UM-18326)*. For programmers who are developing their own application programs using the Microsoft C compiler, this manual describes how to use the DT-Open Layers DataAcq SDK™ to access the capabilities of Data Translation data acquisition devices.

- *DAQ Adaptor for MATLAB (UM-22024)*. This document describes how to use Data Translation's DAQ Adaptor to provide an interface between the MATLAB Data Acquisition subsystem from The MathWorks and Data Translation's DT-Open Layers architecture.
- *LV-Link Online Help*. This help file describes how to use LV-Link™ with the LabVIEW™ graphical programming language to access the capabilities of Data Translation data acquisition devices.
- Microsoft Windows XP, Windows Vista, Windows 7, or Windows 8 documentation.
- USB web site (<http://www.usb.org>).

Where To Get Help

Should you run into problems installing or using a DT9818 module, the Data Translation Technical Support Department is available to provide technical assistance. Refer to [Chapter 7 starting on page 109](#) for more information. If you are outside the United States or Canada, call your local distributor, whose number is listed on our web site (www.datatranslation.com).



Overview

DT9818 Hardware Features	16
Supported Software	18
Accessories	21
Getting Started Procedure.....	22

DT9818 Hardware Features

The DT9818, shown in [Figure 1](#), is a high-performance, multifunction data acquisition module for the USB (Ver. 2.0 or Ver. 1.1) bus.

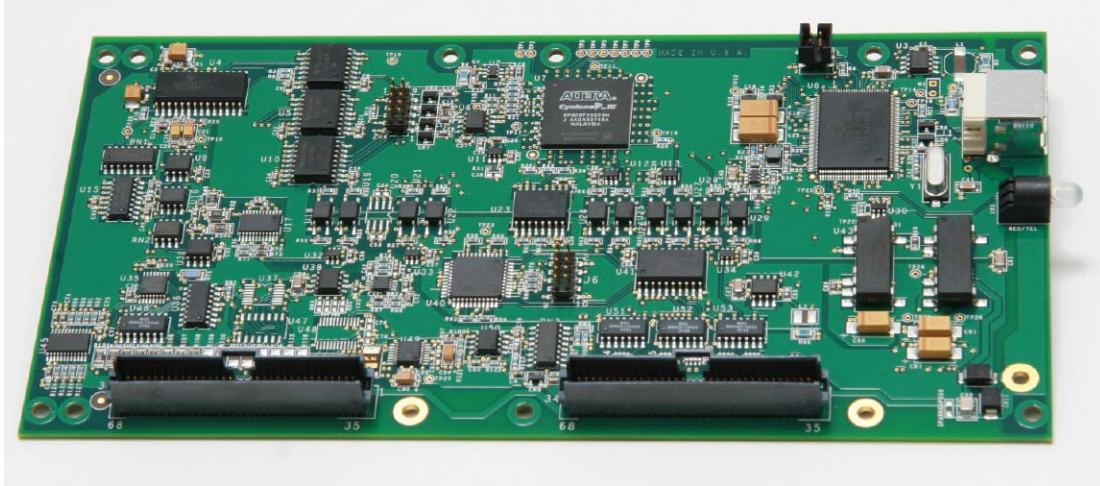


Figure 1: DT9818 Module (DT9818-OEM Module Shown)

The key hardware features of the DT9818 module are as follows:

- Available in different form factors, as shown in [Table 1](#). The standard version of the module is provided as a board-level OEM version that you can install in your own custom application. Optionally, the module is available in metal BNC or screw terminal (STP) connection box.

Table 1: Summary of DT9818 Modules

Module	Analog Inputs	Packaging
DT9818-OEM	16 single-ended or 8 differential	board-level version
DT9818-32-OEM	32 single-ended or 16 differential	board-level version
DT9818-16SE-BNC	16 single-ended	BNC box
DT9818-8DI-BNC	8 differential	BNC box
DT9818-32-STP	32 single-ended or 16 differential	Screw terminal (STP) box

- Simultaneous operation of analog input, analog output, digital I/O, and counter/timer subsystems.

- Analog input subsystem:
 - 16-bit A/D converter
 - Throughput rate up to 150 kSamples/s
 - Up to 32 single-ended or 16 differential analog inputs depending on the model selected
 - Programmable gain of 1, 2, 4, or 8 provides input ranges of ± 10 , ± 5 , ± 2.5 , and ± 1.25 V
 - 1024-location channel-gain list
 - Single-value and continuous analog input operations
You can read a single analog input channel, or read multiple analog input channels, the digital input port, and/or the counter/timer channels through the channel-gain list.
 - Triggered scan mode
You can cycle through the analog input channel list using triggered scan mode, allowing you to scan the channel-gain list up to 256 times.
- Analog output subsystem:
 - Two 16-bit, streaming D/A converters
 - Output rate up to 150 kSamples/s
 - Output range of ± 10 V
 - Output channel list
 - Single-value and continuous analog output operations
You can update a single analog output channel, or continuously update both analog output channels and the digital output port through the output channel list.
 - Waveform generation mode
You can continuously output a waveform of up to 16K samples to the output channels using waveform generation mode.
- Digital I/O subsystem:
 - One digital input port, consisting of 8 digital input lines
You can read the value of the digital input port using the analog input channel-gain list.
 - One digital output port, consisting of 8 digital output lines
You can update the value of the digital output port using the output channel list.
- Two 32-bit counter/timer (C/T) channels that perform event counting, up/down counting, frequency measurement, edge-to-edge measurement, continuous edge-to-edge measurement, continuous pulse output, one-shot, and repetitive one-shot operations.
You can read the value of the C/T channels using the analog input channel-gain list.
- Internal or external clock source for pacing analog input and analog output operations with a maximum frequency of 150 kHz
- Internal or external trigger source for starting analog input and analog output operations
- 500 V galvanic isolation barrier that prevents ground loops to maximize analog signal integrity and protect your computer

Supported Software

The following software is available for use with the DT9818 module and is on the Data Acquisition OMNI CD:

- **DT9818 Device Driver** – The device driver allows you to use a DT9818 module with any of the supported software packages or utilities.
- **Quick DataAcq application** – The Quick DataAcq application provides a quick way to get up and running using a DT9818 module. Using this application, you can verify key features of the modules, display data on the screen, and save data to disk.
- **QuickDAQ Base Version** – The base version of QuickDAQ is free-of-charge and allows you to acquire and analyze data from all Data Translation USB and Ethernet devices, except the DT9841 Series, DT9817, DT9835, and DT9853/54. Using the base version of QuickDAQ, you can perform the following functions:
 - Discover and select your devices.
 - Configure all input channel settings for the attached sensors.
 - Load/save multiple hardware configurations.
 - Generate output stimuli (fixed waveforms, swept sine waves, or noise signals).
 - On each supported data acquisition device, acquire data from all channels supported in the input channel list.
 - Choose to acquire data continuously or for a specified duration.
 - Choose software or triggered acquisition.
 - Log acquired data to disk in an .hpf file.
 - Display acquired data during acquisition in either a digital display using the Channel Display window or as a waveform in the Channel Plot window.
 - Choose linear or logarithmic scaling for the horizontal and vertical axes.
 - View statistics about the acquired data, including the minimum, maximum, delta, and mean values and the standard deviation in the Statistics window.
 - Export time data to a .csv or .txt file; you can open the recorded data in Microsoft Excel® for further analysis.
 - Read a previously recorded .hpf data file.
 - Customize many aspects of the acquisition, display, and recording functions to suit your needs, including the acquisition duration, sampling frequency, trigger settings, filter type, and temperature units to use.
- **QuickDAQ FFT Analysis Option** – When enabled with a purchased license key, the QuickDAQ FFT Analysis option includes all the features of the QuickDAQ Base version plus basic FFT analysis features, including the following:
 - The ability to switch between the Data Logger time-based interface and the FFT Analyzer block/average-based interface.
 - Supports software, freerun, or triggered acquisition with accept and reject controls for impact testing applications.

- Allows you to perform single-channel FFT (Fast Fourier Transform) operations, including AutoSpectrum, Spectrum, and Power Spectral Density, on the acquired analog input data. You can configure a number of parameters for the FFT, including the FFT size, windowing type, averaging type, integration type, and so on.
- Allows you to display frequency-domain data as amplitude or phase.
- Supports dB or linear scaling with RMS (root mean squared), peak, and peak-to-peak scaling options
- Supports linear or exponential averaging with RMS, vector, and peak hold averaging options.
- Supports windowed time channels.
- Supports the following response window types: Hanning, Hamming, Bartlett, Blackman, Blackman Harris, and Flat top.
- Supports the ability to lock the waveform output to the analysis frame time.
- Allows you to configure and view dynamic performance statistics, including the input below full-scale (IBF), total harmonic distortion (THD), spurious free dynamic range (SFDR), signal-to-noise and distortion ratio (SINAD), signal-to-noise ratio (SNR), and the effective number of bits (ENOB), for selected time-domain channels in the Statistics window.
- Supports digital IIR (infinite impulse response) filters
- **QuickDAQ Advanced FFT Analysis Option** – When enabled with a purchased software license, the QuickDAQ Advanced FFT Analysis option includes all the features of the QuickDAQ Base version with the FFT Analysis option plus advanced FFT analysis features, including the following:
 - Allows you to designate a channel as a Reference or Response channel.
 - Allows you to perform two-channel FFT analysis functions, including Frequency Response Functions (Inertance, Mobility, Compliance, Apparent Mass, Impedance, Dynamic Stiffness, or custom FRF) with H1, H2, or H3 estimator types, Cross-Spectrum, Cross Power Spectral Density, Coherence, and Coherent Output Power.
 - Supports the Exponential response window type.
 - Supports the following reference window types: Hanning, Hamming, Bartlett, Blackman, Blackman Harris, FlatTop, Exponential, Force, and Cosine Taper windows.
 - Supports real, imaginary, and Nyquist display functions.
 - Allows you to save data in the .uff file format.
- **DT-Open Layers for .NET Class Library** – Use this class library if you want to use Visual C# or Visual Basic for .NET to develop your own application software for a DT9818 module using Visual Studio 2003-2012; the class library complies with the DT-Open Layers standard.

- **DataAcq SDK** – Use the Data Acq SDK if you want to use Visual Studio 6.0 and Microsoft C or C++ to develop your own application software for a DT9818 module using Windows XP, Windows Vista, Windows 7, or Windows 8; the DataAcq SDK complies with the DT-Open Layers standard.
- **DAQ Adaptor for MATLAB** – Data Translation’s DAQ Adaptor provides an interface between the MATLAB Data Acquisition (DAQ) subsystem from The MathWorks and Data Translation’s DT-Open Layers architecture.
- **LV-Link** – An evaluation version of LV-Link is provided on the OMNI CD. Use this software package if you want to use the LabVIEW graphical programming language to access the capabilities of a DT9818 module.

Refer to the Data Translation web site (www.datatranslation.com) for information about selecting the right software package for your needs.

Accessories

You can purchase the following optional items from Data Translation for use with the DT9818 module:

- **EP353** – Accessory panel that provides one 37-pin, D-sub connector and one 26-pin connector for attaching analog input signals.
- **EP355** – Screw terminal panel that provides 14-position screw terminal blocks for attaching analog input, analog output, counter/timer, digital I/O, trigger, and clock signals.
- **EP356** – Accessory panel that provides two 37-pin, D-sub connectors for attaching digital I/O, analog output, counter/timer, trigger, and clock signals.
- **STP37** – Screw terminal panel that provides 37 screw terminal blocks for attaching analog output, counter/timer, digital I/O, trigger, and clock signals.
- **EP333** – 2-meter shielded cable with two 37-pin connectors that connect an EP356 accessory panel to an STP37 screw terminal panel.
- **EP360** – 2-meter shielded cable with two 37-pin connectors that connect an EP353 accessory panel to an STP37 screw terminal panel.

Getting Started Procedure

The flow diagram shown in [Figure 2](#) illustrates the steps needed to get started using the DT9818 module. This diagram is repeated in each getting started chapter; the shaded area in the diagram shows you where you are in the getting started procedure.

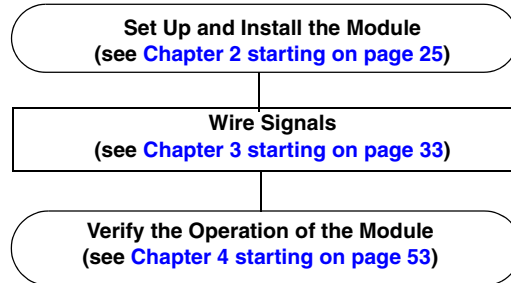



Figure 2: Getting Started Flow Diagram

Part 1: Getting Started



Setting Up and Installing the Module

Unpacking	27
System Requirements	28
Attaching Modules to the Computer	29
Configuring the DT9818 Device Driver	32

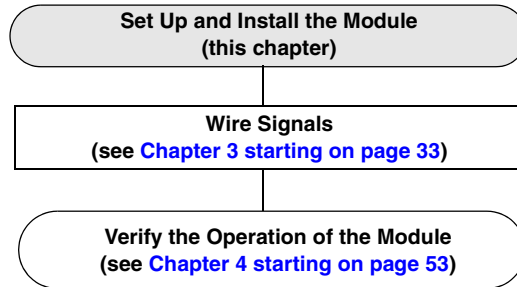

Note: The DT9818 module is factory-calibrated. If you decide that you want to recalibrate the analog input or analog output circuitry, refer to the instructions in [Chapter 8 starting on page 115](#).

Unpacking

Open the shipping box and verify that the following items are present:

- DT9818 module
- Data Acquisition OMNI CD

If an item is missing or damaged, contact Data Translation. If you are in the United States, call the Customer Service Department at (508) 481-3700. An application engineer will guide you through the appropriate steps for replacing missing or damaged items. If you are located outside the United States, call your local distributor, listed on Data Translation's web site (www.datatranslation.com).

Once you have unpacked your module, attach the module to the computer, as described in the next section.

System Requirements

For reliable operation, ensure that your computer meets the following system requirements:

- Processor: Pentium 4/M or equivalent
- RAM: 1 GB
- Screen Resolution: 1024 x 768 pixels
- Operating System: Windows 8, Windows 7, Windows Vista (32- and 64-bit), or Windows XP SP3 (32-bit)
- Disk Space: 4 GB

Attaching Modules to the Computer

This section describes how to attach DT9818 modules to the host computer.

Note: Most computers have several USB ports that allow direct connection to USB devices. If your application requires more DT9818 modules than you have USB ports for, you can expand the number of USB devices attached to a single USB port by using expansion hubs. For more information, refer to [page 30](#).

You can unplug a module, then plug it in again, if you wish, without causing damage. This process is called hot-swapping. Your application may take a few seconds to recognize a module once it is plugged back in.

You must install the device driver before connecting your DT9818 module(s) to the host computer.

Connecting Directly to the USB Ports

To connect a DT9818 module directly to a USB port on your computer, do the following:

1. Make sure that you have attached a power supply to the module.
2. Attach one end of the USB cable to the USB port on the module, as shown in [Figure 3](#).

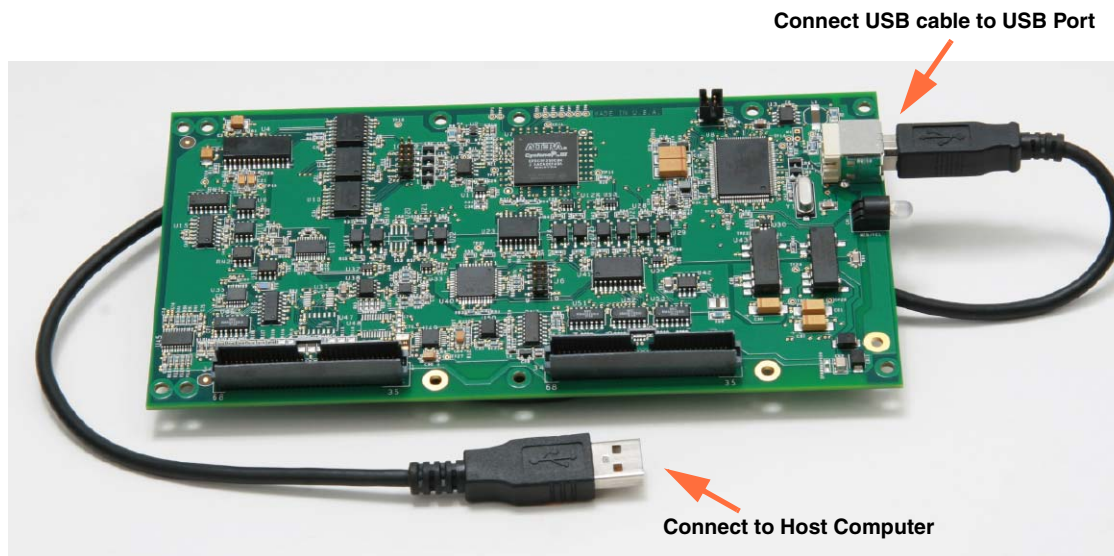


Figure 3: Attaching the Module to the Host Computer

3. Attach the other end of the USB cable to one of the USB ports on the host computer. *The operating system automatically detects the USB module and starts the Found New Hardware wizard.*

4. For Windows Vista:

- a. Click **Locate and install driver software (recommended)**.
The popup message "Windows needs your permission to continue" appears.
- b. Click **Continue**.
The Windows Security dialog box appears.
- c. Click **Install this driver software anyway**.
The LED on the module turns green.

For Windows XP:

- a. Click **Next** and/or **Finish** as required in the wizard.
Once the firmware is loaded, the wizard restarts to initiate the firmware to accept commands.
- b. Click **Next** and/or **Finish** again.
The LED on the module turns green.

Note: Windows 7 and Windows 8 find the device automatically.

5. Repeat these steps to attach another DT9818 module to the host computer, if desired.

Connecting to an Expansion Hub

Expansion hubs are powered by their own external power supply. The practical number of DT9818 modules that you can connect to a single USB port depends on the throughput you want to achieve.

To connect multiple DT9818 modules to an expansion hub, do the following:

1. Make sure that you have attached a power supply to the module.
2. Attach one end of the USB cable to the module and the other end of the USB cable to an expansion hub.
3. Connect the power supply for the expansion hub to an external power supply.
4. Connect the expansion hub to the USB port on the host computer using another USB cable.

The operating system automatically detects the USB module and starts the Found New Hardware wizard.

5. For Windows Vista:

- a. Click **Locate and install driver software (recommended)**.
The popup message "Windows needs your permission to continue" appears.
- b. Click **Continue**.
The Windows Security dialog box appears.
- c. Click **Install this driver software anyway**.
The LED on the module turns green.

For Windows XP:

- a. Click **Next** and/or **Finish** as required in the wizard.
Once the firmware is loaded, the wizard restarts to initiate the firmware to accept commands.
- b. Click **Next** and/or **Finish** again.
The LED on the module turns green.

Note: Windows 7 and Windows 8 find the device automatically.

6. Repeat these steps until you have attached the number of expansion hubs and modules that you require. Refer to [Figure 4](#).
The operating system automatically detects the USB devices as they are installed.

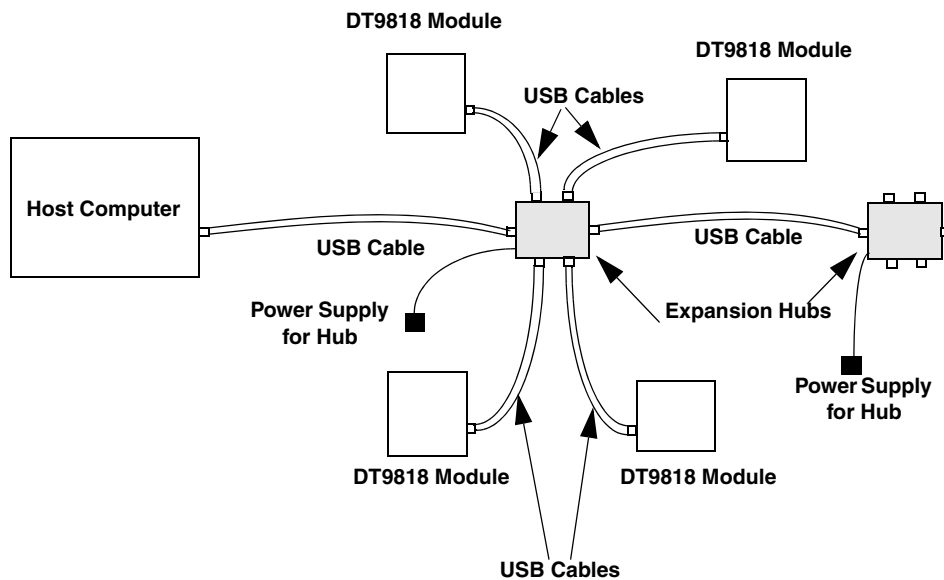


Figure 4: Attaching Multiple DT9818 Modules Using Expansion Hubs

Configuring the DT9818 Device Driver

To configure the device driver for the DT9818 module, do the following:


1. If you have not already done so, power up the host computer and all peripherals.
2. From the Windows Start menu, select **Settings | Control Panel**.
3. From the Control Panel, double-click **Open Layers Control Panel**.
The Data Acquisition Control Panel dialog box appears.
4. Click the DT9818 module that you want to configure, and then click **Advanced**.
The Configurable Board Options dialog box appears.
5. If you are using differential analog input channels, we recommend that you select the **10k Ohm A/D Input Termination Resistor** checkbox (the default setting). This ensures that 10 k Ω of bias return termination resistance is used for the analog input channels. Bias return termination resistance is particularly useful when your differential source is floating. If you are using single-ended analog input channels, uncheck this box.
6. To use USB 2.0, select the **USB 2.0** checkbox. If this checkbox is not selected, USB 1.1 is used instead.
7. Click **OK**.
8. If you want to rename the module, click **Edit Name**, enter a new name for the module, and then click **OK**. The name is used to identify the module in all subsequent applications.
9. Repeat steps 4 to 8 for the other modules that you want to configure.
10. When you are finished configuring the modules, click **Close**.

Continue with the instructions on wiring in [Chapter 3 starting on page 33](#).



Wiring Signals

Preparing to Wire Signals	35
Connecting Analog Input Signals	39
Connecting Analog Output Signals	44
Connecting Digital I/O Signals	45
Connecting Counter/Timer Signals	46

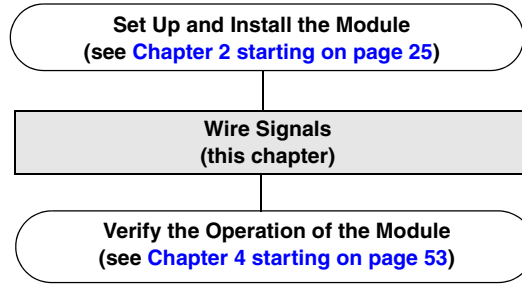

Preparing to Wire Signals

This section provides recommendations and information about wiring signals to the DT9818-OEM and DT9818-32-OEM modules. For information about connecting signals to the BNC box or the screw terminal (STP) box, refer to [Appendix C](#) starting on [page 151](#).

Wiring Recommendations

Keep the following recommendations in mind when wiring signals to the DT9818-OEM or DT9818-32-OEM module:

- Follow standard ESD procedures when wiring signals to the module.
- Use individually shielded twisted-pair wire (size 14 to 26 AWG) in highly noisy electrical environments.
- Separate power and signal lines by using physically different wiring paths or conduits.
- To avoid noise, do not locate the module and cabling next to sources that produce high electromagnetic fields, such as large electric motors, power lines, solenoids, and electric arcs, unless the signals are enclosed in a mumetal shield.
- Prevent electrostatic discharge to the I/O while the box is operational.
- Connect all unused analog input channels to analog ground.

Wiring to the DT9818-OEM or DT9818-32-OEM Module

[Figure 5](#) shows the I/O connectors on the DT9818-OEM and DT9818-32-OEM modules.

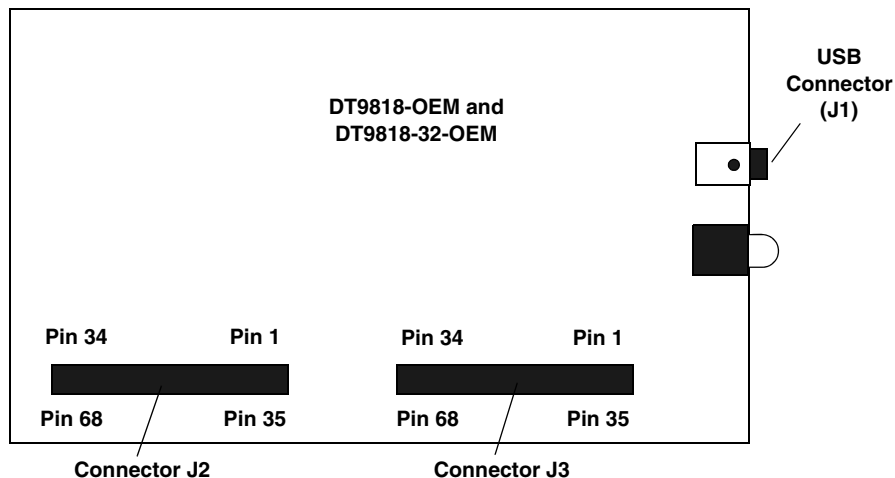


Figure 5: Connectors on the DT9818-OEM and DT9818-32-OEM Modules

To connect signals to the DT9818-OEM or DT9818-32-OEM module, you can use the following wiring methods:

- Build your own connector panel and cable to connectors J2 and J3. See [page 131](#) for connector specifications and [page 135](#) for connector pin assignments.
- **EP353** – This accessory panel plugs into connector J2 of the module. It provides one 37-pin, D-sub connector and one 26-pin connector for attaching analog input signals.

Refer to [page 36](#) for more information about attaching the EP353 to the module; refer to [page 140](#) for connector pin assignments.

- **EP355** – When plugged into connector J2 of the module, this screw terminal panel provides 14-position screw terminal blocks for attaching analog input signals. When plugged into connector J3 of the module, this screw terminal panel provides 14-position screw terminal blocks for attaching analog output, counter/timer, digital I/O, trigger, and clock signals.

Refer to [page 37](#) for more information about attaching the EP355 to the module; refer to [page 143](#) for screw terminal assignments.

- **EP356** – This accessory panel plugs into connector J3 of the module. It provides two 37-pin, D-sub connectors. Use connector J1 of the EP356 to attach digital I/O signals, and use connector J2 of the EP356 to attach analog output, counter/timer, trigger, and clock signals.

Refer to [page 38](#) for more information about attaching the EP356 accessory panel to the module; refer to [page 148](#) for connector pin assignments.

Wiring to an EP353 Accessory Panel

To attach an EP353 accessory panel to the DT9818-OEM or DT9818-32-OEM module, plug the EP353 panel into connector J2 on the module, as shown in [Figure 6](#).

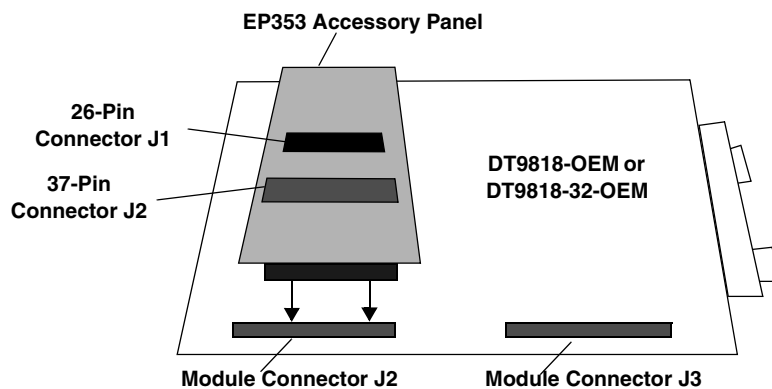


Figure 6: Connecting the EP353 Accessory Panel to Connector J2 on the DT9818-OEM or DT9818-32-OEM Module

You can access the pins on connector J1 of the EP353 panel by building your own cable/panel.

You can access the pins on connector J2 of the EP353 panel either by using the EP360 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel.

Refer to [page 140](#) for connector pin assignments on the EP353 panel.

Wiring to an EP355 Screw Terminal Panel

Attach the EP355 screw terminal panel to connector J2 on the DT9818-OEM or DT9818-32-OEM module when you want to access the analog input signals.

Attach the EP355 screw terminal panel to connector J3 on the DT9818-OEM or DT9818-32-OEM module when you want to access the analog output, counter/timer, digital I/O, trigger, and clock signals.

[Figure 7](#) shows how to attach the EP355 to the module. Refer to [page 143](#) for screw terminal assignments.

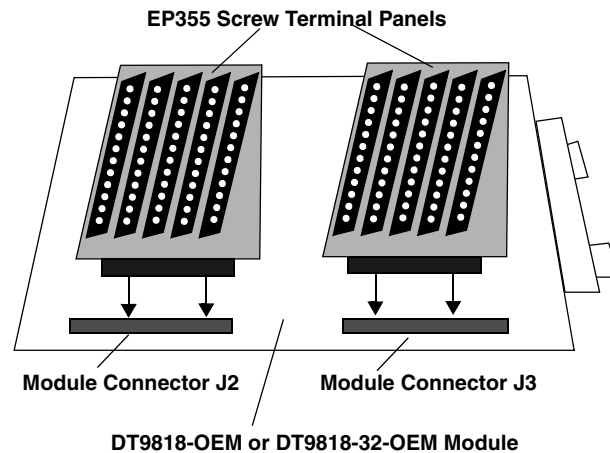


Figure 7: Connecting EP355 Panels to Connector J2 and Connector J3 on the DT9818-OEM or DT9818-32-OEM Module

Wiring to an EP356 Accessory Panel

To attach an EP356 accessory panel to the DT9818-OEM or DT9818-32-OEM module, plug the EP356 panel into connector J3 on the module, as shown in [Figure 8](#).

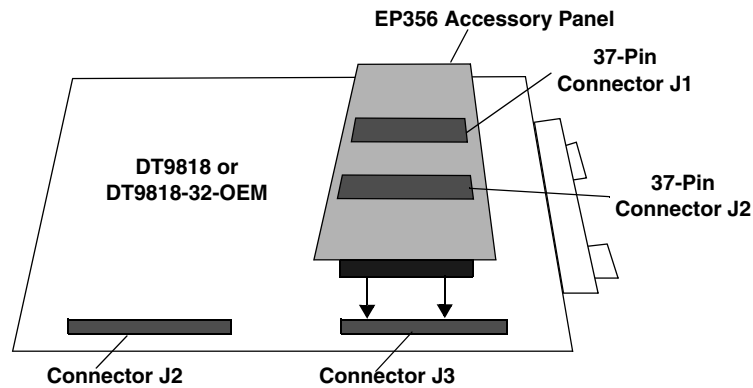


Figure 8: Connecting the EP356 Panel to Connector J3 on the DT9818-OEM or DT9818-32-OEM Module

Use connector J1 on the EP356 accessory panel to attach digital I/O signals. Use connector J2 on the EP356 accessory panel to attach analog output, counter/timer, trigger, and clock signals.

You can access the pins on connector J1 or J2 either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel.

Refer to [page 148](#) for connector pin assignments on the EP356 panel.

Connecting Analog Input Signals

You can connect analog input signals to a DT9818-OEM or DT9818-32-OEM module in the following configurations:


- **Single-ended** – Choose this configuration when you want to measure high-level signals, noise is not significant, the source of the input is close to the module, and all the input signals are referred to the same common ground.
- **Pseudo-Differential** – Choose this configuration when noise or common-mode voltage (the difference between the ground potentials of the signal source and the ground of the module or between the grounds of other signals) exists and the differential configuration is not suitable for your application. This option provides less noise rejection than the differential configuration; however, all analog input channels are available on the module.
- **Differential** – Choose this configuration when you want to measure low-level signals (less than 1 V), you are using an A/D converter with high resolution (greater than 12 bits), noise is a significant part of the signal, or common-mode voltage exists.

This section describes how to connect single-ended, pseudo-differential, and differential voltage inputs, as well as current loops to a DT9818-OEM or DT9818-32-OEM module.

Connecting Single-Ended Voltage Inputs

If you are using single-ended inputs, set up the software so that bias return resistance is not used. For more information, refer to [page 32](#).

[Figure 9](#) shows how to connect single-ended voltage inputs (channels 0, 1, and 8, in this case) to a DT9818-OEM or DT9818-32-OEM module.

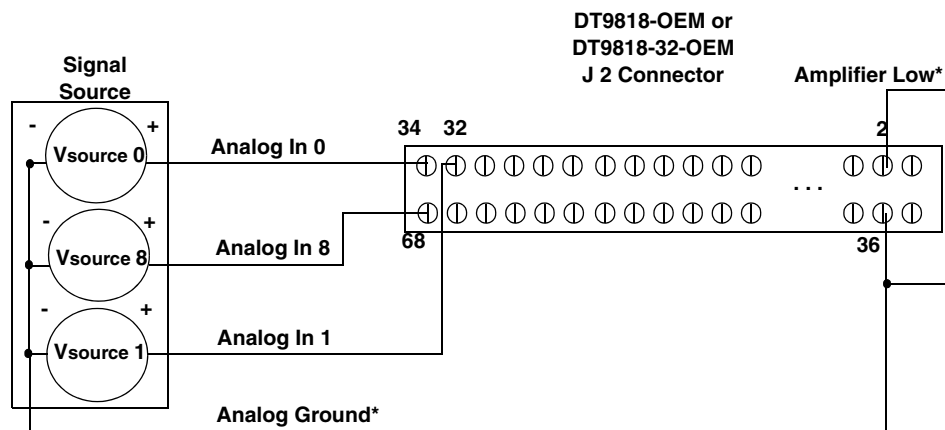

*Ensure that you connect Analog Ground to Amplifier Low.

Figure 9: Connecting Single-Ended Voltage Inputs (Shown for Channels 0, 1, and 8) to the DT9818-OEM or DT9818-32-OEM Module

Connecting Pseudo-Differential Voltage Inputs

Figure 10 shows how to connect pseudo-differential voltage inputs (channels 0, 1, and 8, in this case) to a DT9818-OEM or DT9818-32-OEM module.

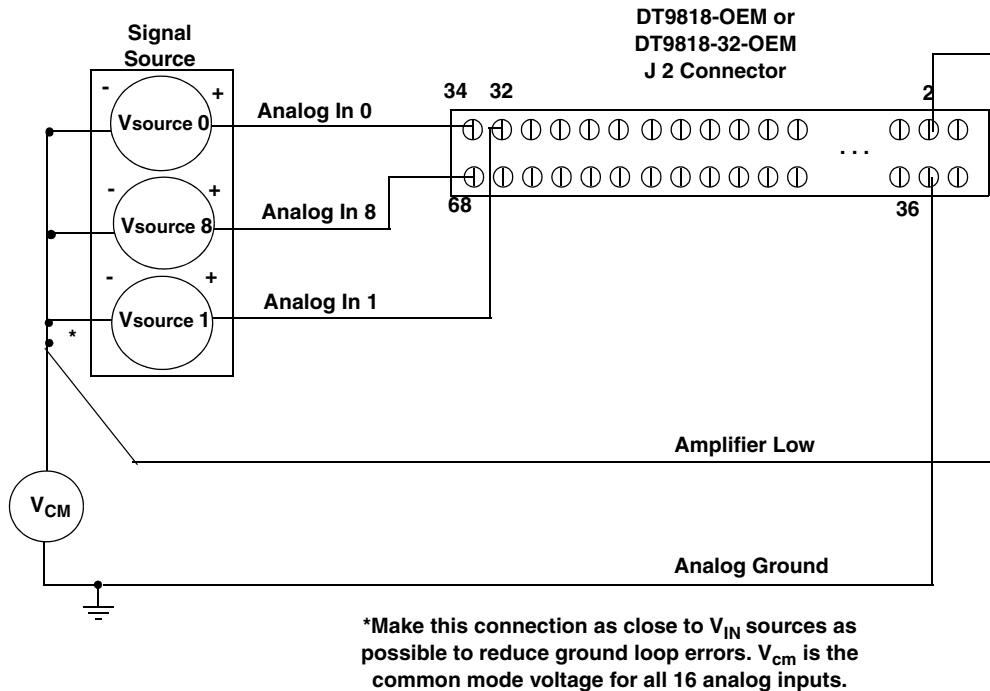


Figure 10: Connecting Pseudo-Differential Voltage Inputs (Shown for Channels 0, 1, and 8) to the DT9818-OEM or DT9818-32-OEM Module

Note: If you are using pseudo-differential inputs, set up the software so that bias return resistance is not used. For more information, refer to [page 32](#).

Connecting Differential Voltage Inputs


Figure 11A illustrates how to connect a floating signal source to a DT9818-OEM or DT9818-32-OEM module using differential inputs. (A floating signal source is a voltage source that has no connection with earth ground.)

Note: For floating signal sources, we recommend that you provide a bias return path for the differential channels by adding 10 k Ω of termination resistance from the low side of the channel to isolated analog ground.

For more information on configuring termination resistance, refer to [page 32](#).

Figure 11B illustrates how to connect a nonfloating signal source to a DT9818-OEM or DT9818-32-OEM module using differential inputs. In this case, the signal source itself provides the bias return path; therefore, you do not need to provide bias return resistance through software.

R_s is the signal source resistance while R_v is the resistance required to balance the bridge. Note that the negative side of the bridge supply must be returned to analog ground.

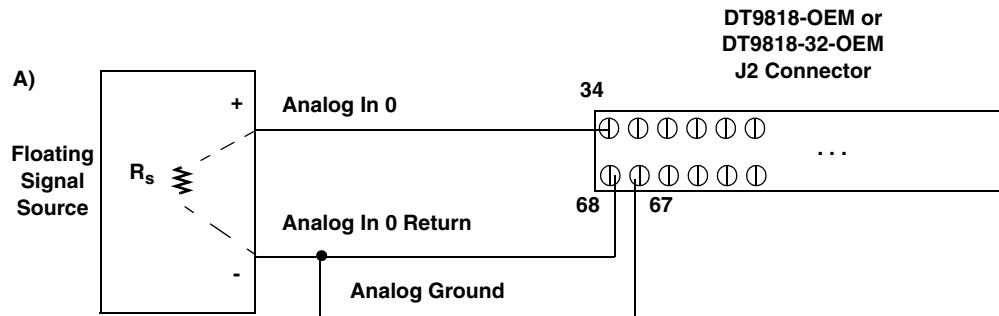

We recommend that you software-select 10 k Ω of resistance to connect the low side of channel 0 to analog ground (a physical resistor is not required). Refer to [page 32](#) for more information.


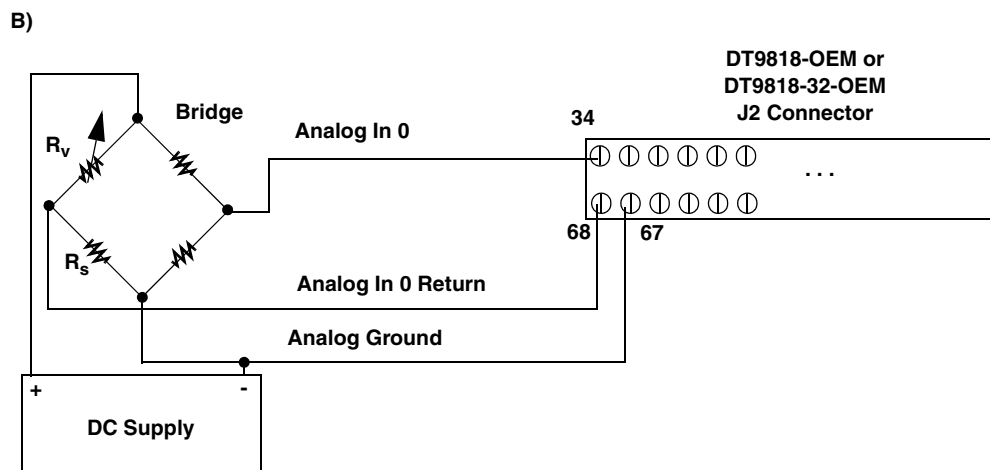


Figure 11: Connecting Differential Voltage Inputs (Shown for Channel 0) to a DT9818-OEM or DT9818-32-OEM Module

Note that since they measure the difference between the signals at the high (+) and low (-) inputs, differential connections usually cancel any common-mode voltages, leaving only the signal. However, if you are using a grounded signal source and ground loop problems arise, connect the differential signals to the DT9818-OEM or DT9818-32-OEM module as shown in [Figure 12](#). In this case, make sure that the low side of the signal (-) is connected to ground at the signal source, not at the module, and do not tie the two grounds together.

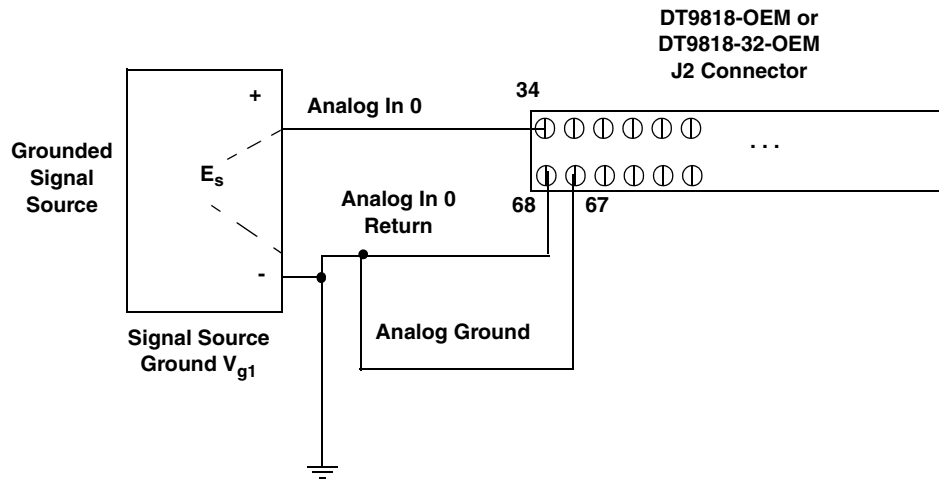


We recommend that you software-select $10\text{ k}\Omega$ of resistance to connect the low side of channel 0 to analog ground (a physical resistor is not required). Refer to [page 32](#) for more information.

Figure 12: Connecting Differential Voltage Inputs from a Grounded Signal Source (Shown for Channel 0) to a DT9818-OEM or DT9818-32-OEM Module

Connecting Current Loop Inputs

Figure 13 shows how to connect a current loop input (channel 0, in this case) to a DT9818-OEM or DT9818-32-OEM module.

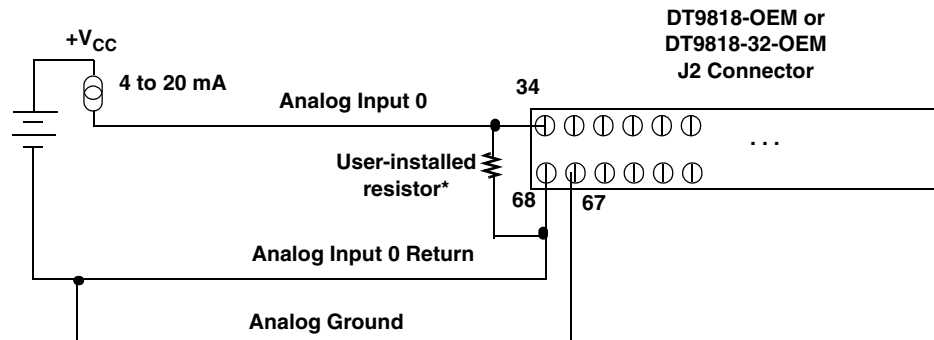

*The user-installed resistor connects the high side of the channel to the low side of the corresponding channel, thereby acting as a shunt. If, for example, you add a 250 Ω resistor, and then connect a 4 to 20 mA current loop input to channel 0, the input range is converted to 1 to 5 V.

We recommend that you software-select 10 k Ω of resistance to connect the low side of channel 0 to analog ground (a physical resistor is not required). Refer to [page 32](#) for more information.

Figure 13: Connecting Current Inputs (Shown for Channel 0) to a DT9818-OEM or DT9818-32-OEM Module

Note: If you are using current loop inputs, set up the software so that bias return resistance is used. For more information, refer to [page 32](#).

Connecting Analog Output Signals

Figure 14 shows how to connect an analog output voltage signal (channel 0, in this case) to a DT9818-OEM or DT9818-32-OEM module.

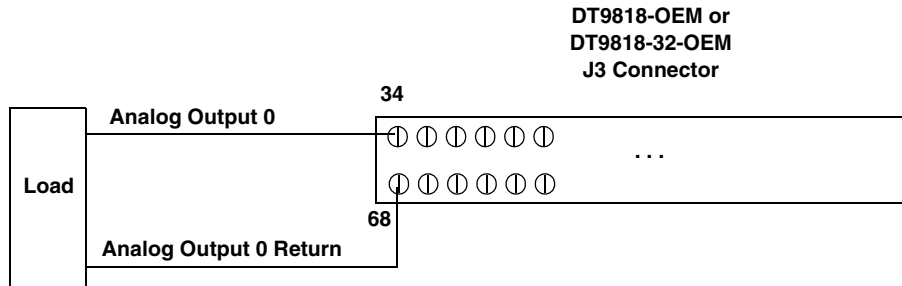


Figure 14: Connecting Analog Output Voltages (Shown for Channel 0) to a DT9818-OEM or DT9818-32-OEM Module

Connecting Digital I/O Signals

Figure 15 shows how to connect digital input signals (lines 0 and 1, Port A, in this case) to a DT9818-OEM or DT9818-32-OEM module.

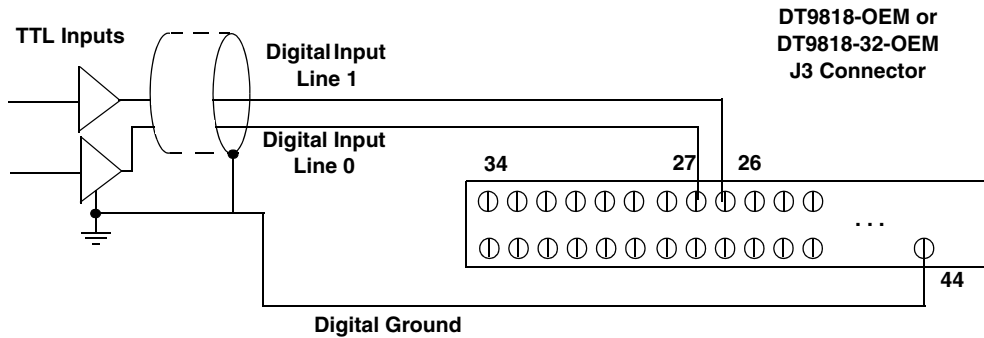


Figure 15: Connecting Digital Inputs (Shown for Lines 0 and 1) to the DT9818-OEM or DT9818-32-OEM Module

Figure 16 shows how to connect a digital output (line 0, Port B, in this case) to a DT9818-OEM or DT9818-32-OEM module.

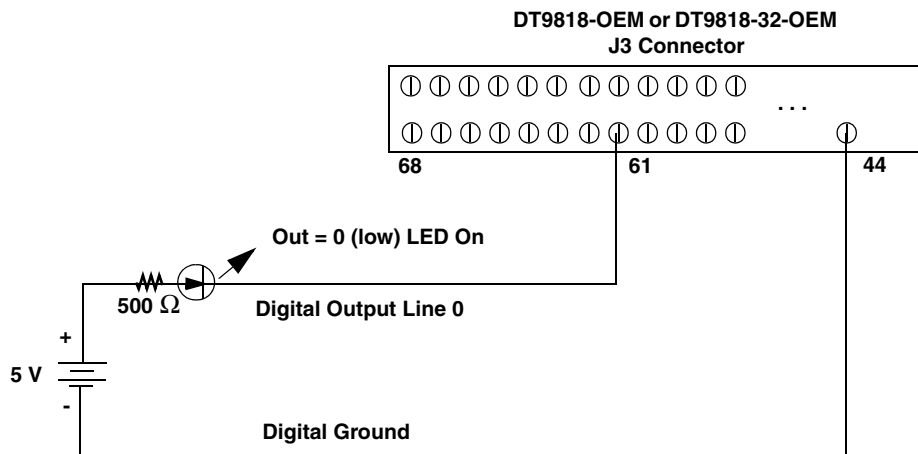


Figure 16: Connecting Digital Outputs (Shown for Line 0) to the DT9818-OEM or DT9818-32-OEM Module

Connecting Counter/Timer Signals

The DT9818-OEM and DT9818-32-OEM modules provide two, 32-bit counter/timer channels that you can use for the following operations:

- Event counting
- Up/down counting
- Frequency measurement
- Period/pulse width measurement
- Edge-to-edge measurement
- Continuous edge-to-edge measurement
- Pulse output (rate generation, one-shot, and repetitive one-shot)

This section describes how to connect counter/timer signals to perform these operations.

Event Counting

Figure 17 shows an example of connecting event counting signals to a DT9818-OEM or DT9818-32-OEM module using counter/timer 0. In this example, the counter counts the number of rising edges that occur on the C/T0 Clk In signal when the C/T0 Gate signal is in the active state (as specified by software). Refer to [page 92](#) for more information on event counting operations.

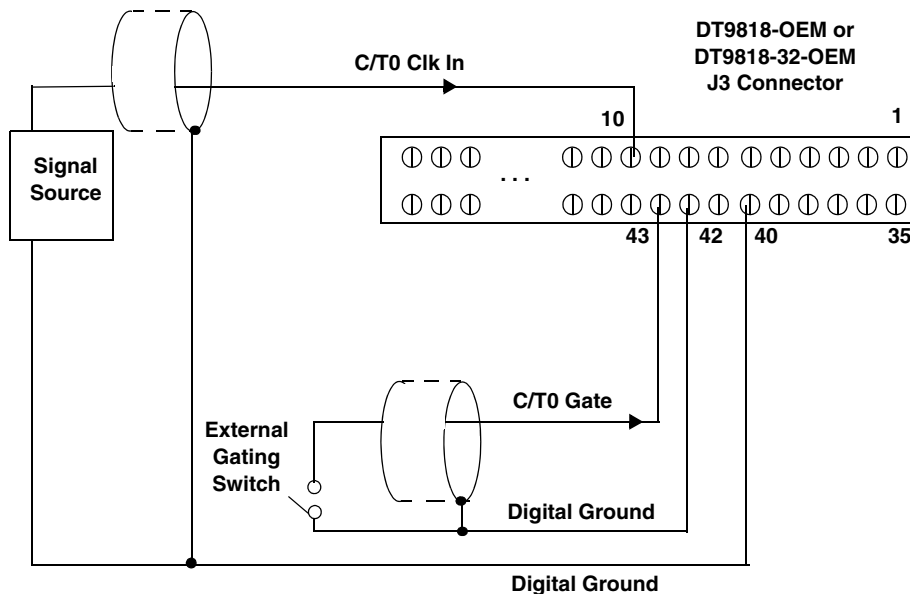


Figure 17: Connecting Counter/Timer Signals for an Event Counting Operation (Shown for C/T0 with an External Gate)

Figure 18 shows another example of connecting event counting signals to a DT9818-OEM or DT9818-32-OEM module using counter/timer 0. In this example, a software gate is used to start the event counting operation; the counter counts the number of rising edges that occur on the C/T0 Clk In signal when the operation starts.

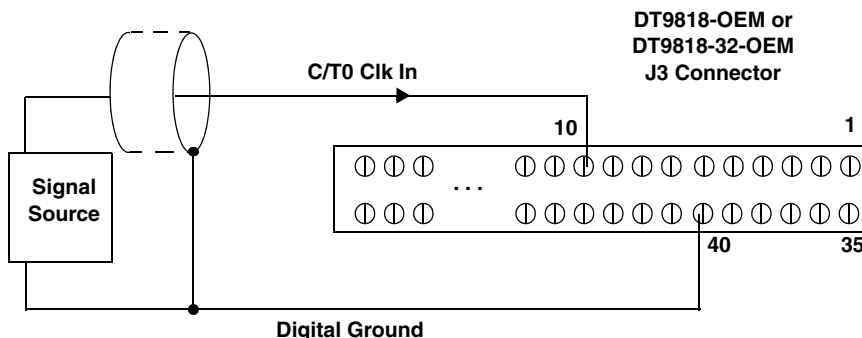


Figure 18: Connecting Counter/Timer Signals for an Event Counting Operation (Shown for C/T0 with a Software Gate)

Up/Down Counting

Figure 19 shows how to connect counter/timer signals to a DT9818-OEM or DT9818-32-OEM module to perform an up/down counting operation on counter/timer 0. In this example, the counter keeps track of the number of rising edges that occur on the C/T0 Clk In signal. The counter increments when the C/T0 Gate signal is high and decrements when the C/T0 Gate signal is low. Refer to [page 92](#) for more information on up/down counting operations.

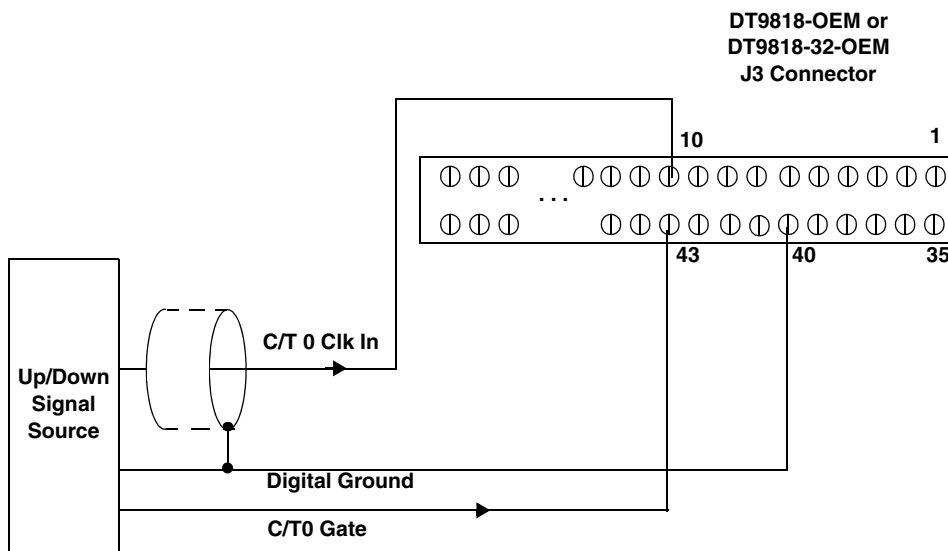


Figure 19: Connecting Counter/Timer Signals for an Up/Down Counting Operation (Shown for C/T0)

Frequency Measurement

One way to measure frequency is to connect a pulse of a known duration (such as a one-shot output of counter/timer 1) to the gate input signal of the counter.

Figure 20 shows how to connect counter/timer signals to the DT9818-OEM or DT9818-32-OEM module. In this case, the frequency of the C/T 0 Clk In signal is the number of counts divided by the period of the C/T0 Gate signal. Refer to [page 93](#) for more information on frequency measurement operations.

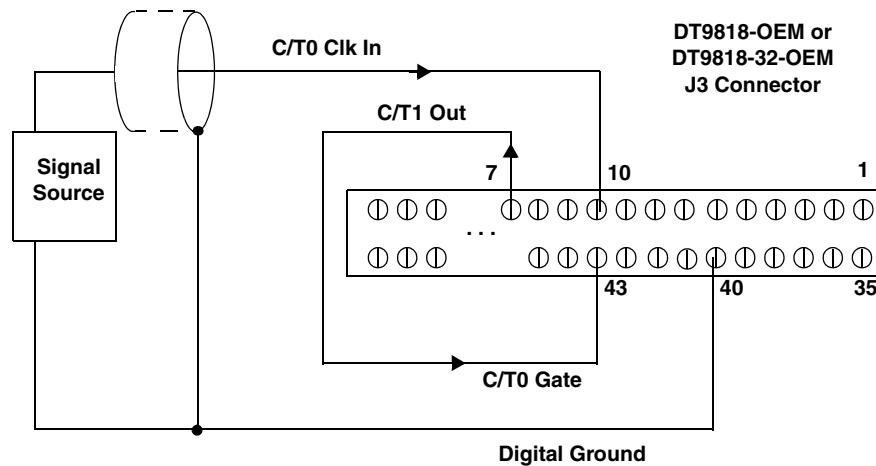


Figure 20: Connecting Counter/Timer Signals for a Frequency Measurement Operation (Shown for C/T0)

Period/Pulse Width Measurement

Figure 21 shows how to connect counter/timer signals to the DT9818-OEM or DT9818-32-OEM module to perform a period/pulse width measurement operation on counter/timer 0. You specify the active pulse (high or low) in software. The pulse width is the percentage of the total pulse period that is active.

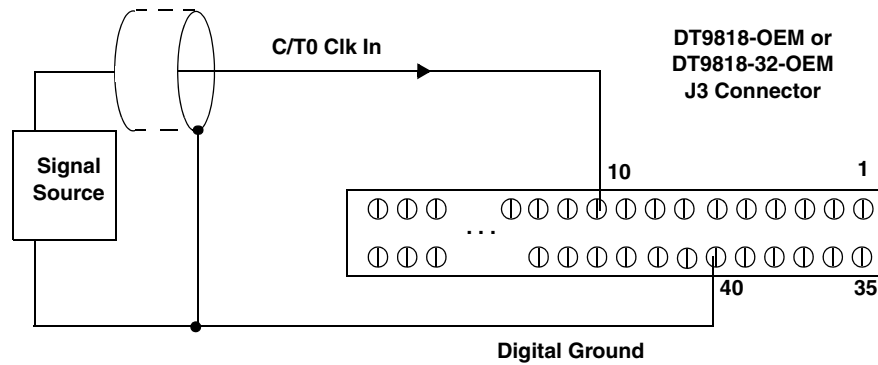


Figure 21: Connecting Counter/Timer Signals for a Period/Pulse Width Measurement Operation (Shown for C/T0)

Edge-to-Edge Measurement

Figure 22 shows how to connect counter/timer signals to the DT9818-OEM or DT9818-32-OEM module to perform an edge-to-edge measurement operation using two signal sources. The counter measures the number of counts between the start edge (in this case, a rising edge on the C/T0 Clk In signal) and the stop edge (in this case, a falling edge on the C/T0 Gate signal).

You specify the start edge and the stop edge in software. Refer to [page 93](#) for more information on edge-to-edge measurement operations.

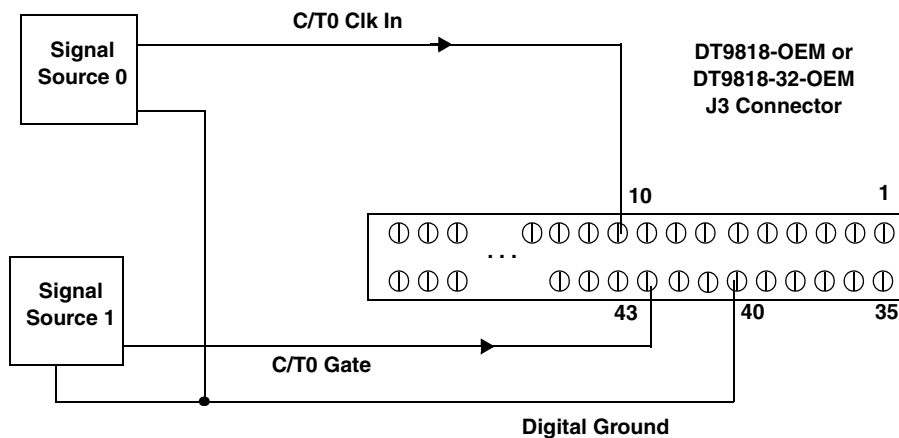


Figure 22: Connecting Counter/Timer Signals for an Edge-to-Edge Measurement Operation (Shown for C/T0)

Continuous Edge-to-Edge Measurement

Figure 23 shows how to connect counter/timer signals to the DT9818-OEM or DT9818-32-OEM module to perform a continuous edge-to-edge measurement operation. The counter measures the number of counts between two consecutive start edges (in this case, a rising edge on the C/T0 Clk In signal).

You specify the start edge in software. Refer to [page 94](#) for more information on continuous edge-to-edge measurement operations.

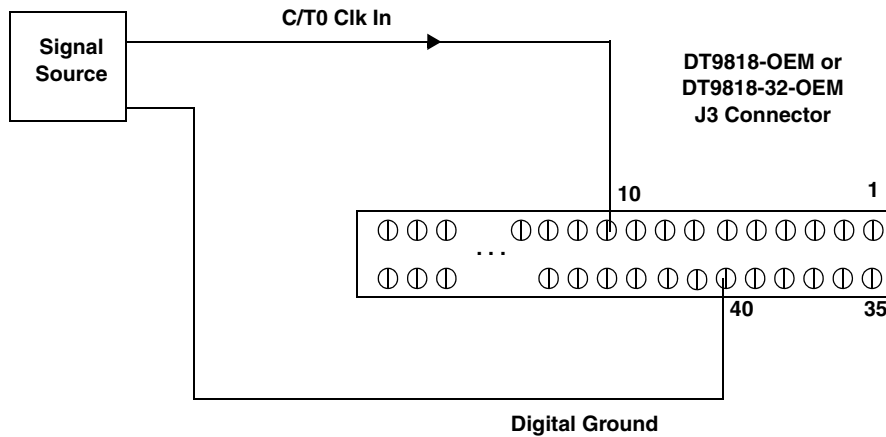


Figure 23: Connecting Counter/Timer Signals for a Continuous Edge-to-Edge Measurement Operation (Shown for C/T0)

Connecting Pulse Output Signals

Figure 24 shows an example of connecting pulse output signals to the DT9818-OEM or DT9818-32-OEM module using counter/timer 0. Refer to [page 94](#) for more information on pulse output (rate generation, one-shot, and repetitive one-shot) operations.


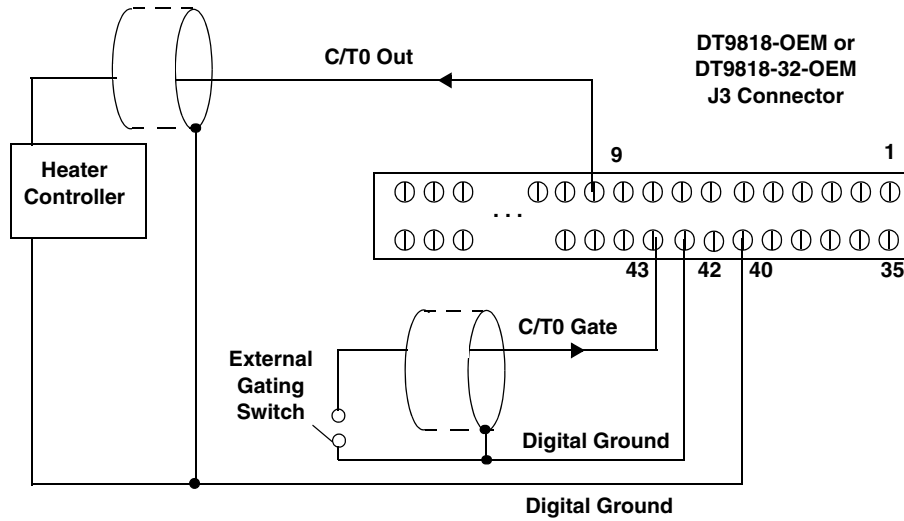


Figure 24: Connecting Counter/Timer Signals for Pulse Output Operations (Shown for C/T0)



Verifying the Operation of a Module

Running the Quick DataAcq Application.....	55
Testing Single-Value Analog Input	56
Testing Single-Value Analog Output.....	57
Testing Continuous Analog Input.....	58
Testing Single-Value Digital Input.....	59
Testing Single-Value Digital Output	60
Testing Frequency Measurement.....	61
Testing Pulse Output	62

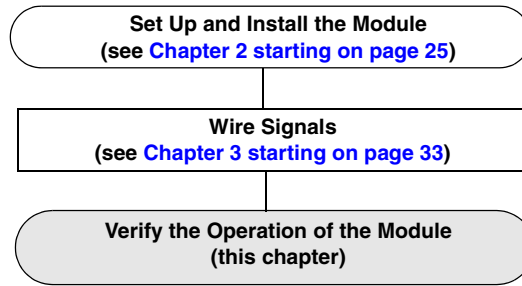

You can verify the operation of a DT9818 module using the Quick DataAcq application. Quick DataAcq lets you do the following:

- Acquire data from a single analog input channel or digital input port
- Acquire data continuously from one or more analog input channels using an oscilloscope, strip chart, or Fast Fourier Transform (FFT) view
- Measure the frequency of events
- Output data from a single analog output channel or digital output port
- Output pulses either continuously or as a one-shot
- Save the input data to disk

The Quick DataAcq application is installed automatically when you install the driver software.

Running the Quick DataAcq Application

To run the Quick DataAcq application, do the following:

1. If you have not already done so, power up your computer and any attached peripherals.
2. Click **Start** from the Task Bar.
3. Browse to **Programs | Data Translation, Inc | DT-Open Layers for Win32 | QuickDataAcq**.
The main menu appears.

Note: The Quick DataAcq application allows you to verify basic operations on the board; however, it may not support all of the board's features.

For information on each of the features provided, use the online help for the Quick DataAcq application by pressing F1 from any view or selecting the **Help** menu. If the system has trouble finding the help file, navigate to C:\Program Files\Data Translation\Win32\dtdataacq.hlp, where C: is the letter of your hard disk drive.

Testing Single-Value Analog Input

To verify that the module can read a single analog input value, do the following:

1. Connect a voltage source, such as a function generator, to analog input channel 0 (differential mode) on the DT9818 module. Refer to [page 40](#) for an example of how to connect a differential analog input.
2. In the Quick DataAcq application, choose **Single Analog Input** from the **Acquisition** menu.
3. Select the DT9818 module from the **Board** list box.
4. In the **Channel** list box, select analog input channel 0.
5. In the **Range** list box, select the range for the channel. *The default is ± 10 V.*
6. Select **Differential**.
7. Click **Get** to acquire a single value from analog input channel 0.
The application displays the value on the screen in both text and graphical form.

Testing Single-Value Analog Output

To verify that the module can output a single analog output value, do the following:

1. Connect an oscilloscope or voltmeter to analog output channel 0 on the module. Refer to [page 44](#) for an example of how to connect analog output signals.
2. In the Quick DataAcq application, choose **Single Analog Output** from the **Control** menu.
3. Select the DT9818 module from the **Board** list box.
4. In the **Channel** list box, select analog output channel 0.
5. In the **Range** list box, select the output range of DAC0. *The default is ± 10 V.*
6. Enter an output value, or use the slider to select a value, to output from DAC0.
7. Click **Send** to output a single value from analog output channel 0.
The application displays the output value both on the slider and in the text box.

Testing Continuous Analog Input

To verify that the module can perform a continuous analog input operation, do the following:

1. Connect known voltage sources, such as the outputs of a function generator, to analog input channels 0 and 1 on the DT9818 module (differential mode). Refer to [page 40](#) for an example of how to connect a differential analog input.
2. In the Quick DataAcq application, choose **Scope** from the **Acquisition** menu.
3. Select the DT9818 module from the **Board** list box.
4. In the **Sec/Div** list box, select the number of seconds per division (.1 to .00001) for the display.
5. In the **Channel** list box, select analog input channel 1, and then click **Add** to add the channel to the channel list. *Note that, by default, channel 0 is included in the channel list.*
6. Click **Config** from the Toolbar.
7. In the **Config** dialog, select **ChannelType**, and then select **Differential**.
8. In the **Config** dialog, select **Range**, and then select **Bipolar**.
9. Click **OK** to close the dialog box.
10. From the Scope view, double-click the input range of the channel to change the input range of the module (± 10 V, ± 5 V, ± 2.5 V, or ± 1.25 V). *The default is ± 10 V. The display changes to reflect the selected range for all the analog input channels on the module.*
11. In the **Trigger** box, select **Auto** to acquire data continuously from the specified channels or **Manual** to acquire a burst of data from the specified channels.
12. Click **Start** from the Toolbar to start the continuous analog input operation. *The application displays the values acquired from each channel in a unique color on the oscilloscope view.*
13. Click **Stop** from the Toolbar to stop the operation.

Testing Single-Value Digital Input

To verify that the module can read a single digital input value, do the following:

1. Connect a digital input to digital input line 0 on the DT9818 module. Refer to [page 45](#) for an example of how to connect a digital input.
2. In the Quick DataAcq application, choose **Digital Input** from the **Acquisition** menu.
3. Select the DT9818 module from the **Board** list box.
4. Click **Get**.

The application displays the entire 16-bit digital input value (0 to FFFF) in both the Data box and the Digital Input box.

In addition, the application shows the state of the lower eight digital input lines (lines 0 to 7) in the graphical display. If an indicator light is lit (red), the line is high; if an indicator light is not lit (black), the line is low.

Testing Single-Value Digital Output

To verify that the module can output a single digital output value, do the following:

1. Connect a digital output to digital output line 0 on the DT9818 module. Refer to [page 45](#) for an example of how to connect a digital output.
2. In the Quick DataAcq application, choose **Digital Output** from the **Control** menu.
3. Select the DT9818 module from the **Board** list box.
4. Click the appropriate indicator lights to select the types of signals to write from the digital output lines. If you select a light, the module outputs a high-level signal; if you do not select a light, the module outputs a low-level signal. You can also enter an output value for the lower eight digital output lines (0 to FF) in the **Hex** text box.
5. Click **Send**.

The values of the lower eight digital output lines are output appropriately.

Testing Frequency Measurement

To verify that the module can perform a frequency measurement operation, do the following:

1. Wire an external clock source to counter/timer 0 on the DT9818 module. Refer to [page 61](#) for an example of how to connect an external clock.

Note: The Quick DataAcq application works only with counter/timer 0.

2. In the Quick DataAcq application, choose **Measure Frequency** from the **Acquisition** menu.
3. Select the DT9818 module from the **Board** list box.
4. In the **Count Duration** text box, enter the number of seconds during which events will be counted.
5. Click **Start** to start the frequency measurement operation.
The operation automatically stops after the number of seconds you specified has elapsed, and the frequency is displayed on the screen.

If you want to stop the frequency measurement operation when it is in progress, click **Stop**.

Testing Pulse Output

To verify that the module can perform a pulse output operation, do the following:

1. Connect a scope to counter/timer 0 on the DT98318 module. Refer to [page 62](#) for an example of how to connect a scope (a pulse output) to counter/timer 0.

Note: The Quick DataAcq application works only with counter/timer 0.

2. In the Quick DataAcq application, choose **Pulse Generator** from the **Control** menu.
3. Select the DT9818 module from the **Board** list box.
4. Select either **Continuous** to output a continuous pulse stream or **One Shot** to output one pulse.
5. Select either **Low-to-high** to output a rising-edge pulse (the high portion of the total pulse output period is the active portion of the signal) or **High-to-low** to output a falling-edge pulse (the low portion of the total pulse output period is the active portion of the signal).
6. Under **Pulse Width**, enter a percentage or use the slider to select a percentage for the pulse width. The percentage determines the duty cycle of the pulse.
7. Click **Start** to generate the pulse(s).
The application displays the results both in text and graphical form.
8. Click **Stop** to stop a continuous pulse output operation. One-shot pulse output operations stop automatically.

Part 2: Using Your Module



Principles of Operation

Analog Input Features	67
Analog Output Features	80
Digital I/O Features	87
Counter/Timer Features	89

Figure 25 shows a block diagram of the DT9818 module.

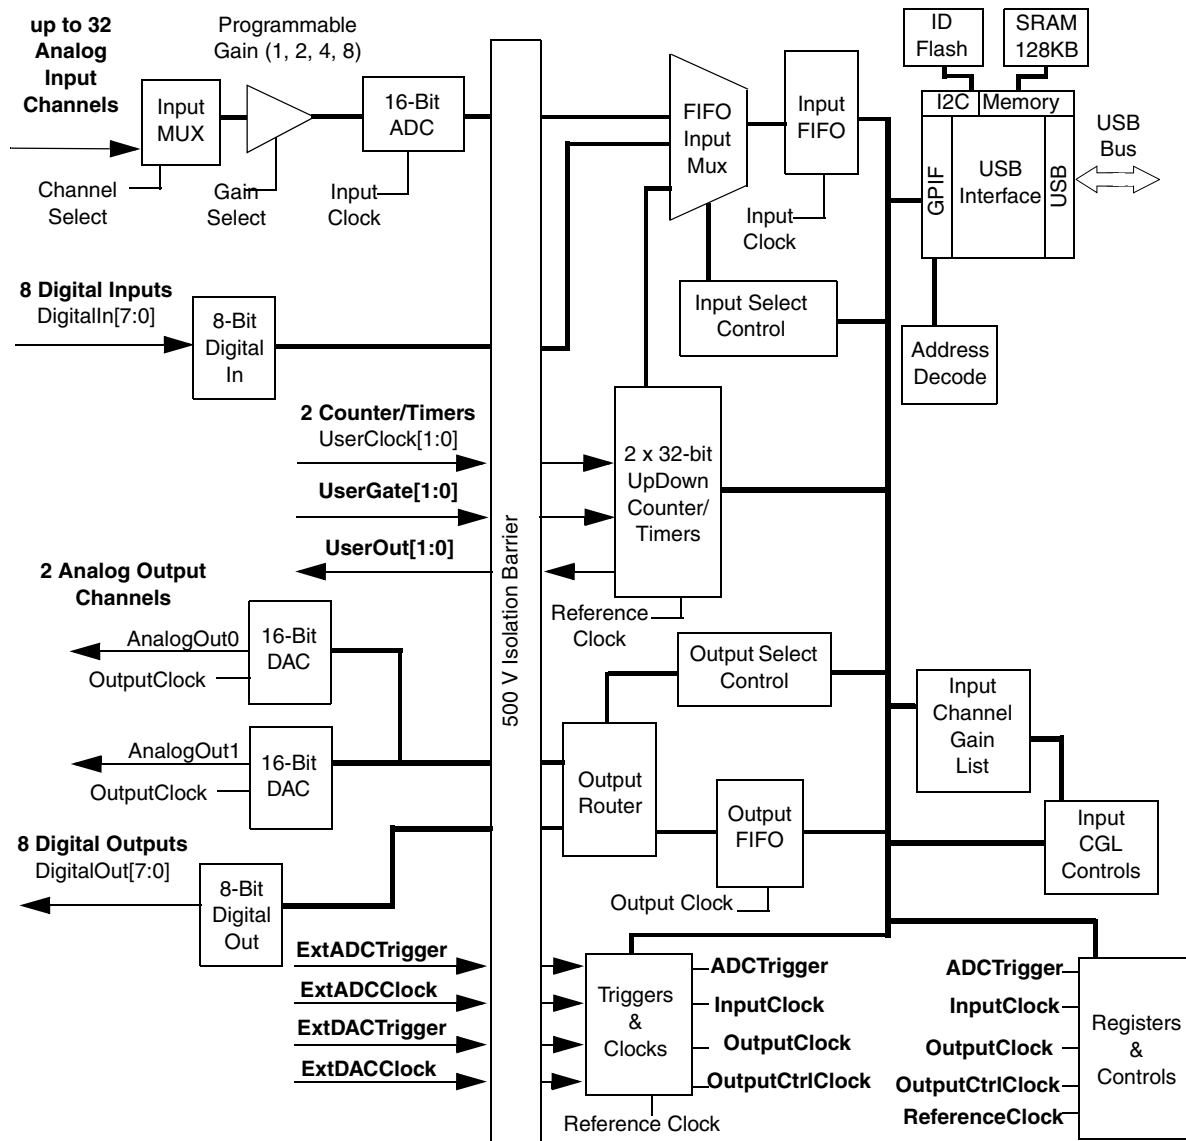


Figure 25: Block Diagram of the DT9818 Module

Analog Input Features

This section describes the following features of the analog input (A/D) subsystem on the DT9818 module:

- Input resolution, described below
- Analog input channels, described on [page 67](#)
- Input ranges and gains, described on [page 73](#)
- Input sample clock sources, described on [page 74](#)
- Analog input conversion modes, described on [page 74](#)
- Input triggers, described on [page 78](#)
- Data format and transfer, described on [page 78](#)
- Error conditions, described on [page 79](#)

Input Resolution

The resolution of the analog input subsystem is fixed at 16 bits. You cannot program the resolution in software.

Analog Input Channels

[Table 2](#) lists the number and type of analog input channels supported by the DT9818 module.

Table 2: Analog Input Channels

Module	Number of Single-Ended/ Pseudo-Differential Channels	Number of Differential Channels
DT9818-OEM	16 (numbered 0 to 15)	8 (numbered 0 to 7)
DT9818-32-OEM	32 (numbered 0 to 31)	16 (numbered 0 to 15)
DT9818-16SE-BNC	16 (numbered 0 to 15)	–
DT9818-8DI-BNC	–	8 (numbered 0 to 7)

You can use the analog input channels in one of the following configurations:

- **Single-ended** – Single-ended channels are useful when you are measuring high-level signals, when noise is not significant, when the source of the input is close to the module, and when all the input signals are referred to the same common ground.

- **Pseudo-Differential** – Pseudo-differential channels are useful when noise or common-mode voltage (the difference between the ground potentials of the signal source and the ground of the screw terminal panel or between the grounds of other signals) exists and when the differential configuration is not suitable for your application. This option provides less noise rejection than the differential configuration; however, more analog input channels are available.
- **Differential** – Differential channels are useful when you want to measure low-level signals, when noise is a significant part of the signal, or when common-mode voltage exists.

The BNC connection box is shipped in either a differential or single-ended channel configuration. For the standard version of the module, you configure the channel type as single-ended or differential through software.

Note: Ensure that the analog output subsystem is not running when you change the channel type of the analog input subsystem, or an error is reported.

For pseudo-differential inputs, specify single-ended in software; in this case, how you wire these signals determines the configuration; refer to [page 40](#) for more information.

Using the Open Layers Control Panel applet, you can select whether to use 10 k Ω termination resistance between the low side of each differential channel and isolated analog ground. This feature is particularly useful with floating signal sources. Refer to [page 39](#) for more information about wiring analog input signals. Refer to [page 32](#) for information on configuring the driver to use bias return termination resistance.

The DT9818 module can acquire data from a single analog input channel or from a group of analog input channels. The following subsections describe how to specify the channels.

Specifying a Single Channel

The simplest way to acquire data from a single channel is to specify the channel for a single-value analog input operation using software; refer to [page 74](#) for more information on single-value operations.

You can also specify a single channel using an input channel-gain list, described in the next section.

Note: If you want to perform a single-value digital input operation while the A/D subsystem is configured, specify channel 32 (for the DT9818-32-OEM module only) or channel 16 (for all other DT9818 modules) to select the digital input port for the A/D single-value operation.

Specifying One or More Channels

You can read data from one or more analog input channels using an input channel-gain list. You can group the channels in the list sequentially (starting either with 0 or with any other analog input channel) or randomly. You can also specify a single channel or the same channel more than once in the list.

Using software, specify the channels in the order you want to sample them. You can enter up to 1024 entries in the channel-gain list. The channels are read in order (using continuously paced scan mode or triggered scan mode) from the first entry to the last entry in the channel-gain list. Refer to [page 74](#) for more information on the supported conversion modes.

[Table 3](#) shows an example of entering analog input channels in the channel-gain list. Refer to [page 73](#) for more information about specifying the gain for a channel.

Table 3: An Example of Specifying Analog Input Channels in the Input Channel-Gain List

Channel-Gain List Entry	Channel	Gain	Operation	Description
0	0	1	AIN0	Read analog input channel 0 using a gain of 1 (input range of ± 10 V).
1	3	2	AIN3	Read analog input channel 3 using a gain of 2 (input range of ± 5 V).
2	0	1	AIN0	Read analog input channel 0 again using a gain of 1 (input range of ± 10 V).
3	6	4	AIN6	Read analog input channel 6 using a gain of 4 (input range of ± 2.5 V)
.
.
.
1023	1	8	AIN1	Read analog input channel 1 using a gain of 8 (input range of ± 1.25 V).

Note that in addition to the analog input channels, you can include the digital input port (see [page 70](#)) and/or counter/timer channels (see [page 71](#)) in the input channel-gain list.

The maximum rate at which the module can read the channels in the input channel-gain list depends on the total number of channels in list. For example, since the maximum throughput of the analog input subsystem is 150 kSamples/s, the module can read two input channels at a rate of 75 kSamples/s each or five input channels at a rate of 30 kSamples/s each.

Specifying Digital Input Lines in the Input Channel-Gain List

In addition to the analog input channels, the DT9818 allows you to read eight digital input lines (Port A, lines 0 to 7) using the input channel-gain list. This feature is particularly useful when you want to correlate the timing of analog and digital events.

If you are using the DT9818-32-OEM module, specify channel 32 in the channel-gain list to read the eight digital input lines; for all other modules, specify channel 16 in the input channel-gain list to read the eight digital input lines. You can enter this channel anywhere in the list and can enter it more than once, if desired.

Table 4 shows an example of entering the digital input port in the input channel-gain list.

Table 4: An Example of Specifying the Digital Input Port in the Input Channel-Gain List

Channel-Gain List Entry	Channel	Gain	Operation	Description
0	0	1	AIN0	Read analog input channel 0 using a gain of 1 (input range of ± 10 V).
1	3	2	AIN3	Read analog input channel 3 using a gain of 2 (input range of ± 5 V).
2	0	1	AIN0	Read analog input channel 0 again using a gain of 1 (input range of ± 10 V).
3	6	4	AIN6	Read analog input channel 6 using a gain of 4 (input range of ± 2.5 V)
4	32	1	DIN	Read the digital input port of the DT9818-32-OEM module by specifying channel 32 in the list (for all other modules, specify channel 16)
.
.
.
1023	1	8	AIN1	Read analog input channel 1 using a gain of 8 (input range of ± 1.25 V).

Note: If the digital input port is the only channel in the channel-gain list, the module can read this channel at the maximum A/D sampling rate.

The digital channel is treated like any other channel in the analog input channel-gain list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for these digital input lines, if you specify them this way.

Specifying Counter/Timers in the Input Channel-Gain List

You can read the value of one or both counter/timer channels on the DT9818 module using the input channel-gain list. This feature is particularly useful when you want to correlate the timing of analog and counter/timer events.

Note: Typically, the counter/timers should be configured for continuous edge-to-edge measurement mode when you want to read the value of the counter/timer channels through the input channel-gain list. Refer to [page 94](#) for more information on this operation mode.

To read a counter/timer channel, specify the appropriate channel number in the input channel-gain list (refer to [Table 5 on page 71](#)). You can enter a channel number anywhere in the list, and you can enter it more than once, if desired.

You need two channel-gain list entries to read one 32-bit counter value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. If you need only the lower 16-bit word, you do not have to include the second entry. The entire 32-bit count value is latched when the lower 16-bit word is stored. This prevents the counter/timer value that is being read from changing between samples.

[Table 5](#) lists the channel number(s) to use for each counter/timer.

Table 5: Using Counter/Timers in the Input Channel-Gain List

Counter/Timer Channel	Description	Channel to Specify in the Channel Gain-List for the DT9818-32-OEM	Channel to Specify in Channel-Gain List for all Other Modules
C/T_0_LOW	Lower 16 bits (0 to 15) of C/T0	Channel 33	Channel 17
C/T_0_HI	Upper 16 bits (16 to 31) of C/T0	Channel 34	Channel 18
C/T_1_LOW	Lower 16 bits (0 to 15) of C/T1	Channel 35	Channel 19
C/T_1_HI	Upper 16 bits (16 to 31) of C/T1	Channel 36	Channel 20

Note: To read the entire 32-bit value, specify the channel corresponding to the lower 16-bit word first, followed by the channel corresponding to the upper 16-bit word.

While you can read the lower 16-bit word of a 32-bit counter, you cannot read just the upper 16-bit word.

[Table 6](#) shows an example of entering the counter/timer channels in the input channel-gain list.

Table 6: An Example of Specifying Counter/Timer Channels in the Input Channel-Gain List

Channel-Gain List Entry	Channel	Gain	Operation	Description
0	0	1	AIN0	Read analog input channel 0 using a gain of 1 (input range of ± 10 V).
1	3	2	AIN3	Read analog input channel 3 using a gain of 2 (input range of ± 5 V).
2	0	1	AIN0	Read analog input channel 0 again using a gain of 1 (input range of ± 10 V).
3	6	4	AIN6	Read analog input channel 6 using a gain of 4 (input range of ± 2.5 V)
4	32	1	DIN	Read the digital input port of the DT9818-32-OEM module by specifying channel 32 in the list (for all other modules, specify channel 16)
5	33	1	C/T0	Read the lower 16-bit word of counter/timer 0 on the DT9818-32-OEM module by specifying channel 33 in the list (for all other modules, specify channel 17)
6	34	1	C/T0	Read the upper 16-bit word of counter/timer 0 on the DT9818-32-OEM module by specifying channel 34 in the list (for all other modules, specify channel 18)
7	35	1	C/T1	Read the lower 16-bit word of counter/timer 1 on the DT9818-32-OEM module by specifying channel 35 in the list (for all other modules, specify channel 19)
8	36	1	C/T1	Read the upper 16-bit word of counter/timer 1 on the DT9818-32-OEM module by specifying channel 36 in the list (for all other modules, specify channel 20)
.
.
.
1023	1	8	AIN1	Read analog input channel 1 using a gain of 8 (input range of ± 1.25 V).

The counter/timer channel is treated like any other channel in the input channel-gain list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for the counter/timers, if you specify them this way.

The maximum rate at which the module can read the channels in the input channel-gain list depends on the total number of channels in list. See [page 69](#) for information on specifying analog input channels and to [page 70](#) for specifying the digital input port in the input channel-gain list.

For example, since the maximum throughput of the analog input subsystem is 150 kSamples/s, the module can read one analog input channel and one counter/timer (three channels total) at a maximum sample rate per channel of 50 kSamples/s. To read three analog input channels and one counter/timer (five channels total), the maximum sample rate per channel is 30 kSamples/s.

Input Ranges and Gains

[Table 7](#) lists the supported gains and effective bipolar input ranges for each.

Table 7: Effective Input Range

Gain	Input Range
1	± 10 V
2	± 5 V
4	± 2.5 V
8	± 1.25 V

Using software, specify a range of -10 V to $+10$ V. Note that this is the range for the entire analog input subsystem, not the range per channel.

For each channel, choose the gain that has the smallest effective range that includes the signal you want to measure. For example, if the range of your analog input signal is ± 1.05 V, specify a range of -10 V to $+10$ V for the module and use a gain of 8 for the channel; the effective input range for this channel is then ± 1.25 V, which provides the best sampling accuracy for that channel.

The simplest way to specify gain for a single channel is to specify the gain for a single-value analog input operation using software; refer to [page 74](#) for more information on single-value operations.

If you are using an input channel-gain list, use software to specify the gain for each analog input channel in the input channel-gain list; refer to [page 69](#) for an example.

Note: If you specified the digital input port or the counter/timer channels in the channel-gain list, specify a gain of 1 for these channels.

Input Sample Clock Sources

DT9818 module allows you to use one of the following clock sources to pace analog input operations:

- **Internal A/D clock** – Using software, specify the clock source as internal and the clock frequency at which to pace the operation. The minimum frequency supported is 0.75 Samples/s; the maximum frequency supported is 150 kSamples/s.

According to sampling theory (Nyquist Theorem), specify a frequency that is at least twice as fast as the input's highest frequency component. For example, to accurately sample a 20 kHz signal, specify a sampling frequency of at least 40 kHz. Doing so avoids an error condition called *aliasing*, in which high frequency input components erroneously appear as lower frequencies after sampling.

- **External A/D clock** – An external A/D clock is useful when you want to pace acquisitions at rates not available with the internal A/D clock or when you want to pace at uneven intervals.

Connect an external A/D clock to the External ADC Clock input signal on the DT9818 module. Conversions start on the falling edge of the external A/D clock input signal.

Using software, specify the clock source as external. The clock frequency is always equal to the frequency of the external A/D sample clock input signal that you connect to the module.

Note: If you specify the digital input port and/or the counter/timer channels in the input channel-gain list, the input sample clock (internal or external) also paces the acquisition of the digital input port and/or counter/timer channels. Refer to [page 70](#) and [page 71](#) for more information about specifying these channels.

Analog Input Conversion Modes

DT9818 module supports the following conversion modes:

- **Single-value operations** are the simplest to use. Using software, you specify the range, gain, and analog input channel. The module acquires the data from the specified channel and returns the data immediately. For a single-value operation, you cannot specify a clock source, trigger source, scan mode, or buffer.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Scan mode** takes full advantage of the capabilities of the DT9818 module. For a scan, you can specify an input channel-gain list, clock source, trigger source, scan mode, and buffer using software. Two scan modes are supported: continuous scan mode and triggered scan mode (often called burst mode). These modes are described in the following subsections.

Using software, you can stop a scan by performing either an orderly stop or an abrupt stop. In an orderly stop, the module finishes acquiring the data, stops all subsequent acquisition, and transfers the acquired data to host memory; any subsequent triggers are ignored.

In an abrupt stop, the module stops acquiring samples immediately; the acquired data is not transferred to host memory, and any subsequent triggers are ignored.

Continuous Scan Mode

Use continuous scan mode if you want to accurately control the period between conversions of individual channels in a scan.

Figure 26 shows the timing diagram for a continuous scan operation.

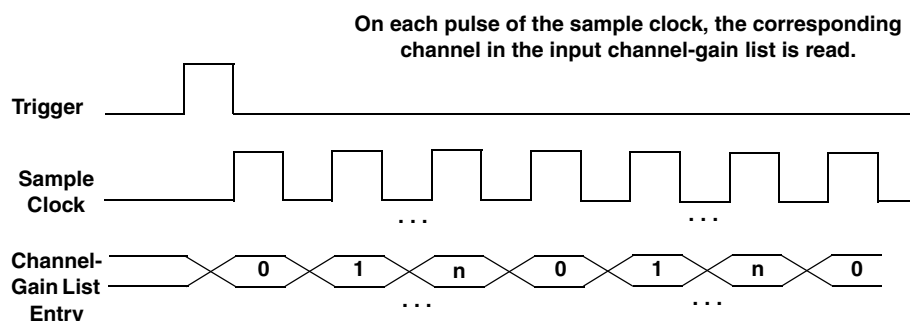


Figure 26: Timing Diagram for a Continuous Scan Operation

When it detects an initial trigger, the module cycles through the input channel-gain list, acquiring and converting the value for each entry in the list (this process is defined as the scan). The module then wraps to the start of the input channel-gain list and repeats the process continuously until either the allocated buffers are filled or until you stop the operation. Refer to [page 78](#) for more information about buffers.

The conversion rate is determined by the frequency of the input sample clock; refer to [page 74](#) for more information about the input sample clock. The sample rate, which is the rate at which a single entry in the input channel-gain list is sampled, is determined by the frequency of the input sample clock divided by the number of entries in the input channel-gain list.

To select continuous scan mode, use software to specify the data flow as Continuous and to specify the initial trigger (the trigger source that starts the operation). You can select a software trigger, an external, positive digital (TTL) trigger, or an external, negative digital (TTL) trigger as the initial trigger. Refer to [page 78](#) for more information about the supported trigger sources.

Figure 27 illustrates continuous scan mode using an input channel-gain list with three entries: channel 0, channel 1, and channel 2. In this example, analog input data is acquired on each clock pulse of the input sample clock. When it reaches the end of the input channel-gain list, the module wraps to the beginning of the list and repeats this process. Data is acquired continuously.

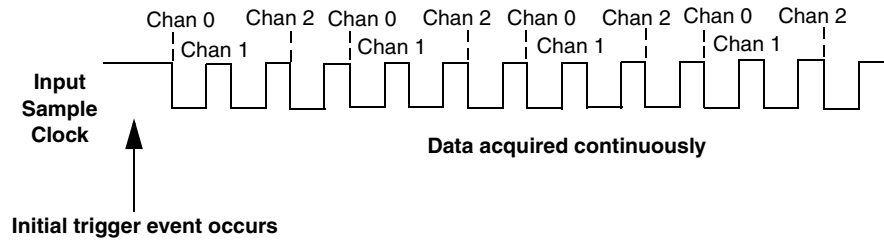


Figure 27: Continuous Scan Mode

Triggered Scan Mode

Use triggered scan mode if you want to accurately control both the period between conversions of individual channels in a scan and the period between each scan. This mode is useful in emulating simultaneous sample-and-hold and trigger-per-buffer operations. You can acquire up to 262,144 samples per trigger (256 times per trigger x 1024-location channel-gain list).

Figure 28 shows the timing diagram of a triggered scan operation.

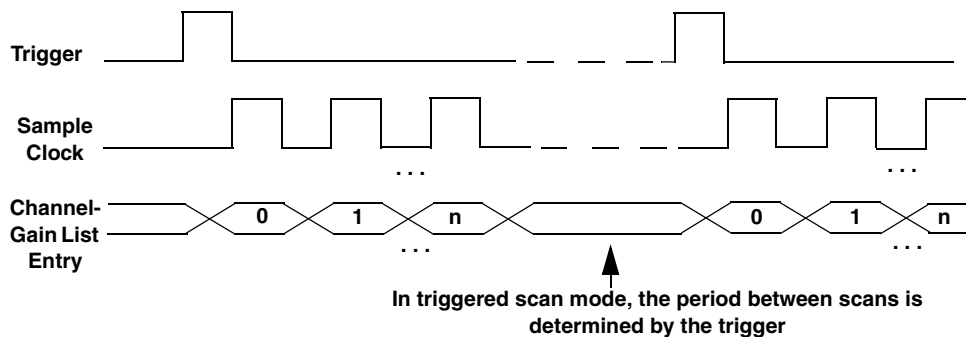


Figure 28: Timing Diagram for a Triggered Scan Operation

DT9818 module supports two triggered scan modes: software retriggered and externally retriggered. These modes are described in the following subsections.

Software-Retriggered Scan Mode

In software-retriggered scan mode, the module waits for the initial trigger to occur. When it detects an initial trigger, the module scans the input channel-gain list a specified number of times (up to 256), and then waits for a software retrigger to occur. When it detects a software retrigger, the module scans the input channel-gain list the specified number of times, and then waits for another software retrigger to occur. The process repeats continuously until either the allocated buffers are filled or you stop the operation; refer to [page 78](#) for more information about buffers.

The sample rate is determined by the frequency of the input sample clock divided by the number of entries in the input channel-gain list; refer to [page 74](#) for more information about the input sample clock. The conversion rate of each scan is determined by the frequency of the retrigger clock on the module. The minimum retrigger frequency supported is 0.75 Hz; the maximum retrigger frequency supported is 75 kHz.

Specify the retrigger frequency as follows:

$$\text{Min. Retrigger Period} = \frac{\text{\# of CGL entries} \times \text{\# of CGLs per trigger} + 2 \mu\text{s}}{\text{A/D sample clock frequency}}$$

$$\text{Max. Retrigger Frequency} = \frac{1}{\text{Min. Retrigger Period}}$$

For example, if you are using 512 channels in the input channel-gain list, scanning the channel-gain list 256 times every trigger or retrigger, and using an A/D sample clock with a frequency of 100 kHz, set the maximum retrigger frequency to 0.762 Hz, since

$$0.762 \text{ Hz} = \frac{1}{\frac{(512 * 256) + 2 \mu\text{s}}{100 \text{ kHz}}}$$

To select software-retriggered scan mode, use software to specify the following parameters:

- Dataflow as Continuous
- Triggered scan mode usage enabled
- The initial trigger (the trigger source that starts the acquisition)
- Retrigger source as Software
- The number of times to scan per trigger or retrigger (also called the multiscan count)
- The frequency of the retrigger clock

Externally-Retriggered Scan Mode

In externally-retriggered scan mode, the module waits for the initial trigger to occur. When it detects an initial trigger, the module scans the input channel-gain list up to 256 times, and then waits for an external retrigger to occur.

When the retrigger occurs, the module scans the input channel-gain list the specified number of times, and then waits for another external digital (TTL) trigger to occur. The process repeats continuously until either the allocated buffers are filled or you stop the operation; refer to [page 78](#) for more information about buffers.

The conversion rate of each channel is determined by the frequency of the input sample clock; refer to [page 74](#) for more information about the input sample clock. The conversion rate of each scan is determined by the period between external retriggers; therefore, it cannot be accurately controlled. The module ignores external triggers that occur while it is acquiring data. Only external retrigger events that occur when the module is waiting for a retrigger are detected and acted on.

To select externally retriggered scan mode, use software to specify the following parameters:

- Dataflow as Continuous
- Triggered scan mode enabled
- The initial trigger (the trigger source that starts the operation) as any of the supported trigger sources
- Retrigger source as either the external, positive digital (TTL) trigger, or the external, negative digital (TTL) trigger
- The number of times to scan per trigger or retrigger (also called the multiscan count)

Input Triggers

A trigger is an event that occurs based on a specified set of conditions. Acquisition starts when the module detects the initial trigger event and stops when all the allocated buffers have been filled or when you stop the operation.

If you are using triggered scan mode, the module continues to acquire data using the specified retrigger source to clock the operation. Refer to [page 76](#) for more information about triggered scan mode.

The DT9818 module supports the following trigger sources:

- **Software trigger** – A software trigger event occurs when you start the analog input operation (the computer issues a write to the module to begin conversions). Using software, specify the trigger source as a software trigger.
- **External digital (TTL) trigger** – An external digital (TTL) trigger event occurs when the DT9818 module detects a transition (rising-edge or falling-edge) on the External ADC Trigger input signal connected to the module. Using software, specify the trigger source as an external, positive digital (TTL) trigger for a rising-edge digital trigger, or an external, negative digital (TTL) trigger for a falling-edge digital trigger.

Data Format and Transfer

DT9818 module uses offset binary data encoding, such as 0000 to represent negative full-scale and FFFFh to represent positive full-scale. Use software to specify the data encoding as binary.

The ADC outputs FFFFh for above-range signals and 0000 for below-range signals.

Before you begin acquiring data, you must allocate buffers to hold the data. An event is returned whenever a buffer is filled. This allows you to move and/or process the data as needed.

We recommend that you allocate a minimum of two buffers for analog input operations. Data is written to multiple allocated input buffers continuously; when no more empty buffers are available, the operation stops. The data is gap-free.

Error Conditions

The DT9818 module can report an error if one of the following conditions occurs:

- **A/D Over Sample** – The A/D sample clock rate is too fast. This error is reported if a new A/D sample clock pulse occurs while the ADC is busy performing a conversion from the previous A/D sample clock pulse. The host computer can clear this error. To avoid this error, use a slower sampling rate.
- **Input FIFO Overflow** – The analog input data is not being transferred fast enough to the host computer. The host computer can clear this error, but the error will continue to be generated if the Input FIFO is still full. To avoid this error, close other applications that may be running while you are acquiring data. If this has no effect, try using a computer with a faster processor or reduce the sampling rate.

If one of these error conditions occurs, the module stops acquiring and transferring data to the host computer.

Analog Output Features

This section describes the following features of the analog output (D/A) subsystem on the DT9818 module:

- Output resolution, described below
- Analog output channels, described on below
- Output ranges and gains, described on [page 81](#)
- Output triggers, described on [page 82](#)
- Output clocks, described on [page 82](#)
- Data format and transfer, described on [page 86](#)
- Error conditions, described on [page 86](#)

Output Resolution

The resolution of the analog output subsystem is fixed at 16 bits. You cannot program the resolution of this subsystem in software.

Analog Output Channels

The DT9818 module provides two streaming analog output channels (DAC0 and DAC1). Refer to [Chapter 3 starting on page 33](#) for information on how to wire analog output signals to the module. You configure the channel type through software.

Within each DAC, the digital data is double-buffered to prevent spurious outputs, then output as an analog signal. Both DACs power up to a value of $0\text{ V} \pm 10\text{ mV}$. Resetting the module does not clear the values in the DACs.

The following subsections describe how to specify an analog output channel.

Specifying a Single Analog Output Channel

The simplest way to output data from a single DAC is to specify the channel for a single-value analog output operation using software; refer to [page 82](#) for more information about single-value operations.

You can also specify a single DAC using the output channel-gain list, described in the next section.

Specifying Multiple Analog Output Channels and/or the Digital Output Port

You can output data from one or more DACs and/or the digital output port using an output channel-gain list. This feature is particularly useful when you want to correlate the timing of analog and digital output events.

Using software, specify the data flow mode as continuous for the D/A subsystem (described on [page 82](#)) and specify the output channels that you want to update, where 0 is DAC0, 1 is DAC1, and 2 is the digital output port. (The gain is always 1 for output operations.) You can enter a maximum of 3 entries in the output channel-gain list and the channels must be in order. Note that you can skip a channel in the list, however, if you do not want to update it.

For example, if you want to update only DAC0 and the digital output port, specify channels 0 and 2 in the output channel-gain list. If you want to update both DACs and the digital output port, specify channels 0, 1, and 2 in the output channel-gain list.

[Table 8](#) shows an example of specifying channels in an output channel-gain list.

Table 8: Specifying Channels in an Output Channel-Gain List (Example)

Channel-Gain List Entry	Channel	Gain	Operation	Description
0	0	1	DAC 0	Update DAC 0.
1	1	1	DAC 1	Update DAC 1.
2	2	1	Digital Output Port	Update the digital output port by specifying channel 2 in the list.

Values that you specify in an output buffer are output simultaneously to the specified channels in the output channel-gain list. The data in the buffer is output in order from the first entry in the buffer to the last entry in the buffer. Since the maximum throughput for each output channel is 150 kSamples/s, the effective throughput rate for two output channels is 300 kSamples/s.

Note: The digital output port is treated like any other channel in the output channel-gain list; therefore, all the clocking, triggering, and conversion modes supported for analog output channels are supported for the digital output port, if you specify the digital output port in the output channel-gain list.

Output Ranges and Gains

Each DAC on the DT9818 module can output bipolar analog output signals in the range of ± 10 V. Through software, specify the range for the entire analog output subsystem as -10 V to $+10$ V, and the gain for each DAC as 1.

Output Triggers

A trigger is an event that occurs based on a specified set of conditions. The DT9818 module supports the following output trigger sources:

- **Software trigger** – A software trigger event occurs when you start the analog output operation. Using software, specify the trigger source as a software trigger.
- **External digital (TTL) trigger** – An external digital (TTL) trigger event occurs when the DT9818 module detects a transition (rising-edge or falling-edge) on the External DAC Trigger input signal connected to the module. Using software, specify the trigger source as either an external, positive digital (TTL) trigger for a rising-edge digital trigger, or an external, negative digital (TTL) trigger for a falling-edge trigger.

Output Clocks

DT9818 module allows you to use one of the following clock sources to pace analog output operations:

- **Internal DAC clock** – Using software, specify the clock source as internal and the clock frequency at which to pace the operation. The minimum frequency supported is 0.75 Samples/s; the maximum frequency supported is 150 kSamples/s.
- **External DAC clock** – An external DAC clock is useful when you want to pace conversions at rates not available with the output sample clock or when you want to pace at uneven intervals.

Connect an external DAC clock to the External DAC Clock input signal on the DT9818 module. Analog output operations start on the rising edge of the external DAC clock output signal.

Using software, specify the clock source as external. The clock frequency is always equal to the frequency of the external DAC clock output signal that you connect to the module.

Output Conversion Modes

DT9818 modules support the following conversion modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. Use software to specify the analog output channel that you want to update, and the value to output from that channel. For a single-value operation, you cannot specify a clock source, trigger source, or buffer. Single-value operations stop automatically when finished; you cannot stop a single-value operation.
- **Continuous analog output operations** take full advantage of the capabilities of the DT9818 module. In this mode, you can specify an output channel-gain list, clock source, trigger source, buffer, and buffer wrap mode. Two continuous analog output modes are supported: continuously paced and waveform generation mode. These modes are described in the following subsections.

Continuously Paced Analog Output

Use continuously paced analog output mode if you want to accurately control the period between conversions of individual channels in the output channel-gain list (refer to [page 80](#) for information on specifying the output channel-gain list).

Use software to fill the output buffer with the values that you want to write to the DACs and to the digital output port, if applicable. For example, if your output channel-gain list contains only DAC0 and the digital output port, specify the values in the output buffer as follows: the first output value for DAC0, the first output value for the digital output port, the second output value for DAC0, the second output value for the digital output port, and so on.

When it detects a trigger, the module starts writing the values from the output buffer to the channels specified in the output channel-gain list. The operation repeats continuously until either all the data is output from the buffers or you stop the operation. Refer to [page 86](#) for more information about buffers.

[Figure 29](#) shows the timing diagram for a continuous output operation.

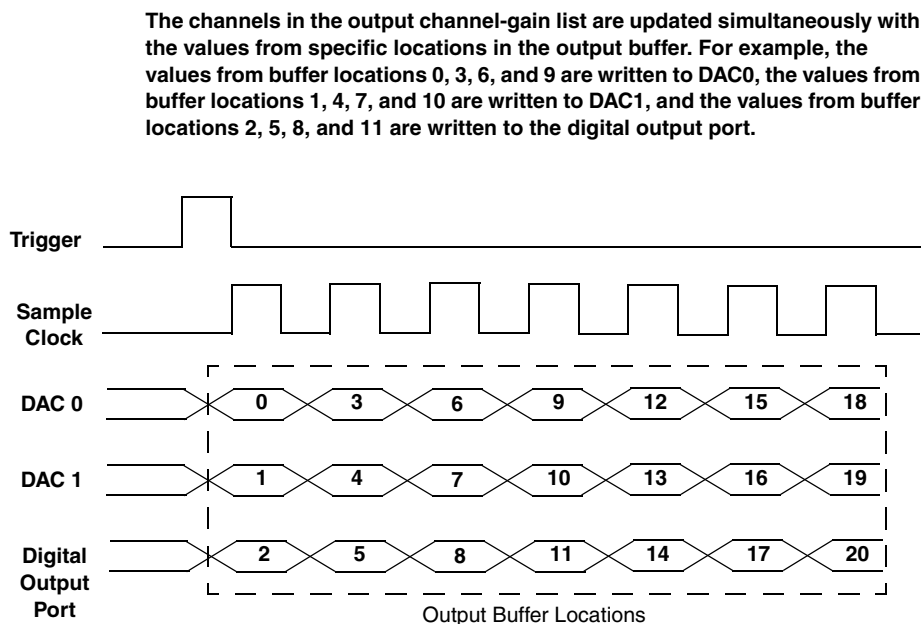


Figure 29: Timing Diagram for a Continuous Output Operation

Make sure that the host computer transfers data to the output channel-gain list fast enough so that the list does not empty completely; otherwise, an underrun error results.

To select continuously paced analog output mode, use software to specify the following parameters:

- Specify the data flow as Continuous
- Specify WrapSingleBuffer as False to use multiple buffers
- Specify the clock source and the clock frequency (refer to [page 82](#) for more information)
- Specify the trigger source (refer to [page 82](#) for more information)

We recommend that you allocate multiple buffers of at least 1K samples for a continuously paced analog output operation. Data is written from multiple output buffers continuously; when no more buffers of data are available, the operation stops. The data is gap-free.

Note: If you experience problems with a continuous analog output operation, try increasing the number of buffers and/or the size of the buffers you are using to a value greater than 1K.

To stop a continuously paced analog output operation, you can stop queuing buffers for the analog output system, letting the module stop when it runs out of data, or you can perform either an orderly stop or an abrupt stop using software. In an orderly stop, the module finishes outputting the specified number of samples, and then stops; all subsequent triggers are ignored. In an abrupt stop, the module stops outputting samples immediately; all subsequent triggers are ignored.

Waveform Generation

Use waveform generation mode if you want to output a waveform, which is specified in a single buffer, repetitively.

In waveform mode, each channel in the output channel-gain list must write the same number of values, use the same output clock (refer to [page 82](#)), and use the same output trigger (refer to [page 82](#)).

[Figure 30](#) shows the timing diagram for a waveform generation operations.

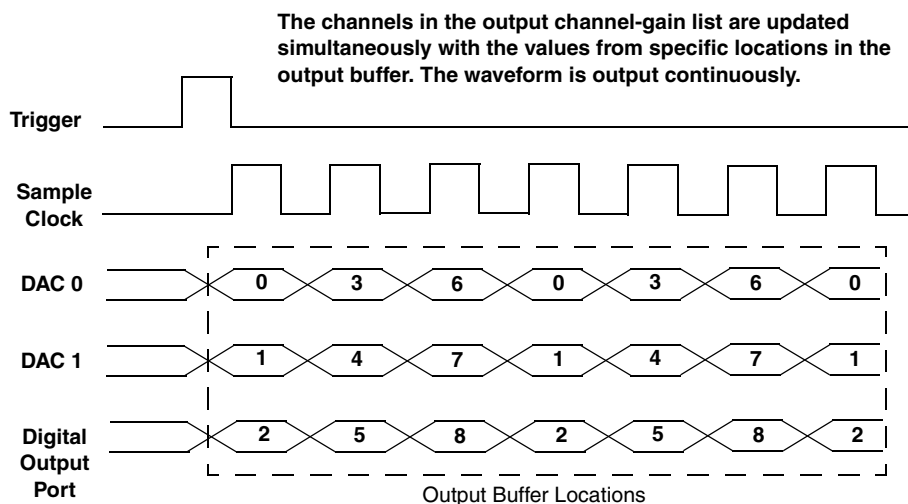


Figure 30: Timing Diagram for a Waveform Generation Operation

You can allocate a buffer of any size. Use software to fill the buffer with the values that you want to write to the channels in the output channel-gain list. For example, if your output channel-gain list contains only DAC0 and the digital output port, specify the values in the output buffer as follows: the first output value for DAC0, the first output value for the digital output port, the second output value for DAC0, the second output value for the digital output port, and so on.

When it detects a trigger, the host computer transfers the entire waveform pattern to the FIFO on the module, and the module starts writing output values to the output channels at the specified clock rate. The module recycles the data, allowing you to output the same pattern continuously.

When it reaches the end of the FIFO, the module returns to the first location of the FIFO and continues outputting the data. This process continues indefinitely until you stop it.

To select waveform generation mode, use software to specify the following parameters:

- Specify the data flow as Continuous
- Specify WrapSingleBuffer as True to use a single buffer
- Specify the clock source and clock frequency (refer to [page 82](#) for more information)
- Specify the trigger source (refer to [page 82](#) for more information)

Data Format and Transfer

Data from the host computer must use offset binary data encoding for analog output signals, such as 0000 to represent -10 V and FFFFh to represent +10 V. Using software, specify the data encoding as binary.

Before you begin writing data to the output channels, you must allocate and fill buffers with the appropriate data. An event is generated whenever a buffer is output. This allows you to output additional data as needed.

Error Conditions

The DT9818 module can report an error if one of the following conditions occurs:

- **Output FIFO Underflow** – The output channel-gain list data is not being sent from the host fast enough. This error is reported if an output sample clock pulse occurs while the output channel-gain list is empty. Note that if no new data is available to be output by either the DACs or the digital output port, the last value placed in the output channel-gain list continues to be output by the DACs/port. You can ignore this error when performing a single-value operation.
- **DAC Over Sample error** – The output sample clock rate is too fast. This error is reported if a new output sample clock occurs while the module is busy loading the next values from the output channel-gain list into the DACs and/or digital output port. To avoid this error, try slowing down the D/A clock, using a different wrap mode, increasing the buffer size to greater than 1K, and/or using more buffers.

Note: If you experience problems with a continuous analog output operation, try increasing the number of buffers and/or the size of the buffers you are using to a value greater than 1K.

Digital I/O Features

This section describes the following features of digital I/O operations:

- Digital I/O lines, described below
- Operation modes, described on [page 87](#)

Digital I/O Lines

DT9818 modules support one digital input port, consisting of 8 digital input lines (lines 0 to 7) and one digital output port, consisting of 8 digital output lines (lines 0 to 7). The resolution is fixed at 8-bits.

You can specify the digital I/O line that you want to read or write in a single-value digital I/O operation. Refer to [page 87](#) for more information about single-value operations.

In addition, you can specify the entire digital input port in the input channel-gain list to perform a continuous digital input operation; see [page 70](#) for more information. You can also specify the entire digital output port in an output channel-gain list to perform a continuous digital output operation; see [page 80](#) for more information.

A digital line is high if its value is 1; a digital line is low if its value is 0. On power up or reset, a low value (0) is output from each of the digital output lines.

Note: You can use pin 2 of the J3 connector to provide +5 V to the digital I/O lines, allowing the digital output lines to maintain their states if the USB cable is unplugged.

Operation Modes

The DT9818 module supports the following digital I/O operation modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. You use software to specify the digital I/O port and a gain of 1 (the gain is ignored). Data is then read from or written to all the digital I/O lines. For a single-value operation, you cannot specify a clock or trigger source.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Continuous digital I/O** takes full advantage of the capabilities of the DT9818 module. You can specify a clock source, scan mode, trigger source, buffer, and buffer wrap mode for the operation.
 - **Digital input** – For digital input operations, enter the digital input port (all 8 digital input lines) as either channel 32 (for the DT9818-32-OEM module) or channel 16 (for all other DT9818 modules) in the input channel-gain list; refer to [page 70](#) for more information. The input sample clock (internal or external) paces the reading of the digital input port (as well as the acquisition of the analog input and counter/timer channels); refer to [page 74](#) for more information.
 - **Digital output** – For digital output operations, enter the digital output port (all 8 digital output lines) as channel 2 in the output channel-gain list; refer to [page 80](#) for more information. The output clock (internal or external) paces the update of the digital output port (as well as the update of the analog output channels); refer to [page 82](#) for more information.

Counter/Timer Features

This section describes the following features of counter/timer (C/T) operations:

- C/T channels, described below
- C/T clock sources, described on [page 90](#)
- Gate types, described on [page 90](#)
- Pulse types and duty cycles, described on [page 91](#)
- C/T operation modes, described on [page 91](#)

C/T Channels

The DT9818 modules provide two 32-bit counter/timers. The counters are numbered 0 and 1. Each counter accepts a clock input signal and gate input signal and outputs a pulse (pulse output signal), as shown in [Figure 31](#).

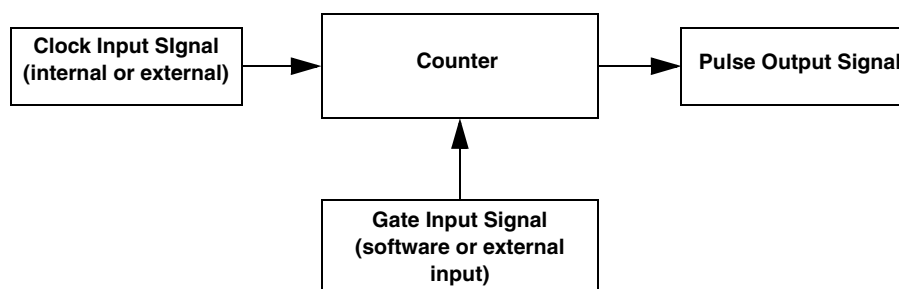


Figure 31: Counter/Timer Channel

To specify the counter/timer to use in software, specify the appropriate C/T subsystem. For example, counter/timer 0 corresponds to C/T subsystem element 0; counter/timer 1 corresponds to C/T subsystem element 1.

Using software, you can also specify one or more of the counter/timers in the input channel-gain list. You need two channel-gain list entries to read a 32-bit counter value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word.

If you need only the lower 16-bit word, you do not have to include the second entry. The entire 32-bit count value is latched when the lower 16-bit word is stored. This prevents the counter/timer from incrementing between samples. Refer to [page 71](#) for more information about using C/Ts in the input channel-gain list.

C/T Clock Sources

The following clock sources are available for the counter/timers:

- **Internal C/T clock** – The internal C/T clock always uses an 48 MHz time base. Through software, specify the clock source as internal, and specify the frequency at which to pace the operation (this is the frequency of the Counter n Out signal).
- **External C/T clock** – An external C/T clock is useful when you want to pace counter/timer operations at rates not available with the internal C/T clock or if you want to pace at uneven intervals. The frequency of the external C/T clock can range from 0.011176 Hz to 1 MHz.

Connect the external clock to the Counter n Clock input signal on the DT9818 module. Counter/timer operations start on the rising edge of the clock input signal.

Using software, specify the clock source as external and specify a clock divider between 2 and 4,294,967,295.

Note: The external C/T clock (the clock connected to the Counter n Clock input signal) determines how often you want to count events, measure frequency, measure the time interval between edges, or output a pulse.

If you specify a counter/timer in the input channel-gain list, the external A/D clock (the clock connected to the External ADC Clock input signal) determines how often you want to read the counter value. Refer to [page 71](#) for information about specifying counter/timer channels in the channel-gain list. Refer to [page 74](#) for more information about the external A/D clock.

Gate Types

The edge or level of the Counter n Gate signal determines when a counter/timer operation is enabled. The DT9818 module provides the following gate types:

- **None** – A software command enables any counter/timer operation immediately after execution.
- **Logic-low level external gate input** – Enables a counter/timer operation when the Counter n Gate signal is low, and disables the counter/timer operation when the Counter n Gate signal is high. Note that this gate type is used for event counting and rate generation modes; refer to [page 91](#) for more information about these modes.
- **Logic-high level external gate input** – Enables a counter/timer operation when the Counter n Gate signal is high, and disables a counter/timer operation when the Counter n Gate signal is low. Note that this gate type is used for event counting and rate generation modes; refer to [page 91](#) for more information about these modes.
- **Falling-edge external gate input** – Enables a counter/timer operation when a high-to-low transition is detected on the Counter n Gate signal. In software, this is called a low-edge gate type. Note that this gate type is used for edge-to-edge measurement, one-shot, and repetitive one-shot mode; refer to [page 91](#) for more information about these modes.

- **Rising-edge external gate input** – Enables a counter/timer operation when a low-to-high transition is detected on the Counter n Gate signal. In software, this is called a high-edge gate type. Note that this gate type is used for edge-to-edge measurement, one-shot, and repetitive one-shot mode; refer to [page 91](#) for more information about these modes.

Specify the gate type in software.

Pulse Output Types and Duty Cycles

The DT9818 modules can output the following types of pulses from each counter/timer:

- **High-to-low transitions** – The low portion of the total pulse output period is the active portion of the counter/timer clock output signal.
- **Low-to-high transitions** – The high portion of the total pulse output period is the active portion of the counter/timer pulse output signal.

You specify the pulse output type in software.

The duty cycle (or pulse width) indicates the percentage of the total pulse output period that is active. For example, a duty cycle of 50 indicates that half of the total pulse output is low and half of the total pulse output is high. You specify the duty cycle in software.

[Figure 32](#) illustrates a low-to-high pulse with a duty cycle of approximately 30%.

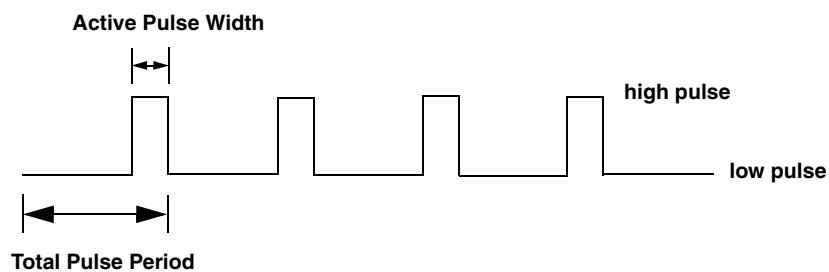


Figure 32: Example of a Low-to-High Pulse Output Type

Counter/Timer Operation Modes

DT9818 modules support the following counter/timer operation modes:

- Event counting
- Up/down counting
- Frequency measurement
- Edge-to-edge measurement
- Continuous edge-to-edge measurement
- Rate generation
- One-shot

- Repetitive one-shot

Note: The active polarity for each counter/timer operation mode is software-selectable.

The following subsections describe these modes in more detail.

Event Counting

Use event counting mode if you want to count the number of rising edges that occur on the Counter *n* Clock input when the Counter *n* Gate signal is active (low-level or high-level). Refer to [page 90](#) for information about specifying the active gate type.

You can count a maximum of 4,294,967,296 events before the counter rolls over to 0 and starts counting again.

Using software, specify the counter/timer mode as event counting (count), the C/T clock source as external, and the active gate type as low-level or high-level.

Make sure that the signals are wired appropriately. Refer to [page 46](#) for an example of connecting an event counting application.

Up/Down Counting

Use up/down counting mode if you want to increment or decrement the number of rising edges that occur on the Counter *n* Clock input, depending on the level of the Counter *n* Gate signal.

If the Counter *n* Gate signal is high, the C/T increments; if the specified gate signal is low, the C/T decrements.

Using software, specify the counter/timer mode as up/down counting (up/down), and the C/T clock source as external. Note that you do not specify the gate type in software.

Make sure that the signals are wired appropriately. Refer to [page 47](#) for an example of connecting an up/down counting application.

Note: Initialize the counter/timer so that the C/T never increments above FFFFFFFFh or decrements below 0.

Frequency Measurement

Use frequency measurement mode if you want to measure the number of rising edges that occur on the Counter n Clock input over a specified duration.

You can connect a pulse of a known duration (such as a one-shot output of another user counter) to the Counter n Gate input signal. Use software to set up the counter/timers as follows:

1. Set up one of the counter/timers for one-shot mode, specifying the clock source as internal, the clock frequency, the gate type that enables the operation as rising edge or falling edge, and the polarity of the output pulse as high-to-low transition or low-to-high transition of the output pulse.
2. Set up the counter/timer that will measure the frequency for event counting mode, specifying the type of clock pulses to count and the gate type (this should match the pulse output type of the counter/timer set up for one-shot mode).
3. Start both counters (pulses are not counted until the active period of the one-shot pulse is generated).
4. Read the number of pulses counted. (Allow enough time to ensure that the active period of the one-shot occurred and that events have been counted.)
5. Determine the measurement period using the following equation:

$$\text{Measurement period} = \frac{1}{\text{Clock Frequency}} * \text{Active Pulse Width}$$

6. Determine the frequency of the clock input signal using the following equation:

$$\text{Frequency Measurement} = \frac{\text{Number of Events}}{\text{Measurement Period}}$$

Edge-to-Edge Measurement

Use edge-to-edge measurement mode if you want to measure the time interval between a specified start edge and a specified stop edge.

The start edge and the stop edge can occur on the rising edge of the Counter n Gate input, the falling edge of the Counter n Gate input, the rising edge of the Counter n Clock input, or the falling edge of the Counter n Clock input. When the start edge is detected, the counter/timer starts incrementing, and continues incrementing until the stop edge is detected. The C/T then stops incrementing until it is enabled to start another measurement. When the operation is complete, you can read the value of the counter.

You can use edge-to-edge measurement to measure the following:

- Pulse width of a signal pulse (the amount of time that a signal pulse is in a high or a low state, or the amount of time between a rising edge and a falling edge or between a falling edge and a rising edge). You can calculate the pulse width as follows:
 - Pulse width = Number of counts/48 MHz

- Period of a signal pulse (the time between two occurrences of the same edge - rising edge to rising edge or falling edge to falling edge). You can calculate the period as follows:
 - $\text{Period} = 1/\text{Frequency}$
 - $\text{Period} = \text{Number of counts}/48 \text{ MHz}$
- Frequency of a signal pulse (the number of periods per second). You can calculate the frequency as follows:
 - $\text{Frequency} = 48 \text{ MHz}/\text{Number of Counts}$

Using software, specify the counter/timer mode as edge-to-edge measurement mode (measure), the C/T clock source as internal, the start edge type, and the stop edge type.

Make sure that the signals are wired appropriately. Refer to [page 49](#) for an example of connecting an edge-to-edge measurement application.

Continuous Edge-to-Edge Measurement

In continuous edge-to-edge measurement mode, the counter starts incrementing when it detects the specified start edge. When it detects the next start edge type, the value of the counter is stored and the next edge-to-edge measurement operation begins automatically.

Every time an edge-to-edge measurement operation completes, the previous measurement is overwritten with the new value. When you read the counter as part of the analog input data stream, the current value (from the last edge-to-edge measurement operation) is returned and the value of the counter is reset to 0. Refer to [page 93](#) for more information on edge-to-edge measurement mode.

Note: This mode is typically used when you want to read the counter/timer channels through the input channel-gain list, as described on [page 71](#).

If you read the counter before the measurement is complete, 0 is returned.

To select continuous edge-to-edge measurement mode, use software to specify the counter/timer mode as continuous measure, the C/T clock source as internal, and the start edge type.

Rate Generation

Use rate generation mode to generate a continuous pulse output signal from the Counter *n* Out line; this mode is sometimes referred to as continuous pulse output or pulse train output. You can use this pulse output signal as an external clock to pace other operations, such as analog input, analog output, or other counter/timer operations.

The pulse output operation is enabled whenever the Counter *n* Gate signal is at the specified level. While the pulse output operation is enabled, the counter outputs a pulse of the specified type and frequency continuously. As soon as the operation is disabled, rate generation stops.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). You can output pulses using a maximum frequency of 1 MHz (this is the frequency of the Counter n Out signal). Refer to [page 90](#) for more information about the C/T clock sources.

Note: Due to the isolation circuitry of the hardware, the duty cycle of the output pulse is affected as the frequency increases above 10 kHz; therefore, you may not achieve the duty cycle you expect.

Using software, specify the counter/timer mode as rate generation (rate), the C/T clock source as either internal or external, the clock divider (for an internal clock), the polarity of the output pulses (high-to-low transition or low-to-high transition), the duty cycle of the output pulses, and the active gate type (low-level or high-level). Refer to [page 91](#) for more information about pulse output signals and to [page 90](#) for more information about gate types.

Make sure that the signals are wired appropriately. Refer to [page 51](#) for an example of connecting a rate generation application.

One-Shot

Use one-shot mode to generate a single pulse output signal from the Counter n Out line when the specified edge is detected on the Counter n Gate signal. You can use this pulse output signal as an external digital (TTL) trigger to start other operations, such as analog input or analog output operations.

After the single pulse is output, the one-shot operation stops. All subsequent clock input signals and gate input signals are ignored.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). Refer to [page 90](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as one-shot, the clock source and clock divider, the polarity of the output pulse (high-to-low transition or low-to-high transition), and the active gate type (rising edge or falling edge). Refer to [page 91](#) for more information about pulse output types and to [page 90](#) for more information about gate types.

Note: In the case of a one-shot operation, it is recommended that you set the duty cycle to 100%.

Due to the isolation circuitry of the hardware, the width of the output pulse increases as the clock frequency increases above 10 kHz. Therefore, you may not achieve the pulse width you expect.

Make sure that the signals are wired appropriately. Refer to [page 51](#) for an example of connecting a one-shot application.

Repetitive One-Shot

Use repetitive one-shot mode to generate a pulse output signal from the Counter n Out line whenever the specified edge is detected on the Counter n Gate signal. You can use this mode to clean up a poor clock input signal by changing its pulse width, and then outputting it.

The module continues to output pulses until you stop the operation. Note that any Counter n Gate signals that occur while the pulse is being output are not detected by the module.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). Note that in repetitive one-shot mode, the internal C/T clock is more useful than the external clock; refer to [page 90](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as repetitive one-shot, the polarity of the output pulses (high-to-low transition or low-to-high transition), the C/T clock source as external (recommended), and the active gate type (rising edge or falling edge). Refer to [page 91](#) for more information about pulse output types and to [page 90](#) for more information about gates.

Note: In a repetitive one-shot operation, the maximum frequency of the external clock going into the DT9818 is 1 MHz and the maximum frequency of the signal that is output by the DT9818 is 1 MHz.

In the case of a one-shot operation, it is recommended that you set the duty cycle to 100%.

Due to the isolation circuitry of the hardware, the width of the output pulse increases as the clock frequency increases above 10 kHz. Therefore, you may not achieve the pulse width you expect.

Make sure that the signals are wired appropriately. Refer to [page 51](#) for an example of connecting a repetitive one-shot application.



Supported Device Driver Capabilities

Data Flow and Operation Options.....	99
Buffering	100
Triggered Scan Mode	100
Data Encoding.....	100
Channels	101
Gain	101
Ranges	102
Resolution	102
Current and Resistance Support	102
Thermocouple, RTD, and Thermistor Support	103
IEPE Support.....	104
Bridge and Strain Gage Support	104
Start Triggers.....	105
Reference Triggers	105
Clocks.....	106
Counter/Timers	107
Tachometers.....	108

The DT9818 Device Driver provides support for the analog input (A/D), analog output (D/A), digital input (DIN), digital output (DOUT), and counter/timer (C/T) subsystems. For information on how to configure the device driver, refer to [page 32](#).

Table 9: DT9818 Subsystems

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Total Subsystems on Module	1	1	1 ^a	1 ^b	2	0	0

- a. The DIN subsystem contains 8 digital input lines.
 b. The DOUT subsystem contains 8 digital output lines.

The tables in this chapter summarize the features available for use with the DT-Open Layers for .NET Class Library and the DT9818 modules. The DT-Open Layers for .NET Class Library provides properties that return support information for specified subsystem capabilities.

The first row in each table lists the subsystem types. The first column in each table lists all possible subsystem capabilities. A description of each capability is followed by the property used to describe that capability in the DT-Open Layers for .NET Class Library.

Note: The following tables include the capabilities that can be queried. However, some capabilities may not be supported by your device. Blank fields represent unsupported options.

For more information, refer to the description of these properties in the DT-Open Layers for .NET Class Library online help or *DT-Open Layers for .NET Class Library User's Manual*.

Data Flow and Operation Options

Table 10: Data Flow and Operation Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Single-Value Operation Support SupportsSingleValue	Yes	Yes	Yes	Yes	Yes		
Simultaneous Single-Value Output Operations SupportsSetSingleValues							
Continuous Operation Support SupportsContinuous	Yes	Yes	Yes ^a	Yes ^b	Yes ^c		
Continuous Operation until Trigger SupportsContinuousPreTrigger							
Continuous Operation before & after Trigger SupportsContinuousPrePostTrigger							
Waveform Operations Using FIFO Only SupportsWaveformModeOnly							
Simultaneous Start List Support SupportsSimultaneousStart	Yes	Yes					
Supports Programmable Synchronization Modes SupportsSynchronization							
Synchronization Modes SynchronizationMode							
Interrupt Support SupportsInterruptOnChange							
FIFO Size, in Samples FifoSize	1 kSamples	16 kSamples					
Muting and Unmuting the Output Voltage SupportsMute							
Auto-Calibrate Support SupportsAutoCalibrate							

- The DIN subsystem supports continuous mode by allowing you to read the digital input port (all 8 digital input lines) using the analog input channel list.
- The DOUT subsystem supports continuous mode by allowing you to output data from the digital output port (all 8 digital output lines) using the output channel list.
- The C/T subsystem supports continuous mode by allowing you to read the value of one or more of the two counter/timer channels using the analog input channel list.

Buffering

Table 11: Buffering Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Buffer Support SupportsBuffering	Yes	Yes					
Single Buffer Wrap Mode Support SupportsWrapSingle		Yes					
Inprocess Buffer Flush Support SupportsInProcessFlush	Yes						

Triggered Scan Mode

Table 12: Triggered Scan Mode Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Triggered Scan Support SupportsTriggeredScan	Yes						
Maximum Number of CGL Scans per Trigger MaxMultiScanCount	256 ^a	0	0	0	0		0
Maximum Retrigger Frequency MaxRetriggerFreq	75 kHz	0	0	0	0		0
Minimum Retrigger Frequency MinRetriggerFreq	0.75 Hz	0	0	0	0		0

- a. The channel list depth of 1024 entries in conjunction with a multiscan of 256 provides an effective channel list depth of up to 256K entries.

Data Encoding

Table 13: Data Encoding Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Binary Encoding Support SupportsBinaryEncoding	Yes	Yes	Yes	Yes	Yes		
Twos Complement Support SupportsTwosCompEncoding							
Returns Floating-Point Values ReturnsFloats							

Channels

Table 14: Channel Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Number of Channels NumberOfChannels	21 or 37 ^a	3 ^b	1	1	1		0
SE Support SupportsSingleEnded	Yes						
SE Channels MaxSingleEndedChannels	32	0	0	0	0		0
DI Support SupportsDifferential	Yes	Yes	Yes	Yes	Yes		
DI Channels MaxDifferentialChannels	16	2	1	1	1		0
Maximum Channel-Gain List Depth CGLDepth	1024	3	1	1	0		0
Simultaneous Sample-and-Hold Support SupportsSimultaneousSampleHold							
Channel-List Inhibit SupportsChannelListInhibit	Yes						
Support MultiSensor Inputs SupportsMultiSensor							
Bias Return Termination Resistor Support SupportsInputTermination							

a. The DT9818-32-OEM supports 32 single-ended or 16 differential channels, the DT9818-OEM supports 16 single-ended or 8 differential channels, the DT9818-16SE-BNC supports 16 single-ended channels, and the DT9818-8DI-BNC supports 8 differential channels. In addition, you can read the digital input port and counter/timer channels through the analog input channel list. The channel numbers for the digital input port and the counter/timer channels depend on the module you are using. Refer to [page 70](#) and [page 71](#) or more information.

b. Channels 0 and 1 are the analog output channels, channel 2 is the digital output port.

Gain

Table 15: Gain Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Programmable Gain Support SupportsProgrammableGain	Yes						
Number of Gains NumberOfSupportedGains	4	1	1	1	0		0
Gains Available SupportedGains	1, 2, 4, 8	1	1	1			

Ranges

Table 16: Range Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Number of Voltage Ranges NumberOfRanges	1	1	0	0	0		0
Available Ranges SupportedVoltageRanges	±10 V	±10 V					

Resolution

Table 17: Resolution Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Software Programmable Resolution SupportsSoftwareResolution							
Number of Resolutions NumberOfResolutions	1	1	1	1	1		0
Available Resolutions SupportedResolutions	16	16	8	8	32		

Current and Resistance Support

Table 18: Current and Resistance Support Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Current Support SupportsCurrent							
Current Output Support SupportsCurrentOutput							
Resistance Support SupportsResistance							
Software Programmable External Excitation Current Source for Resistance SupportsExternalExcitationCurrentSrc							
Software Programmable Internal Excitation Current Source SupportsInternalExcitationCurrentSrc							
Available Excitation Current Source Values SupportedExcitationCurrentValues							

Thermocouple, RTD, and Thermistor Support

Table 19: Thermocouple, RTD, and Thermistor Support Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Thermocouple Support SupportsThernocouple							
RTD Support SupportsRTD							
Thermistor Support SupportsThermistor							
Voltage Converted to Temperature in Hardware SupportsTemperatureDataInStream							
Supported Thermocouple Types ThermocoupleType							
Supported RTD Types RTDType							
Supports CJC Source Internally in Hardware SupportsCjcSourceInternal							
Supports CJC Channel SupportsCjcSourceChannel							
Available CJC Channels CjcChannel							
Supports Interleaved CJC Values in Data Stream SupportsInterleavedCjcTemperaturesInStream							
Supported RTD Types RTDType							
RTD R0 Coefficient RtdR0							
Supports Temperature Filters SupportsTemperatureFilters							
Temperature Filter Types TemperatureFilterType							

IEPE Support

Table 20: IEPE Support Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
IEPE Support SupportsIEPE							
Software Programmable AC Coupling SupportsACCoupling							
Software Programmable DC Coupling SupportsDCCoupling		Yes					
Software Programmable External Excitation Current Source SupportsExternalExcitationCurrentSrc							
Software Programmable Internal Excitation Current Source SupportsInternalExcitationCurrentSrc							
Available Excitation Current Source Values SupportedExcitationCurrentValues							

Bridge and Strain Gage Support

Table 21: Bridge and Strain Gage Support Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Bridge Support SupportsBridge							
Supported Bridge Configurations BridgeConfiguration							
Strain Gage Support SupportsStrainGage							
Supported Strain Gage Bridge Configurations StrainGageBridgeConfiguration							
External Excitation Voltage SupportsExternalExcitationVoltage							
Internal Excitation Voltage SupportsInternalExcitationVoltage							
Shunt Calibration SupportsShuntCalibration							
Voltage Excitation Per Channel SupportedPerChannelVoltageExcitation							
Minimum Excitation Voltage MinExcitationVoltage							
Maximum Excitation Voltage MaxExcitationVoltage							

Start Triggers

Table 22: Start Trigger Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Software Trigger Support SupportsSoftwareTrigger	Yes	Yes	Yes	Yes	Yes		
External Positive TTL Trigger Support SupportsPosExternalTTLTrigger	Yes	Yes			Yes		
External Negative TTL Trigger Support SupportsNegExternalTTLTrigger	Yes	Yes					
External Positive TTL Trigger Support for Single-Value Operations SupportsSvPosExternalTTLTrigger							
External Negative TTL Trigger Support for Single-Value Operations SupportsSvNegExternalTTLTrigger							
Positive Threshold Trigger Support SupportsPosThresholdTrigger							
Negative Threshold Trigger Support SupportsNegThresholdTrigger							
Digital Event Trigger Support SupportsDigitalEventTrigger							

Reference Triggers

Table 23: Reference Trigger Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
External Positive TTL Trigger Support SupportsPosExternalTTLTrigger							
External Negative TTL Trigger Support SupportsNegExternalTTLTrigger							
Positive Threshold Trigger Support SupportsPosThresholdTrigger							
Negative Threshold Trigger Support SupportsNegThresholdTrigger							
Digital Event Trigger Support SupportsDigitalEventTrigger							
Threshold Trigger Channel SupportedThresholdTriggerChannel							
Sync Bus Support SupportsSyncBusTrigger							
Post-Trigger Scan Count SupportsPostTriggerScanCount							

Clocks

Table 24: Clock Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Internal Clock Support SupportsInternalClock	Yes	Yes	Yes	Yes	Yes		
External Clock Support SupportsExternalClock	Yes	Yes			Yes		
Simultaneous Input/Output on a Single Clock Signal SupportsSimultaneousClocking		Yes					
Base Clock Frequency BaseClockFrequency	48 MHz	48 MHz	0	0	48 MHz		0
Maximum Clock Divider MaxExtClockDivider	1	1	1	1	4,294,967,295		0
Minimum Clock Divider MinExtClockDivider	1	1	1	1	2		0
Maximum Frequency MaxFrequency	150 kHz	150 kHz	0	0	1 MHz		0
Minimum Frequency MinFrequency	0.75 Hz	0.75 Hz	0	0	0.011176 Hz		0

Counter/Timers

Table 25: Counter/Timer Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Cascading Support SupportsCascading							
Event Count Mode Support SupportsCount					Yes		
Generate Rate Mode Support SupportsRateGenerate					Yes		
One-Shot Mode Support SupportsOneShot					Yes		
Repetitive One-Shot Mode Support SupportsOneShotRepeat					Yes		
Up/Down Counting Mode Support SupportsUpDown					Yes		
Edge-to-Edge Measurement Mode Support SupportsMeasure					Yes		
Continuous Edge-to-Edge Measurement Mode Support SupportsContinuousMeasure					Yes		
High to Low Output Pulse Support SupportsHighToLowPulse					Yes		
Low to High Output Pulse Support SupportsLowToHighPulse					Yes		
Variable Pulse Width Support SupportsVariablePulseWidth					Yes ^a		
None (internal) Gate Type Support SupportsGateNone					Yes		
High Level Gate Type Support SupportsGateHighLevel					Yes ^b		
Low Level Gate Type Support SupportsGateLowLevel					Yes ^b		
High Edge Gate Type Support SupportsGateHighEdge					Yes ^b		
Low Edge Gate Type Support SupportsGateLowEdge					Yes ^b		
Level Change Gate Type Support SupportsGateLevel							
Clock-Falling Edge Type SupportsClockFalling					Yes		
Clock-Rising Edge Type SupportsClockRising					Yes		
Gate-Falling Edge Type SupportsGateFalling					Yes		

Table 25: Counter/Timer Options (cont.)

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Gate-Rising Edge Type SupportsGateRising					Yes		
Interrupt-Driven Operations SupportsInterrupt					Yes		

- a. In one-shot and repetitive one-shot mode, the pulse width is set to 100% automatically
- b. High-edge and low-edge are supported for one-shot and repetitive one-shot modes. High-level and low-level are supported for event counting, up/down counting, frequency measurement, edge-to-edge measurement, continuous edge-to-edge measurement, and rate generation modes.

Tachometers

Table 26: Tachometer Options

DT9818	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Tachometer Falling Edges SupportsFallingEdge							
Tachometer Rising Edges SupportsRisingEdge							
Tachometer Stale Data Flag SupportsStaleDataFlag							



Troubleshooting

General Checklist	110
Technical Support	112
If Your Module Needs Factory Service	113

General Checklist

Should you experience problems using a DT9818 module, do the following:

1. Read all the documentation provided for your product, including any “Read This First” information.
2. Check the Data Acquisition OMNI CD for any README files and ensure that you have used the latest installation and configuration information available.
3. Check that your system meets the requirements stated on [page 28](#).
4. Check that you have installed your hardware properly using the instructions in [Chapter 2](#).
5. Check that you have configured the device driver properly using the instructions on [page 32](#).
6. Check that you have wired your signals properly using the instructions in [Chapter 3](#).
7. Search the DT Knowledgebase in the Support section of the Data Translation web site (at www.datatranslation.com) for an answer to your problem.

If you still experience problems, try using the information in [Table 27](#) to isolate and solve the problem. If you cannot identify the problem, refer to [page 110](#).

Table 27: Troubleshooting Problems

Symptom	Possible Cause	Possible Solution
Module is not recognized	You plugged the module into your computer before installing the device driver.	From the Control Panel > System > Hardware > Device Manager, uninstall any unknown devices (showing a yellow question mark). Then, run the setup program on your OMNI CD to install the USB device drivers, and reconnect your USB module to the computer.
Module does not respond.	The module configuration is incorrect.	Check the configuration of your device driver.
	The module is damaged.	Contact Data Translation for technical support; refer to page 112 .
Intermittent operation.	Loose connections or vibrations exist.	Check your wiring and tighten any loose connections or cushion vibration sources.
	The module is overheating.	Check environmental and ambient temperature; consult the module’s specifications on page 130 and the documentation provided by your computer manufacturer for more information.
	Electrical noise exists.	Check your wiring and either provide better shielding or reroute unshielded wiring.
Device failure error reported.	The DT9818 module cannot communicate with the Microsoft bus driver or a problem with the bus driver exists.	Check your cabling and wiring and tighten any loose connections.
	The DT9818 module was removed while an operation was being performed.	Ensure that your DT9818 module is properly connected.

Table 27: Troubleshooting Problems (cont.)

Symptom	Possible Cause	Possible Solution
Data appears to be invalid.	An open connection exists.	Check your wiring and fix any open connections.
	A transducer is not connected to the channel being read.	Check the transducer connections.
	The module is set up for differential inputs while the transducers are wired as single-ended inputs or vice versa.	Check your wiring and ensure that what you specify in software matches your hardware configuration.
	The DT9818 module is out of calibration.	DT9818 modules are calibrated at the factory. If you want to readjust the calibration of the analog input or analog output circuitry, refer to Chapter 3 starting on page 33 .
Computer does not boot.	The power supply of the computer is too small to handle all the system resources.	Check the power requirements of your system resources and, if needed, get a larger power supply; consult the module's specifications on page 130 .
USB 2.0 is not recognized.	Your operating system does not have the appropriate Service Pack installed.	Ensure that you load the appropriate Windows Service Pack (version 2 for Windows XP). If you are unsure of whether you are using USB 2.0 or USB 1.1, run the Open Layers Control Panel applet, described on page 32 .
	Standby mode is enabled on your PC.	For some PCs, you may need to disable standby mode on your system for proper USB 2.0 operation. Consult Microsoft for more information.

Technical Support

If you have difficulty using a DT9818 module, Data Translation's Technical Support Department is available to provide technical assistance.

To request technical support, go to our web site at <http://www.datatranslation.com> and click on the Support link.

When requesting technical support, be prepared to provide the following information:

- Your product serial number
- The hardware/software product you need help on
- The version of the OMNI CD you are using
- Your contract number, if applicable

If you are located outside the USA, contact your local distributor; see our web site (www.datatranslation.com) for the name and telephone number of your nearest distributor.

If Your Module Needs Factory Service

If your module must be returned to Data Translation, do the following:

1. Record the module's serial number, and then contact the Customer Service Department at (508) 481-3700, ext. 1323 (if you are in the USA) and obtain a Return Material Authorization (RMA).

If you are located outside the USA, call your local distributor for authorization and shipping instructions; see our web site (www.datatranslation.com) for the name and telephone number of your nearest distributor. All return shipments to Data Translation must be marked with the correct RMA number to ensure proper processing.

2. Using the original packing materials, if available, package the module as follows:
 - Wrap the module in an electrically conductive plastic material. Handle with ground protection. A static discharge can destroy components on the module.
 - Place in a secure shipping container.
3. Return the module to the following address, making sure the RMA number is visible on the outside of the box.

Customer Service Dept.
Data Translation, Inc.
100 Locke Drive
Marlboro, MA 01752-1192



Calibration

Using the Calibration Utility	117
Calibrating the Analog Input Subsystem	118
Calibrating the Analog Output Subsystem	120

DT9818 modules are calibrated at the factory and should not require calibration for initial use. We recommend that you check and, if necessary, readjust the calibration of the analog input and analog output circuitry on the DT9818 modules every six months using the DT9818 Calibration Utility.

This chapter describes how to calibrate the analog input and output subsystems of DT9818 modules using the DT9818 Calibration Utility.

Using the Calibration Utility

Start the DT9818 Calibration Utility as follows:

1. Click **Start** from the Task Bar, and then select **Programs | Data Translation, Inc | Calibration | DT9818 Calibration Utility**.

The main menu of the DT9818 Calibration Utility appears.

2. Select the module to calibrate, and then click **OK**.

Once the DT9818 Calibration Utility is running, you can calibrate the analog input circuitry (either automatically or manually), described on [page 118](#), or the analog output circuitry of the DT9818 module, described on [page 120](#).

Calibrating the Analog Input Subsystem

This section describes how to use the DT9818 Calibration Utility to calibrate the analog input subsystem of aDT9818 module.

Connecting a Precision Voltage Source

To calibrate the analog input circuitry, you need to connect an external precision voltage source that is capable of providing +9.3750 V to the DT9818 module, as follows:

1. Connect the precision voltage source to Analog In 0 (AD Ch0).
2. Connect Analog In 1 (AD Ch1) to Analog Input 1 Return.

Using the Auto-Calibration Procedure

Auto-calibration is the easiest to use and is the recommended calibration method. To auto-calibrate the analog input subsystem, do the following:

1. Select the **A/D Configuration** tab of the DT9818 Calibration Utility.
2. Set the voltage supply on AD Ch0 to 0 V.
3. Click **Start Auto Calibration**.
A message appears notifying you to verify that 0 V is applied to AD Ch0.
4. Check that the supplied voltage to AD Ch0 is 0 V, and then click **OK**.
The offset value is calibrated. When the offset calibration is complete, a message appears notifying you to set the input voltage of AD Ch 0 to +9.375 V.
5. Check that the supplied voltage to AD Ch0 is +9.375V, and then click **OK**.
The gain value is calibrated, completing the calibration process.

Note: At any time, you can click **Restore Factory Settings** to reset the A/D calibration values to their original factory settings. This process will undo any auto or manual calibration settings.

Using the Manual Calibration Procedure

If you want to manually calibrate the analog input circuitry instead of auto-calibrating it, do the following:

1. Adjust the offset as follows:
 - a. Verify that 0 V is applied to AD Ch0, and that A/D Channel Select is set to Channel 0.
The current voltage reading for this channel is displayed in the A/D Value window.
 - b. Adjust the offset by entering values between 0 and 255 in the Offset edit box, or by clicking the up/down buttons until the A/D Value is 0 V.

2. Adjust the gain as follows:
 - a. Verify that 9.375 V is applied to AD Ch0, and that A/D Channel Select is set to Channel 0.
The current voltage reading for this channel is displayed in the A/D Value window.
 - b. Adjust the gain by entering values between 0 and 255 in the Gain edit box, or by clicking the up/down buttons until the A/D Value is 9.3750 V.

Note: At any time, you can click **Restore Factory Settings** to reset the A/D calibration values to their original factory settings. This process will undo any auto or manual calibration settings.

Once you have finished this procedure, continue with [“Calibrating the Analog Output Subsystem”](#) on page 120.

Calibrating the Analog Output Subsystem

To calibrate the analog output circuitry of the DT9818 module, connect an external precision voltmeter to analog output channels 0 and 1 of the DT9818 module, and then perform the following steps:

1. Select the D/A Configuration tab of the DT9818 Calibration Utility.
2. Connect an external precision voltmeter to Analog Output 0 (DAC Ch0) of the DT9818 module.
3. In the DAC Output Voltage box, select **-9.375 V**.
4. Adjust the offset by entering values between 0 and 255 in the DAC 0 Offset edit box or by clicking the up/down buttons until the voltmeter reads **-9.375 V**.
5. In the DAC Output Voltage box, select **9.375 V**.
6. Adjust the gain by entering values between 0 and 255 in the DAC 0 Gain edit box or by clicking the up/down buttons until the voltmeter reads **9.375 V**.
7. Connect an external precision voltmeter to Analog Output 1 (DAC Ch1) of the DT9818 module.
8. In the DAC Output Voltage box, select **-9.375 V**.
9. Adjust the offset by entering values between 0 and 255 in the DAC 1 Offset edit box or by clicking the up/down buttons until the voltmeter reads **-9.375 V**.
10. In the DAC Output Voltage box, select **9.375 V**.
11. Adjust the gain by entering values between 0 and 255 in the DAC 1 Gain edit box or by clicking the up/down buttons until the voltmeter reads **9.375 V**.

Once you have finished this step, the analog output circuitry is calibrated.

Note: At any time, you can click **Restore Factory Settings** to reset the D/A calibration values to their original factory settings. This process will undo any D/A calibration settings.

To close the DT9818 Calibration Utility, click the close box in the upper right corner of the window.



Specifications

Analog Input Specifications	122
Analog Output Specifications	124
Digital Input and Digital Output Specifications	125
Counter/Timer Specifications	126
External Trigger Specifications	127
Internal Clock Specifications	128
External Clock Specifications	129
Power, Physical, and Environment Specifications	130
Connector Specifications	131
Regulatory Specifications	132

Analog Input Specifications

Table 28 lists the specifications for the A/D subsystem on the DT9818 module.

Table 28: A/D Subsystem Specifications

Feature	Specifications
Number of analog input channels Single-ended:	16 for DT9818-OEM and DT9818-16SE-BNC 32 for DT9818-32-OEM and DT9818-32-STP
Pseudo-differential:	16 for DT9818-OEM and DT9818-16SE-BNC 32 for DT9818-32-OEM and DT9818-32-STP
Differential:	8 for DT9818-OEM and DT9818-8DI-BNC 16 for DT9818-32-OEM and DT9818-32-STP
Number of gains	4 (1, 2, 4, 8)
Resolution	16 bits
Data encoding	Offset binary
System accuracy, to % of FSR Gain = 1: Gain = 2: Gain = 4: Gain = 8:	$\pm 0.01\%$ $\pm 0.02\%$ $\pm 0.02\%$ $\pm 0.03\%$
Range Gain = 1: Gain = 2: Gain = 4: Gain = 8:	± 10 V ± 5 V ± 2.5 V ± 1.25 V
Nonlinearity	± 3 LSBs
Differential nonlinearity	± 2 LSBs, monotonic to 15 bits
Inherent quantizing error	$\frac{1}{2}$ LSB
Drift Zero: Gain: Differential linearity:	± 10 $\mu\text{V}/^\circ\text{C}$ ± 30 ppm of FSR/ $^\circ\text{C}$ ± 2 ppm/ $^\circ\text{C}$
Input impedance Off channel: On channel:	100 M Ω // 10 pF 100 M Ω // 100 pF
Input bias current	± 20 nA
Common mode voltage (Signal + common mode voltage)	± 11 V maximum
Common mode rejection ratio	80 dB, gain = 1 @ 1 k Ω
Maximum input voltage (without damage) Power on: Power off:	± 30 V ± 20 V

Table 28: A/D Subsystem Specifications (cont.)

Feature	Specifications
A/D conversion time	4.0 μ s
Channel acquisition time ($\pm 1/2$ LSB)	2 μ s, typical
Sample-and-hold Aperture uncertainty: Aperture delay:	0.2 ns, typical 50 ns, typical
Throughput Single channel: Multiple channel:	150 kSamples/s 150 kSamples/s divided by the number of channels
ESD protection Arc: Contact:	8 kV 4 kV
Reference	+2.5 V \pm 0.020 V (internal)
Monotonicity	1 LSB Monotonic
Effective Number of Bits (ENOB) at full-scale	14.1 bits typical at 1 kHz
Spurious Free Dynamic Range (SFDR)	100 dB typical

Analog Output Specifications

Table 29 lists the specifications for the D/A subsystem on the DT9818 module.

Table 29: D/A Subsystem Specifications

Feature	Specifications
Number of analog output channels	2
Number of elements	2
Resolution	16 bits
Data encoding	Offset binary
Nonlinearity	1.0 LSB
Differential nonlinearity	1.0 LSB
Inherent quantizing error	1.0 LSB
Output range	± 10 V
Error Zero: Gain:	Adjustable to 0 Adjustable to 0
Drift Zero (bipolar): Gain:	± 10 ppm of FSR/ $^{\circ}$ C ± 30 ppm of FSR/ $^{\circ}$ C
Throughput, 100 mV steps (per DAC) Waveform generation mode: Continuously paced analog output mode:	150 kSamples/s per channel 150 kSamples/s per channel
FIFO	16 kSamples, total
Current output	± 3 mA maximum load
Output impedance	0.1 Ω maximum
Capacitive driver capability	0.004 μ F
Protection	Short circuit to analog ground
Power-on voltage	0 V ± 10 mV maximum
Settling time to 0.01% of FSR	6.0 μ s, 100 mV steps 10.0 μ s, 10 V steps
Slew rate	10 V/ μ s
Glitch energy	1.0 nV-s typical
ESD protection Arc: Contact:	8 kV 4 kV
Monotonicity	1 LSB

Digital Input and Digital Output Specifications

Table 30 lists the specifications for the DIN/DOUT subsystems on the DT9818 module.

Table 30: DIN/DOUT Subsystem Specifications

Feature	Specifications
Number of digital I/O lines	16 (8 digital input, 8 digital output)
Number of ports	2 (8-bits each)
Input termination	Inputs tied to +5 V through 22 k Ω pull-up resistors
Logic family	TTL (+5 V tolerant)
Logic sense	Positive true
Inputs Input type: Input logic load: High input voltage: Low input voltage: Low input current:	Level-sensitive 1 LVTTTL 2.0 V minimum 0.8 V maximum 0.4 mA maximum
Outputs Fan out: High output: Low output: High output current: Low output current:	6 mA 3.84 V minimum 0.33 V maximum –6 mA maximum 6 mA maximum
Interrupt on change	No
Clocked with sample clock	Yes
Software I/O selectable	No

Counter/Timer Specifications

Table 31 lists the specifications for the C/T subsystems on the DT9818 modules.

Table 31: C/T Subsystem Specifications

Feature	Specifications
Number of counter/timers	2
Resolution	32-bits per channel
Minimum pulse width (minimum amount of time it takes a C/T to recognize an input pulse)	55.5 ns
Logic family	LVTTL (+5 V tolerance)
Inputs Input logic load: High input voltage: Low input voltage: Low input current:	1 LVTTL 2.0 V minimum 0.8 V maximum -0.4 mA maximum
Outputs Fan out: High output: Low output: High output current: Low output current:	8 mA 2.0 V minimum 0.8 V maximum -8 mA maximum 8 mA maximum

External Trigger Specifications

Table 32 lists the specifications for the external A/D and D/A triggers on the DT9818 module.

Table 32: External A/D and D/A Trigger Specifications

Feature	Specifications
Trigger sources Internal: External:	Software-initiated Software-selectable
Input type	Edge-sensitive
Logic family	LVTTL (+5 V tolerance)
Inputs Input logic load: Input termination: High input voltage: Low input voltage: High input current: Low input current:	1 LVTTL 22 k Ω pull-up to +3.3 V 2.2 V 0.6 V 25 μ A maximum -0.25 mA maximum
Minimum pulse width High: Low:	500 ns 500 ns
Triggering modes Single scan: Continuous scan: Triggered scan:	Yes Yes Yes

Internal Clock Specifications

Table 33 lists the specifications for the internal A/D and D/A clocks on the DT9818 module.

Table 33: Internal A/D and D/A Clock Specifications

Feature	Specifications
Reference frequency	48 MHz
Frequency range	0.011176 Hz to 150 kHz
Period range	6.67 ns to 89.477 s

External Clock Specifications

Table 34 lists the specifications for the external A/D and D/A clocks on the DT9818 module.

Table 34: External A/D and D/A Clock Specifications

Feature	Specifications
Input type A/D: D/A:	Falling edge Rising edge
Logic family	LVTTL (+5 V tolerance)
Inputs Input logic load: Input termination: High input voltage: Low input voltage:	1 LVTTL 22 k Ω pull-up to +3.3 V 2.2 V 0.6 V
Oscillator frequency	DC to 1 MHz
Minimum pulse width High: Low:	500 ns 500 ns

Power, Physical, and Environment Specifications

Table 35 lists the power, physical, and environmental specifications for the DT9818 modules.

Table 35: Power, Physical, and Environmental Specifications

Feature	Specifications
Power, +5 V	±5% @ 500 mA maximum
Physical Dimensions: Weight:	190 mm x 100 mm x 20 mm 4.6 ounces
Environmental Operating temperature range Storage temperature range: Relative humidity: Altitude:	0° C to 55° C □□-25° C to 85° C To 95%, noncondensing to 10,000 feet

Connector Specifications

Table 36 lists the mating cable connectors for the connectors on the DT9818 module.

Table 36: Mating Cable Connectors

Module/Panel	Connector	Part Number on Module (or Equivalent)	Mating Cable Connector
DT9818	J2	AMP/Tyco 6-104068-8	AMP/Tyco 3-111196-4 ^a
	J3	AMP/Tyco 6-104068-8	AMP/Tyco 3-111196-4 ^a
EP353 accessory panel	J1	AMP/Tyco 5102321-6	AMP/Tyco 1658622-6
	J2	AMP/Tyco 5747375-8	AMP/Tyco 5-747917-2
EP356 accessory panel	J1	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2
	J2	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2
BNC connection box	Analog input	AMP/Tyco AMP 5747375-8	AMP/Tyco 5-747917-2
	Digital I/O	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2
	C\T, DAC, Clk, Trig	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2

a. The mating PCB receptacle is AMP/Tyco 6-104078-3.

Regulatory Specifications

Table 37 lists the regulatory specifications for the DT9818 module.

Table 37: Regulatory Specifications

Feature	Specifications
Emissions (EMI)	FCC Part 15, EN55022:1994 + A1:1995 + A2:1997 VCCI, AS/NZS 3548 Class A
Immunity	EN61000-6-1:2001
RoHS (EU Directive 2002/95/EG)	Compliant (as of July 1st, 2006)



Connector Pin Assignments

DT9818-OEM and DT9818-32-OEM Pin Assignments	135
EP353 Accessory Panel Pin Assignments	140
EP355 Screw Terminal Assignments	143
EP356 Accessory Panel Pin Assignments	148

Note: This appendix provides connector information for the DT9818-OEM and DT9818-32-OEM modules and related accessories. For information about the BNC and STP connection box versions of the DT9818, refer to [Appendix C](#) starting on [page 151](#).

DT9818-OEM and DT9818-32-OEM Pin Assignments

The DT9818-OEM and DT9818-32-OEM modules provide three connectors: J1, J2, and J3. The following sections provide information about each of these connectors.

Connector J1 on the Module

Figure 33 shows the orientation of the pins for the USB connector (J1) on the DT9818-OEM and DT9818-32-OEM modules.

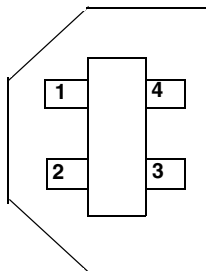


Figure 33: Orientation of the Pins for the USB Connector (J1) on the DT9818-OEM and DT9818-32-OEM Modules

Table 38 lists the pin assignments for the USB connector (J1) on the DT9818-OEM and DT9818-32-OEM modules.

Table 38: Pin Assignments for the USB Connector (J1) on the DT9818-OEM and DT9818-32-OEM Modules

Pin	Signal Description	Pin	Signal Description
1	USB +5 V	3	USB Data+
2	USB Data-	4	USB Ground

Connector J2 on the Module

Figure 34 shows the orientation of the pins for connector J2 on the DT9818-OEM and DT9818-32-OEM modules.

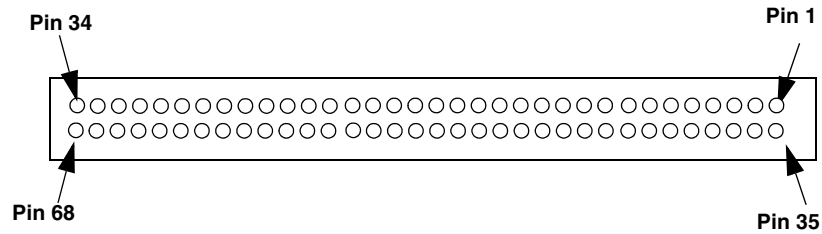


Figure 34: Orientation of the Pins for Connectors J2 and J3 on the DT9818-OEM and DT9818-32-OEM Modules

Table 39 lists the pin assignments for connector J2 on the DT9818-OEM and DT9818-32-OEM modules.

Table 39: Pin Assignments for Connector J2 on the DT9818-OEM and DT9818-32-OEM Modules

Pin	Signal Description	Pin	Signal Description
1	+5 V Analog	35	Digital Ground
2	Amplifier Low ^a	36	Analog Ground
3	Analog Ground	37	Analog Ground
4	Analog Input 15 DI/ Analog Input 23 SE ^b	38	Analog Input 15 DI Return/ Analog In 31 SE ^b
5	Analog Ground	39	Analog Ground
6	Analog Input 14 DI/ Analog Input 22 SE ^b	40	Analog Input 14 DI Return/ Analog In 30 SE ^b
7	Analog Ground	41	Analog Ground
8	Analog Input 13 DI/ Analog Input 21 SE ^b	42	Analog Input 13 DI Return/ Analog In 29 SE ^b
9	Analog Ground	43	Analog Ground
10	Analog Input 12 DI/ Analog Input 20 SE ^b	44	Analog Input 12 DI Return/ Analog In 28 SE ^b
11	Analog Ground	45	Analog Ground
12	Analog Input 11 DI/ Analog Input 19 SE ^b	46	Analog Input 11 DI Return/ Analog In 27 SE ^b
13	Analog Ground	47	Analog Ground

Table 39: Pin Assignments for Connector J2 on the DT9818-OEM and DT9818-32-OEM Modules (cont.)

Pin	Signal Description	Pin	Signal Description
14	Analog Input 10 DI/ Analog Input 18 SE ^b	48	Analog Input 10 DI Return/ Analog In 26 SE ^b
15	Analog Ground	49	Analog Ground
16	Analog Input 9 DI/ Analog Input 17 SE ^b	50	Analog Input 9 DI Return/ Analog In 25 SE ^b
17	Analog Ground	51	Analog Ground
18	Analog Input 8 DI/ Analog Input 16 SE ^b	52	Analog Input 8 DI Return/ Analog In 24 SE ^b
19	Analog Ground	53	Analog Ground
20	Analog In 7	54	Analog In 7 DI Return/ Analog In 15 SE ^c
21	Analog Ground	55	Analog Ground
22	Analog In 6	56	Analog In 6 DI Return/ Analog In 14 SE ^c
23	Analog Ground	57	Analog Ground
24	Analog In 5	58	Analog In 5 DI Return/ Analog In 13 SE ^c
25	Analog Ground	59	Analog Ground
26	Analog In 4	60	Analog In 4 DI Return/ Analog In 12 SE ^c
27	Analog Ground	61	Analog Ground
28	Analog In 3	62	Analog In 3 DI Return/ Analog In 11 SE ^c
29	Analog Ground	63	Analog Ground
30	Analog In 2	64	Analog In 2 DI Return/ Analog In 10 SE ^c
31	Analog Ground	65	Analog Ground
32	Analog In 1	66	Analog In 1 DI Return/ Analog In 9 SE ^c
33	Analog Ground	67	Analog Ground
34	Analog In 0	68	Analog In 0 DI Return/ Analog In 8 SE ^c

- If you are using the single-ended or pseudo-differential configuration, ensure that you connect this signal to analog ground on the module and to analog ground from your signal source. Refer to [page 39](#) and [page 40](#) for more information.
- These pins are used for the DT9818-32-OEM module only. The first signal description applies to the differential configuration; the second signal description applies to the single-ended configuration.
- These pins are used for the DT9818-OEM and DT9818-32-OEM modules. The first signal description applies to the differential configuration; the second signal description applies to the single-ended configuration.

Connector J3 on the Module

Figure 35 shows the orientation of the pins for connectors J3 on the DT9818-OEM and DT9818-32-OEM modules.

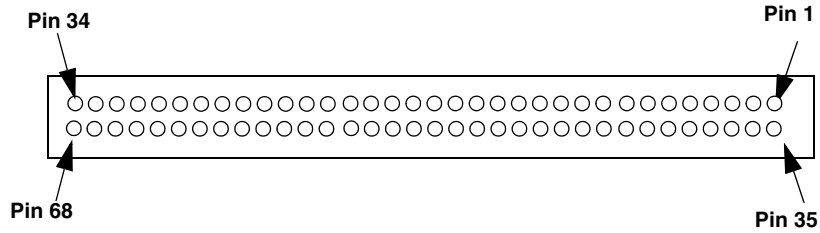


Figure 35: Orientation of the Pins for Connector J3 on the DT9818-OEM and DT9818-32-OEM Modules

Table 40 lists the pin assignments for connector J3 on the DT9818-OEM and DT9818-32-OEM modules.

Table 40: Pin Assignments for Connector J3 on the DT9818-OEM and DT9818-32-OEM Modules

Pin	Signal Description	Pin	Signal Description
1	Reserved	35	Reserved
2	+5V_User ^a	36	Digital Ground
3	Reserved	37	Reserved
4	Reserved	38	Digital Ground
5	Reserved	39	Reserved
6	Reserved	40	Digital Ground
7	C/T1 Out	41	C/T1 Gate
8	C/T1 Clk In	42	Digital Ground
9	C/T0 Out	43	C/T0 Gate
10	C/T0 Clk In	44	Digital Ground
11	Digital Ground	45	Reserved
12	Reserved	46	Reserved
13	Reserved	47	Reserved
14	Reserved	48	Reserved
15	Reserved	49	Reserved
16	Reserved	50	Reserved

Table 40: Pin Assignments for Connector J3 on the DT9818-OEM and DT9818-32-OEM Modules (cont.)

Pin	Signal Description	Pin	Signal Description
17	Reserved	51	Reserved
18	Reserved	52	Reserved
19	Reserved	53	Reserved
20	Digital In 7	54	Digital Out 7
21	Digital In 6	55	Digital Out 6
22	Digital In 5	56	Digital Out 5
23	Digital In 4	57	Digital Out 4
24	Digital In 3	58	Digital Out 3
25	Digital In 2	59	Digital Out 2
26	Digital In 1	60	Digital Out 1
27	Digital In 0	61	Digital Out 0
28	External ADC Clock	62	External ADC Trigger
29	External DAC Clock	63	External DAC Trigger
30	Digital Ground	64	Digital Ground
31	Reserved	65	Reserved
32	Reserved	66	Reserved
33	Analog Out 1	67	Analog Out 1 Return
34	Analog Out 0	68	Analog Out 0 Return

- a. You can use this signal to supply +5 V to the digital I/O, allowing the digital output signals to maintain their states if the USB cable is unplugged.

EP353 Accessory Panel Pin Assignments

This section describes the pin assignments for the connectors on the EP353 accessory panel.

Connector J1 on the EP353 Panel

Figure 36 shows the orientation of the pins for connector J1 on the EP353 panel.

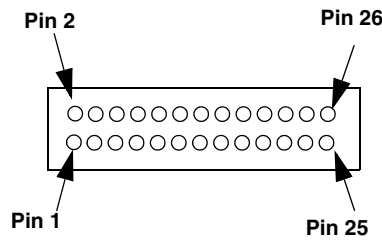


Figure 36: Orientation of the Pins for Connectors J1 on the EP353 Panel

Table 41 lists the pin assignments for connector J1 on the EP353 accessory panel.

Table 41: EP353 Connector J1 Pin Assignments

Pin	Signal Description	Pin	Signal Description
1	Analog Input 0	2	Analog Input 0 DI Return/ Analog Input 8 SE ^a
3	Analog Ground	4	Analog Input 1 DI Return/ Analog Input 9 SE ^a
5	Analog Input 1	6	Analog Ground
7	Analog Input 2	8	Analog Input 2 DI Return/ Analog Input 10 SE ^a
9	Analog Ground	10	Analog Input 3 DI Return/ Analog Input 11 SE ^a
11	Analog Input 3	12	Analog Ground
13	Analog Input 4	14	Analog Input 4 DI Return/ Analog Input 12 SE ^a
15	Analog Ground	16	Analog Input 5 DI Return/ Analog Input 13 SE ^a
17	Analog Input 5	18	Analog Ground
19	Analog Input 6	20	Analog Input 6 DI Return/ Analog Input 14 SE ^a

Table 41: EP353 Connector J1 Pin Assignments (cont.)

Pin	Signal Description	Pin	Signal Description
21	Analog Ground	22	Analog Input 7 DI Return/ Analog Input 15 SE ^a
23	Analog Input 7	24	Analog Ground
25	Amplifier Low	26	Reserved

a. The first signal description (Return) applies to the differential configuration for the DT9818-OEM and DT9818-32-OEM modules. The second signal description applies to the single-ended configuration for the DT9818-OEM and DT9818-32-OEM modules.

Connector J2 on the EP353 Panel

Figure 37 shows the orientation of the pins for connector J2 on the EP353 panel.

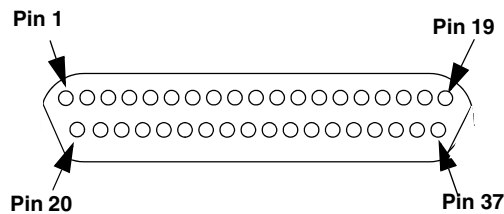
**Figure 37: Orientation of the Pins for Connectors J2 on the EP353 Panel**

Table 42 lists the pin assignments for connector J2 on the EP353 accessory panel.

Table 42: EP353 Connector J2 Pin Assignments

Pin	Signal Description	Pin	Signal Description
1	Analog Input 0	20	Analog Input 0 DI Return/Analog In 8 SE ^a
2	Analog Input 1	21	Analog Input 1 DI Return/Analog In 9 SE ^a
3	Analog Input 2	22	Analog Input 2 DI Return/Analog In 10 SE ^a
4	Analog Input 3	23	Analog Input 3 DI Return/ Analog In 11 SE ^a
5	Analog Input 4	24	Analog Input 4 DI Return/ Analog In 12 SE ^a
6	Analog Input 5	25	Analog Input 5 DI Return/ Analog In 13 SE ^a
7	Analog Input 6	26	Analog Input 6 DI Return/ Analog In 14 SE ^a
8	Analog Input 7	27	Analog Input 7 DI Return/ Analog In 15 SE ^a
9	Analog Input 8 DI/ Analog Input 16 SE ^b	28	Analog Input 8 DI Return/ Analog In 24 SE ^b

Table 42: EP353 Connector J2 Pin Assignments (cont.)

Pin	Signal Description	Pin	Signal Description
10	Analog Input 9 DI/ Analog Input 17 SE ^b	29	Analog Input 9 DI Return/ Analog In 25 SE ^b
11	Analog Input 10 DI / Analog Input 18 SE ^b	30	Analog Input 10 DI Return/ Analog In 26 SE ^b
12	Analog Input 11 DI/ Analog Input 19 SE ^b	31	Analog Input 11 DI Return/ Analog In 27 SE ^b
13	Analog Input 12 DI/ Analog Input 20 SE ^b	32	Analog Input 12 DI Return/ Analog In 28 SE ^b
14	Analog Input 13 DI/ Analog Input 21 SE ^b	33	Analog Input 13 DI Return/ Analog In 29 SE ^b
15	Analog Input 14 DI/ Analog Input 22 SE ^b	34	Analog Input 14 DI Return/ Analog In 30 SE ^b
16	Analog Input 15 DI/ Analog Input 23 SE ^b	35	Analog Input 15 DI Return/ Analog In 31 SE ^b
17	Amplifier Low	36	Analog Ground
18	+5 V Analog	37	Digital Ground
19	Chassis Ground		

- a. The first signal description (Return) applies to the differential configuration for all modules. The second signal description applies to the single-ended configuration for the DT9818-OEM and DT9818-32-OEM modules.
- b. These pins are used for the DT9818-32-OEM module only. The first signal description applies to the differential configuration; the second signal description applies to the single-ended configuration.

EP355 Screw Terminal Assignments

The EP355 screw terminal panel is used with the DT9818-OEM and DT9818-32-OEM modules. The screw terminal assignments depend on whether the EP355 is attached to connector J2 or connector J3 on the module.

Figure 38 shows the locations of the 14-position screw terminal blocks on the EP355 screw terminal panel.

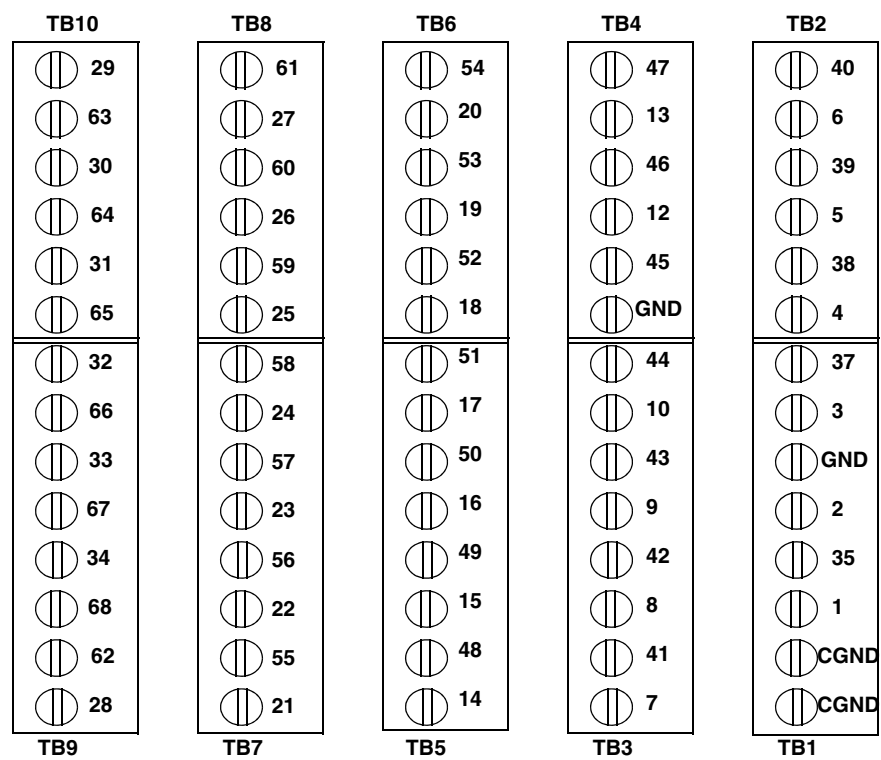


Figure 38: EP355 Screw Terminal Blocks

EP355 Screw Terminal Assignments when Attached to Connector J2 on the Module

Table 43 lists the screw terminal assignments when the EP355 panel is attached to connector J2 of the DT9818-OEM or DT9818-32-OEM module.

Table 43: Screw Terminal Assignments on the EP355 Screw Terminal Panel When Attached to Connector J2

Screw Terminal	Terminal Block	Signal Description	Screw Terminal	Terminal Block	Signal Description
1	TB1	+5 V Analog	2	TB1	Amplifier Low
3	TB1	Analog Ground	4	TB2	Analog Input 15 DI/ Analog Input 23 SE ^a
5	TB2	Analog Ground	6	TB2	Analog Input 14 DI/ Analog Input 22 SE ^a
7	TB3	Analog Ground	8	TB3	Analog Input 13 DI/ Analog Input 21 SE ^a
9	TB3	Analog Ground	10	TB3	Analog Input 12 DI/ Analog Input 20 SE ^a
11	GND	Analog Ground	12	TB4	Analog Input 11 DI/ Analog Input 19 SE ^a
13	TB4	Analog Ground	14	TB5	Analog Input 10 DI/ Analog Input 18 SE ^a
15	TB5	Analog Ground	16	TB5	Analog Input 9 DI/ Analog Input 17 SE ^a
17	TB5	Analog Ground	18	TB6	Analog Input 8 DI/ Analog Input 16 SE ^a
19	TB6	Analog Ground	20	TB6	Analog In 7
21	TB7	Analog Ground	22	TB7	Analog In 6
23	TB7	Analog Ground	24	TB7	Analog In 5
25	TB8	Analog Ground	26	TB8	Analog In 4
27	TB8	Analog Ground	28	TB9	Analog In 3
29	TB10	Analog Ground	30	TB10	Analog In 2
31	TB10	Analog Ground	32	TB9	Analog In 1
33	TB9	Analog Ground	34	TB9	Analog In 0
35	TB1	Digital Ground	36	GND	Analog Ground
37	TB1	Analog Ground	38	TB2	Analog In 15 DI Return/ Analog In 31 SE ^a
39	TB2	Analog Ground	40	TB2	Analog In 14 DI Return/ Analog In 30 SE ^a

Table 43: Screw Terminal Assignments on the EP355 Screw Terminal Panel When Attached to Connector J2 (cont.)

Screw Terminal	Terminal Block	Signal Description	Screw Terminal	Terminal Block	Signal Description
41	TB3	Analog Ground	42	TB3	Analog In 13 DI Return/ Analog In 29 SE ^a
43	TB3	Analog Ground	44	TB3	Analog In 12 DI Return/ Analog In 28 SE ^a
45	TB4	Analog Ground	46	TB4	Analog In 11 DI Return/ Analog In 27 SE ^a
47	TB4	Analog Ground	48	TB5	Analog In 10 DI Return/ Analog In 26 SE ^a
49	TB5	Analog Ground	50	TB5	Analog In 9 DI Return/ Analog In 25 SE ^a
51	TB5	Analog Ground	52	TB6	Analog In 8 DI Return/ Analog In 24 SE ^a
53	TB6	Analog Ground	54	TB6	Analog In 7 DI Return/ Analog In 15 SE ^b
55	TB7	Analog Ground	56	TB7	Analog In 6 DI Return/ Analog In 14SE ^b
57	TB7	Analog Ground	58	TB7	Analog In 5 DI Return/ Analog In 13 SE ^b
59	TB8	Analog Ground	60	TB8	Analog In 4 DI Return/ Analog In 12 SE ^b
61	TB8	Analog Ground	62	TB9	Analog In 3 DI Return/ Analog In 11 SE ^b
63	TB10	Analog Ground	64	TB10	Analog In 2 DI Return/ Analog In 10 SE ^b
65	TB10	Analog Ground	66	TB9	Analog In 1 DI Return/ Analog In 9 SE ^b
67	TB9	Analog Ground	68	TB9	Analog In 0 DI Return/ Analog In 8 SE ^b

- a. These screw terminals are used for the DT9818-32-OEM module only. The first signal description applies to the differential configuration; the second signal description applies to the single-ended configuration.
- b. These screw terminals are used for the DT9818-OEM and DT9818-32-OEM modules. The first signal description applies to the differential configuration; the second signal description applies to the single-ended configuration.

EP355 Screw Terminal Assignments when Attached to Connector J3 on the Module

Table 44 lists the screw terminal assignments when the EP355 panel is attached to connector J3 on the DT9818-OEM or DT9818-32-OEM module.

Table 44: Screw Terminal Assignments on the EP355 Screw Terminal Panel When Attached to Connector J3

Screw Terminal	Terminal Block	Signal Description	Screw Terminal	Terminal Block	Signal Description
1	TB1	Reserved	2	TB1	+5V_User
3	TB1	Reserved	4	TB2	Reserved
5	TB2	Reserved	6	TB2	Reserved
7	TB3	C/T1 Out	8	TB3	C/T1 Clk In
9	TB3	C/T0 Out	10	TB3	C/T0 Clk In
11	GND	Digital Ground	12	TB4	Reserved
13	TB4	Reserved	14	TB5	Reserved
15	TB5	Reserved	16	TB5	Reserved
17	TB5	Reserved	18	TB6	Reserved
19	TB6	Reserved	20	TB6	Digital In 7
21	TB7	Digital In 6	22	TB7	Digital In 5
23	TB7	Digital In 4	24	TB7	Digital In 3
25	TB8	Digital In 2	26	TB8	Digital In 1
27	TB8	Digital In 0	28	TB9	External ADC Clock
29	TB10	External DAC Clock	30	TB10	Digital Ground
31	TB10	Reserved	32	TB9	Reserved
33	TB9	Analog Out 1	34	TB9	Analog Out 0
35	TB1	Reserved	36	GND	Digital Ground
37	TB1	Reserved	38	TB2	Digital Ground
39	TB2	Reserved	40	TB2	Digital Ground
41	TB3	C/T1 Gate	42	TB3	Digital Ground
43	TB3	C/T0 Gate	44	TB3	Digital Ground
45	TB4	Reserved	46	TB4	Reserved
47	TB4	Reserved	48	TB5	Reserved
49	TB5	Reserved	50	TB5	Reserved

**Table 44: Screw Terminal Assignments on the EP355 Screw Terminal Panel
When Attached to Connector J3 (cont.)**

Screw Terminal	Terminal Block	Signal Description	Screw Terminal	Terminal Block	Signal Description
51	TB5	Reserved	52	TB6	Reserved
53	TB6	Reserved	54	TB6	Digital Out 7
55	TB7	Digital Out 6	56	TB7	Digital Out 5
57	TB7	Digital Out 4	58	TB7	Digital Out 3
59	TB8	Digital Out 2	60	TB8	Digital Out 1
61	TB8	Digital Out 0	62	TB9	External ADC Trigger
63	TB10	External DAC Trigger	64	TB10	Digital Ground
65	TB10	Reserved	66	TB9	Reserved
67	TB9	Analog Out 1 Return	68	TB9	Analog Out 0 Return

EP356 Accessory Panel Pin Assignments

This section describes the pin assignments for the connectors on the EP356 accessory panel. [Figure 39](#) shows the orientation of the pins for connectors J1 and J2 on the EP356 panel.

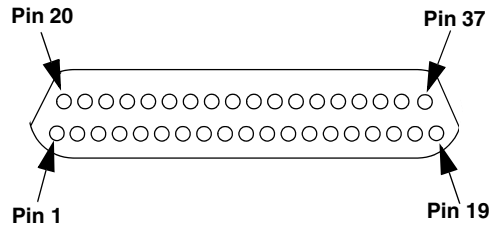


Figure 39: Orientation of the Pins for Connectors J1 and J2 of the EP356 Panel

Connector J1 on the EP356 Panel

[Table 45](#) lists the pin assignments for connector J1 on the EP356 accessory panel.

Table 45: EP356 Connector J1 Pin Assignments

Pin	Signal Description	Pin	Signal Description
1	Digital In 0	20	Digital Out 0
2	Digital In 1	21	Digital Out 1
3	Digital In 2	22	Digital Out 2
4	Digital In 3	23	Digital Out 3
5	Digital In 4	24	Digital Out 4
6	Digital In 5	25	Digital Out 5
7	Digital In 6	26	Digital Out 6
8	Digital In 7	27	Digital Out 7
9	Reserved	28	Reserved
10	Reserved	29	Reserved
11	Reserved	30	Reserved
12	Reserved	31	Reserved
13	Reserved	32	Reserved
14	Reserved	33	Reserved
15	Reserved	34	Reserved
16	Reserved	35	Reserved

Table 45: EP356 Connector J1 Pin Assignments (cont.)

Pin	Signal Description	Pin	Signal Description
17	Digital Ground	36	Reserved
18	Digital Ground	37	Digital Ground
19	Chassis Ground		

Connector J2 on the EP356 Panel

Table 46 lists the pin assignments for connector J2 on the EP356 accessory panel.

Table 46: EP356 Connector J2 Pin Assignments

Pin	Signal Description	Pin	Signal Description
1	Analog Out 0	20	Analog Out 0 Return
2	Analog Out 1	21	Analog Out 1 Return
3	Reserved	22	Reserved
4	Reserved	23	Reserved
5	Digital Ground	24	Digital Ground
6	External DAC Clock	25	External DAC Trigger
7	External ADC Clock	26	External ADC Trigger
8	C/T0 Clk In	27	Digital Ground
9	C/T0 Out	28	C/T0 Gate
10	C/T1 Clk In	29	Digital Ground
11	C/T1 Out	30	C/T1 Gate
12	Reserved	31	Digital Ground
13	Reserved	32	Reserved
14	Reserved	33	Digital Ground
15	Reserved	34	Reserved
16	+5V_User	35	Digital Ground
17	Reserved	36	Reserved
18	Digital Ground	37	Digital Ground
19	Chassis Ground		



BNC and STP Box Connections

Wiring to the BNC Connection Box.....	152
Wiring to the STP Connection Box.....	159

Wiring to the BNC Connection Box

The BNC connection box contains both BNC connectors and 37-pin, D-sub connectors. The number of BNC connectors available on the box varies, depending on the version of the box that you are using. For example, the DT9818-16SE-BNC version, shown in [Figure 40](#), contains 22 BNC connectors (16 BNC connectors for single-ended analog inputs, two BNC connectors for analog outputs, and four BNC connectors for external clocks and triggers). The DT9818-8DI-BNC version contains 14 BNC connectors (8 BNC connectors for single-ended analog inputs, two BNC connectors for analog outputs, and four BNC connectors for external clocks and triggers).

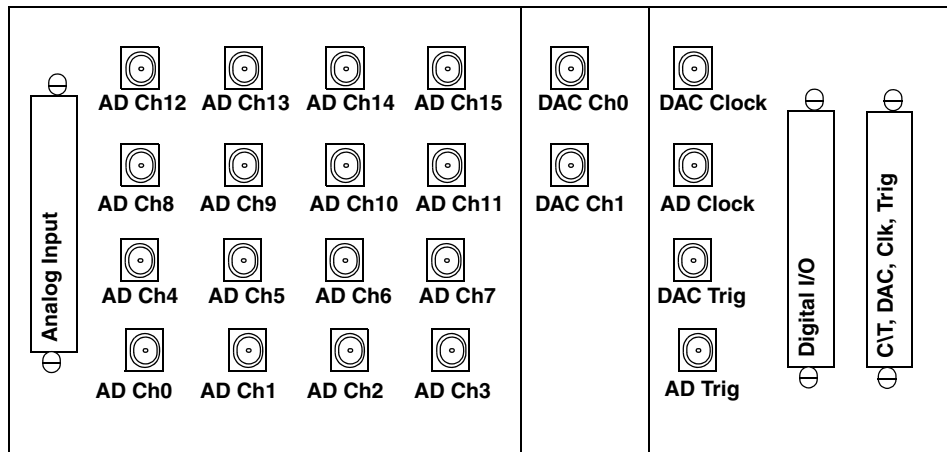


Figure 40: BNC Connection Box

You can wire the following signals to the BNC box:

- **Analog input signals** – You can wire analog input signals in one of the following ways:
 - Using the BNC connectors labelled AD Ch0 to AD Ch15.
 - Using the appropriate pins on the Analog Input connector. You can access the pins either by using the EP360 cable and STP37 screw terminal panel (available from Data Translation), by plugging in a 37-mating connector (AMP #5-747917-2), or by building your own cable/panel. Refer to [page 156](#) for connector pin assignments.
- **Analog output signals** – You can wire analog output signals in one of the following ways:
 - Using the BNC connectors labelled DAC Ch0 and/or DAC Ch1.
 - Using the appropriate pins on the C\T, DAC, Clk, Trig connector. You can access the pins either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel. Refer to [page 158](#) for connector pin assignments.
- **Digital I/O signals** – To wire digital I/O signals, you must use the appropriate pins on the Digital I/O connector. You can access the pins either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel. Refer to [page 157](#) for connector pin assignments.

- **Counter/timer signals** – To wire counter/timer signals, you must use the appropriate pins on the C\T, DAC, Clk, Trig connector. You can access the pins either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel. Refer to [page 158](#) for connector pin assignments.
- **External A/D clock or trigger signal** – If your version of the BNC connection box supports analog input operations, you can wire external clock/trigger signals in one of the following ways:
 - Using the BNC connectors labelled AD Clock and AD Trig.
 - Using the appropriate pins on the C\T, DAC, Clk, Trig connector. You can access the pins either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel. Refer to [page 158](#) for connector pin assignments.
- **External DAC clock or trigger signal** – If your version of the BNC connection box supports analog output operations, you can wire external clock/trigger signals in one of the following ways:
 - Using the BNC connectors labelled DAC Clock and DAC Trig.
 - Using the appropriate pins on the C\T, DAC, Clk, Trig connector. You can access the pins either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation) or by building your own cable/panel. Refer to [page 158](#) for connector pin assignments.

The following sections describe how to wire signals using the BNC or D-sub connectors.

Wiring Signals to the BNC Connectors

This section describes how to connect analog input and analog output signals to the BNC connectors on the BNC box.

To connect digital I/O and counter/timer signals to the BNC connector box, you must wire signals to the D-sub connectors on the box, described on [page 156](#).

Connecting Single-Ended Analog Inputs

Figure 41 shows how to connect single-ended voltage inputs (channels 0 and 1, in this case) to the BNC connectors on the BNC connection box.

Note: If you are using single-ended inputs, make sure that bias return resistance is disabled in the Open Layers Control Panel applet. Refer to [page 32](#) for more information.

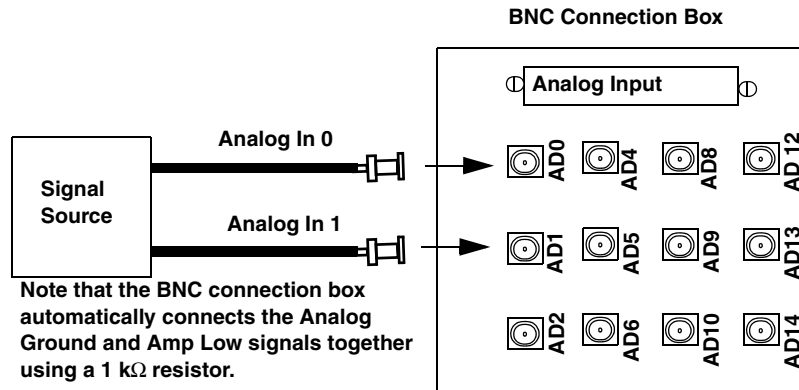


Figure 41: Connecting Single-Ended Inputs to the BNC Connection Box

Connecting Pseudo-Differential Analog Inputs

Figure 42 shows how to connect pseudo-differential voltage inputs (channels 0 and 1, in this case) to the BNC connection box.

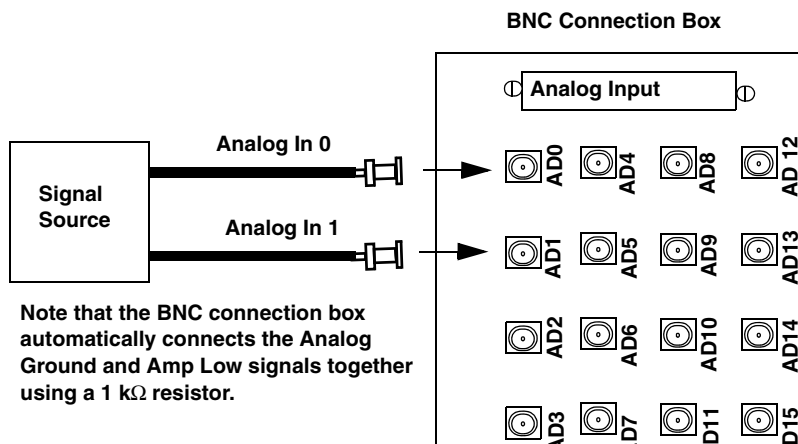


Figure 42: Connecting Pseudo-Differential Inputs to the BNC Connection Box

Connecting Differential Analog Inputs

Figure 43 shows how to connect differential voltage inputs (channels 0 and 1, in this case) to the BNC connection box.

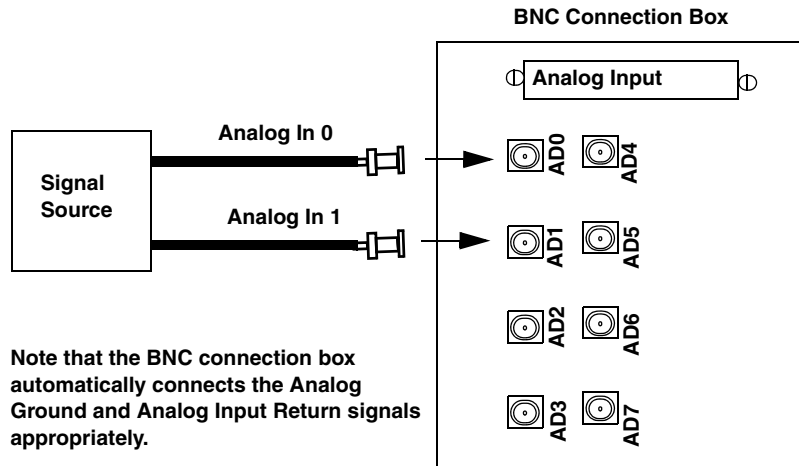


Figure 43: Connecting Differential Inputs to the BNC Connection Box

Connecting Analog Output Signals

Figure 44 shows how to connect an analog output voltage signal (channel 0, in this case) to the BNC connection box.

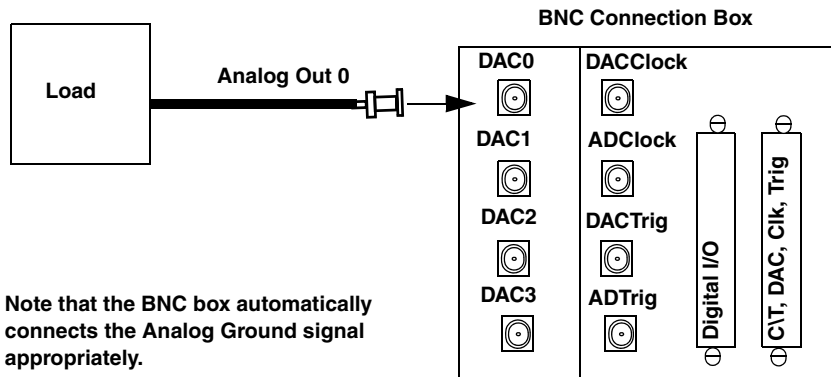


Figure 44: Connecting Analog Outputs to the BNC Connector Box

Wiring Signals to the D-Sub Connectors

If you do not want to use the BNC connectors or if you want to connect digital I/O or counter/timer signals to the BNC connection box, you can use the 37-pin, D-sub connectors. These connectors are described in the following sections. Refer to [Chapter 3](#) starting on [page 33](#) for wiring diagrams.

Analog Input Connector

The Analog Input connector allows you to access the analog input signals. [Table 47](#) lists the pin assignments for the STP37 screw terminal panel when used with the and EP360 cable and Analog Input connector on the BNC box.

Table 47: Analog Input Connector / STP37 Pin Assignments

Pin	Signal Description	Pin	Signal Description
19	Chassis Ground (when used with EP360 cable; otherwise no connect)	37	Digital Ground
18	+5 V Analog	36	Analog Ground
17	Amplifier Low	35	Reserved
16	Reserved	34	Reserved
15	Reserved	33	Reserved
14	Reserved	32	Reserved
13	Reserved	31	Reserved
12	Reserved	30	Reserved
11	Reserved	29	Reserved
10	Reserved	28	Reserved
9	Reserved	27	Analog Input 7 Return/ Analog In 15 ^a
8	Analog Input 7	26	Analog Input 6 Return/ Analog In 14 ^a
7	Analog Input 6	25	Analog Input 5 Return/ Analog In 13 ^a
6	Analog Input 5	24	Analog Input 4 Return/ Analog In 12 ^a
5	Analog Input 4	23	Analog Input 3 Return/ Analog In 11 ^a
4	Analog Input 3	22	Analog Input 2 Return/ Analog In 10 ^a
3	Analog Input 2	21	Analog Input 1 Return/ Analog In 9 ^a
2	Analog Input 1	20	Analog Input 0 Return/ Analog In 8 ^a
1	Analog Input 0		

a. The first signal description (Return) applies to the differential configuration. The second signal description applies to the single-ended configuration.

Digital In/Out Connector

The Digital In/Out connector allows you to access the digital I/O signals. [Table 48](#) lists the pin assignments for both the Digital In/Out connector on the BNC connection box and the STP37 screw terminal panel when used with the EP333 cable.

Table 48: Digital In/Out Connector / STP37 Pin Assignments

Pin	Signal Description	Pin	Signal Description
1	Digital In 0	20	Digital Out 0
2	Digital In 1	21	Digital Out 1
3	Digital In 2	22	Digital Out 2
4	Digital In 3	23	Digital Out 3
5	Digital In 4	24	Digital Out 4
6	Digital In 5	25	Digital Out 5
7	Digital In 6	26	Digital Out 6
8	Digital In 7	27	Digital Out 7
9	Reserved	28	Reserved
10	Reserved	29	Reserved
11	Reserved	30	Reserved
12	Reserved	31	Reserved
13	Reserved	32	Reserved
14	Reserved	33	Reserved
15	Reserved	34	Reserved
16	Reserved	35	Reserved
17	Digital Ground	36	Reserved
18	Digital Ground	37	Digital Ground
19	Chassis Ground (when used with EP333 cable; otherwise no connect)		

C/T, DAC, Clk, Trig Connector

The C/T, DAC, Clk, Trig connector allows you to access the counter/timer, analog output, external clock, and external trigger signals. [Table 49](#) lists the pin assignments for both the C/T, DAC, Clk, Trig connector on the BNC connection box and the STP37 screw terminal panel when used with the EP333 cable.

Table 49: C/T, DAC, Clk, Trig Connector

Pin	Signal Description	Pin	Signal Description
1	Analog Output 0	20	Analog Out 0 Return
2	Analog Output 1	21	Analog Out 1 Return
3	Reserved	22	Reserved
4	Reserved	23	Reserved
5	Digital Ground	24	Digital Ground
6	External DAC Clock	25	External DAC Trigger
7	External ADC Clock	26	External ADC Trigger
8	C/T0 Clk In	27	Digital Ground
9	C/T0 Out	28	C/T0 Gate
10	C/T1 Clk In	29	Digital Ground
11	C/T1 Out	30	C/T1 Gate
12	Reserved	31	Digital Ground
13	Reserved	32	Reserved
14	Reserved	33	Digital Ground
15	Reserved	34	Reserved
16	+5V_User	35	Digital Ground
17	Reserved	36	Reserved
18	Digital Ground	37	Digital Ground
19	Chassis Ground (when used with EP333 cable; otherwise no connect)		

Wiring to the STP Connection Box

The STP connection box is provided for the 32-analog input channel version of the module only (DT9818-32-STP). It contains blocks of screw terminals that allow you to access all the signals of the module. [Figure 45](#) shows the layout of the STP connection box.

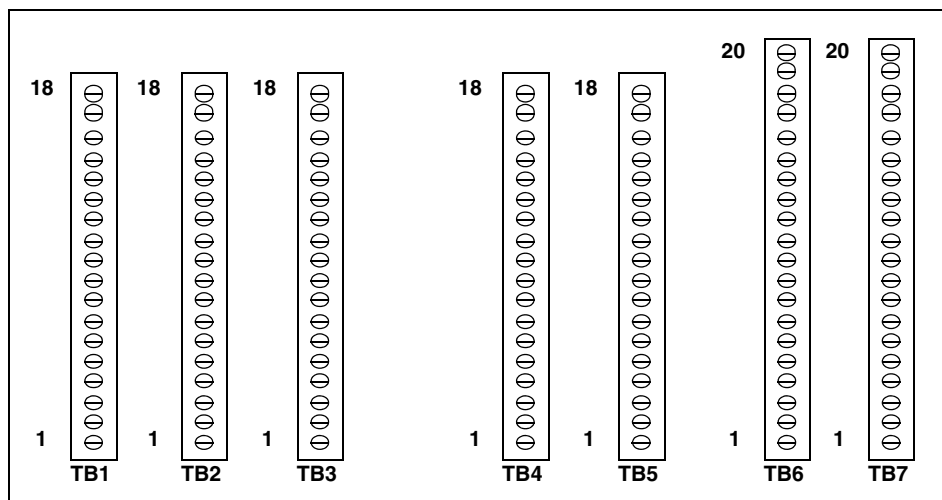


Figure 45: STP Connection Box

Refer to [Chapter 3](#) starting on [page 33](#) for wiring diagrams.

Screw Terminal Block TB1

Table 50 lists the screw terminal assignments for screw terminal block TB1 on the DT9818-32-STP.

Table 50: Screw Terminal Assignments for Terminal Block TB1

Screw Terminal	Signal Description
18	Analog Ground
17	Analog In 5 DI Return / Analog In 13 SE
16	Analog In 5
15	Analog Ground
14	Analog In 4 DI Return / Analog In 12 SE
13	Analog In 4
12	Analog Ground
11	Analog In 3 DI Return / Analog In 11 SE
10	Analog In 3
9	Analog Ground
8	Analog In 2 DI Return / Analog In 10 SE
7	Analog In 2
6	Analog Ground
5	Analog In 1 DI Return / Analog In 9 SE
4	Analog In 1
3	Analog Ground
2	Analog In 0 DI Return / Analog In 8 SE
1	Analog In 0

Screw Terminal Block TB2

Table 51 lists the screw terminal assignments for screw terminal block TB2 on the DT9818-32-STP.

Table 51: Screw Terminal Assignments for Terminal Block TB2

Screw Terminal	Signal Description
18	Analog Ground
17	Analog In 11 DI Return / Analog In 27 SE
16	Analog In 11 DI / Analog In 19 SE
15	Analog Ground
14	Analog In 10 DI Return / Analog In 26 SE
13	Analog In 10 DI / Analog In 18 SE
12	Analog Ground
11	Analog In 9 DI Return / Analog In 25 SE
10	Analog In 9 DI / Analog In 17 SE
9	Analog Ground
8	Analog In 8 DI Return / Analog In 24 SE
7	Analog In 8 DI / Analog In 16 SE
6	Analog Ground
5	Analog In 7 DI Return / Analog In 15 SE
4	Analog In 7
3	Analog Ground
2	Analog In 6 DI Return / Analog In 14 SE
1	Analog In 6

Screw Terminal Block TB3

Table 52 lists the screw terminal assignments for screw terminal block TB3 on the DT9818-32-STP.

Table 52: Screw Terminal Assignments for Terminal Block TB3

Screw Terminal	Signal Description
18	5 V Analog
17	Digital Ground
16	Analog Ground
15	Analog Ground
14	Amplifier Low
13	Amplifier Low
12	Analog Ground
11	Analog In 15 DI Return / Analog In 31 SE
10	Analog In 15 DI / Analog In 23 SE
9	Analog Ground
8	Analog In 14 DI Return / Analog In 30 SE
7	Analog In 14 DI / Analog In 22 SE
6	Analog Ground
5	Analog In 13 DI Return / Analog In 29 SE
4	Analog In 13 DI / Analog In 21 SE
3	Analog Ground
2	Analog In 12 DI Return / Analog In 28 SE
1	Analog In 12 DI / Analog In 20 SE

Screw Terminal Block TB4

Table 53 lists the screw terminal assignments for screw terminal block TB4 on the DT9818-32-STP.

Table 53: Screw Terminal Assignments for Terminal Block TB4

Screw Terminal	Signal Description
18	Digital Ground
17	Digital Ground
16	External ADC Trigger
15	Digital Ground
14	External ADC Clock
13	Digital Ground
12	External DAC Trigger
11	Digital Ground
10	External DAC Clock
9	Digital Ground
8	Reserved
7	Reserved
6	Reserved
5	Reserved
4	DAC1 Return
3	DAC1 Out
2	DAC0 Return
1	DAC0 Out

Screw Terminal Block TB5

Table 54 lists the screw terminal assignments for screw terminal block TB5 on the DT9818-32-STP.

Table 54: Screw Terminal Assignments for Terminal Block TB5

Screw Terminal	Signal Description
18	Digital Ground
17	Reserved
16	Reserved
15	Reserved
14	Reserved
13	Reserved
12	Reserved
11	Reserved
10	Reserved
9	Digital Ground
8	Digital Input 7
7	Digital Input 6
6	Digital Input 5
5	Digital Input 4
4	Digital Input 3
3	Digital Input 2
2	Digital Input 1
1	Digital Input 0

Screw Terminal Block TB6

Table 55 lists the screw terminal assignments for screw terminal block TB6 on the DT9818-32-STP.

Table 55: Screw Terminal Assignments for Terminal Block TB6

Screw Terminal	Signal Description
20	Digital Ground
19	Reserved
18	Digital Ground
17	Reserved
16	Reserved
15	Reserved
14	Reserved
13	Reserved
12	Reserved
11	Reserved
10	Reserved
9	Digital Ground
8	Digital Output 7
7	Digital Output 6
6	Digital Output 5
5	Digital Output 4
4	Digital Output 3
3	Digital Output 2
2	Digital Output 1
1	Digital Output 0

Screw Terminal Block TB7

Table 56 lists the screw terminal assignments for screw terminal block TB7 on the DT9818-32-STP.

Table 56: Screw Terminal Assignments for Terminal Block TB7

Screw Terminal	Signal Description
20	Reserved
19	Reserved
18	Reserved
17	Digital Ground
16	Reserved
15	Reserved
14	Reserved
13	Digital Ground
12	Reserved
11	Reserved
10	Reserved
9	Digital Ground
8	Counter 1 Gate
7	Counter 1 Out
6	Counter 1 Clock
5	Digital Ground
4	Counter 0 Gate
3	Counter 0 Out
2	Counter 0 Clock
1	Digital Ground

A

- A/D Over Sample error 79
- A/D subsystem specifications 122
- accessories 21
- accessory panel
 - EP353 21, 36, 140
 - EP355 21, 37, 143
 - EP356 21, 38, 148
 - STP37 21
- aliasing 74
- analog input
 - calibrating 118
 - channels 67
 - continuous operations 74
 - conversion modes 74
 - data format and transfer 78
 - differential configuration 68, 155
 - differential inputs 39
 - error conditions 79
 - gain 73
 - pseudo-differential inputs 39, 68, 154
 - ranges 73
 - reading counter/timers through the input
 - channel-gain list 71
 - reading the digital input port through the
 - channel-gain list 70
 - resolution 67
 - sample clock sources 74
 - single-ended inputs 39, 67, 154
 - single-value operations 74
 - specifying an input channel-gain list 69
 - testing continuous operations 58
 - testing single-value operations 56
 - triggers 78
 - wiring current loop inputs 43
 - wiring differential inputs 40
 - wiring pseudo-differential inputs 40
 - wiring single-ended inputs 39
- Analog Input connector pin assignments 156
- analog output
 - calibrating 120
 - channels 80
 - clock sources 82
 - continuous operations 82
 - conversion modes 82
 - data format and transfer 86

- error conditions 86
- gain 81
- ranges 81
- resolution 80
- single-value operations 82
- specifying an output channel-gain list 80
- subsystem specifications 124
- testing single-value operations 57
- wiring 44, 155

- applet, Open Layers Control Panel 68, 111
- application wiring
 - analog outputs 44, 155
 - continuous edge-to-edge measurement 50
 - current loop analog inputs 43
 - differential analog inputs 40, 155
 - digital inputs and outputs 45
 - edge-to-edge measurement 49
 - event counting applications 46, 47
 - frequency measurement applications 48
 - period measurement 48
 - pseudo-differential analog inputs 40, 154
 - pulse output applications 51
 - pulse width measurement 48
 - single-ended analog inputs 39, 154
 - up/down counting 47
- applications
 - Quick DataAcq 18
 - QuickDAQ 18

B

- base clock frequency 106
- BaseClockFrequency 106
- bias return resistance 32, 40
- binary data encoding 100
- buffers 100
 - inprocess flush 100
 - single wrap mode 100

C

- C/C++ programs 20
- C/T, *see* counter/timer 126
- cables
 - EP333 21
 - EP360 21
 - USB 29, 30

- calibrating the module
 - analog input subsystem 118
 - analog output subsystem 120
 - running the calibration utility 117
- CGL, *see* channel-gain list 101
- CGLDepth 101
- channel type
 - differential 101
 - single-ended 101
- channel-gain list
 - depth 101
 - updating the digital output port 80
- channel-list inhibit 101
- channels
 - analog input 67
 - analog output 80
 - counter/timer 89
 - digital I/O 87
 - number of 101
- clock sources
 - analog input 74
 - analog output 82
 - counter/timer 90
- clock-falling edge type 107
- clock-rising edge type 107
- clocks
 - base frequency 106
 - external 106
 - internal 106
 - maximum external clock divider 106
 - maximum throughput 106
 - minimum external clock divider 106
 - minimum throughput 106
 - simultaneous 106
 - specifications 128, 129
- configuring the device driver 32
- connecting signals
 - analog outputs 44, 155
 - continuous edge-to-edge measurement 50
 - current loop analog inputs 43
 - differential analog inputs 40, 155
 - digital inputs and outputs 45
 - edge-to-edge measurement 49
 - event counting applications 46, 47
 - frequency measurement applications 48
 - period measurement 48
 - pseudo-differential analog inputs 40, 154
 - pulse output applications 51
 - pulse width measurement 48
 - single-ended analog inputs 39, 154
 - up/down counting 47
- connecting to the host computer 29
 - using an expansion hub 30
- connector pin assignments
 - DT9818-32-OEM 135
 - DT9818-OEM 135
 - EP353 140
 - EP356 148
- connectors
 - J1 on DT9818-OEM and DT9818-32-OEM 135
 - J1 on EP353 140
 - J1 on EP356 148
 - J2 on DT9818-OEM and DT9818-32-OEM 136
 - J2 on EP353 141
 - J2 on EP356 149
 - J3 on DT9818-OEM and DT9818-32-OEM 138
- continuous analog input
 - externally retriggered scan mode 77
 - post-trigger 99
 - scan operations 75
 - software-retriggered scan mode 76
- continuous analog output 99
 - continuously paced 83
 - waveform generation mode 84
- continuous counter/timer 99
- continuous digital I/O 88, 99
- continuous edge-to-edge measurement mode 94,
107
 - wiring 50
- Control Panel applet 68, 111
- conversion modes
 - continuous analog output 82
 - continuous scan mode 75
 - digital I/O 87
 - externally retriggered scan 77
 - scan 74
 - single-value analog input 74
 - single-value analog output 82
 - software-retriggered scan 76
- conversion rate 75, 77
- counter/timer
 - channels 89, 101
 - clock sources 90, 106
 - clock-falling edge type 107
 - clock-rising edge type 107
 - connecting edge-to-edge signals 49, 50
 - connecting frequency measurement signals 48
 - connecting period signals 48
 - connecting pulse width signals 48
 - connecting up/down counting signals 47
 - continuous edge-to-edge measurement mode 107
 - edge-to-edge measurement mode 107

- event counting [107](#)
- gate types [90](#)
- gate-falling edge type [107](#)
- gate-rising edge type [108](#)
- high-edge gate type [107](#)
- high-level gate type [107](#)
- high-to-low output pulse [107](#)
- internal gate type [107](#)
- interrupt-driven operations [108](#)
- low-edge gate type [107](#)
- low-level gate type [107](#)
- low-to-high output pulse [107](#)
- one-shot mode [107](#)
- rate generation mode [107](#)
- repetitive one-shot mode [107](#)
- specifying in the input channel-gain list [71](#)
- subsystem specifications [126](#)
- up/down counting [107](#)
- variable pulse width [107](#)
- wiring event counting signals [46, 47](#)
- wiring frequency measurement signals [48](#)
- wiring pulse output signals [51](#)

counting events [92](#)

current loop inputs [43](#)

customer service [113](#)

D

D/A, *see* [analog output 124](#)

DAC Over Sample error [86](#)

DAQ Adaptor [20](#)

DAQ Adaptor for MATLAB [20](#)

data encoding [78, 86, 100](#)

data flow modes

- continuous C/T [99](#)
- continuous digital input [99](#)
- continuous post-trigger [99](#)
- single-value [99](#)

data format and transfer

- analog input [78](#)
- analog output [86](#)

DataAcq SDK [20](#)

device driver [18](#)

differential channels [68, 101](#)

differential inputs [39](#)

digital I/O [87](#)

- lines [87](#)
- operation modes [87](#)
- specifying a digital input port in the input channel-gain list [70](#)
- subsystem specifications [125](#)

- testing input operations [59](#)
- testing output operations [60](#)
- updating the digital output port through output channel-gain list [80](#)
- wiring [45](#)

Digital In/Out connector pin assignments [157](#)

digital input port [88](#)

digital output port [88](#)

digital trigger [78, 82](#)

DT9818 Device Driver [18, 32](#)

DT9818-32-OEM connector pin assignments [135](#)

DT9818-OEM connector pin assignments [135](#)

DT-Open Layers for .NET Class Library [19](#)

duty cycle [91](#)

E

edge type

- clock falling [107](#)
- clock rising [107](#)
- gate falling [107](#)
- gate rising [108](#)

edge-to-edge measurement mode [93, 107](#)

- wiring [49](#)

encoding data [78, 86](#)

environmental specifications [130](#)

EP333 cable [21](#)

EP353 accessory panel [21, 36, 140](#)

EP355 screw terminal panel [21, 37, 143](#)

EP356 accessory panel [21, 38, 148](#)

EP360 cable [21](#)

errors

- analog input [79](#)
- analog output [86](#)
- over sample [79, 86](#)
- overflow [79](#)
- underflow [86](#)

event counting [46, 92, 107](#)

external clock [90, 106](#)

external clock divider

- maximum [106](#)
- minimum [106](#)

external digital trigger [78, 82](#)

- negative [105](#)

externally retriggered scan mode [77](#)

F

factory service [113](#)

features [16](#)

FifoSize [99](#)

- formatting data
 - analog input 78
 - analog output 86
- frequency
 - base clock 106
 - external A/D clock 74
 - external C/T clock 90
 - external DAC clock 82
 - internal A/D clock 74, 106
 - internal A/D sample clock 106
 - internal C/T clock 90, 106
 - internal DAC clock 82
 - internal retrigger clock 100
 - output pulse 94
- frequency measurement 48, 61, 93

G

- gain
 - actual available 101
 - analog input 73
 - analog output 81
 - number of 101
 - programmable 101
- gate type 90
 - high-edge 107
 - high-level 107
 - internal 107
 - low-edge 107
 - low-level 107
- gate-falling edge type 107
- gate-rising edge type 108
- generating pulses 94, 95, 96

H

- hardware features 16
- help, online 55
- high-edge gate type 107
- high-level gate type 107
- hot-swapping 29

I

- inprocess buffers 100
- input
 - ranges 73
 - sample clock sources 74
- input channel-gain list 69
 - reading the counter/timers 71
 - reading the digital input port 70

- specifying analog input channels 69
- input configuration
 - differential analog 39, 68
 - pseudo-differential analog 39, 68
 - single-ended analog 39, 67
- Input FIFO Overflow error 79
- internal
 - clock 90, 106
 - gate type 107
- interrupt-driven operations 108

J

- J1 connector
 - DT9818-OEM and DT9818-32-OEM 135
 - EP353 140
 - EP356 148
- J2 connector
 - DT9818-OEM and DT9818-32-OEM 136
 - EP353 141
 - EP356 149
- J3 connector, DT9818-OEM and DT9818-32-OEM 138

L

- LabVIEW 20
- LEDs 30, 31
- lines, digital I/O 87
- low-edge gate type 107
- low-level gate type 107
- LV-Link 20

M

- MATLAB 20
- MaxDifferentialChannels 101
- MaxExtClockDivider 106
- MaxFrequency 106
- MaxMultiScanCount 100
- MaxRetriggerFreq 100
- MaxSingleEndedChannels 101
- measuring frequency 93
- measuring pulses 93, 94
- MinExtClockDivider 106
- MinFrequency 106
- MinRetriggerFreq 100

N

number of
 differential channels 101
 gains 101
 I/O channels 101
 resolutions 102
 scans per trigger 100
 single-ended channels 101
 voltage ranges 102
NumberOfChannels 101
NumberOfRanges 102
NumberOfResolutions 102
NumberOfSupportedGains 101
Nyquist Theorem 74

O

one-shot pulse output 95, 107
online help 55
Open Layers Control Panel applet 68, 111
operation modes
 continuous digital I/O 88
 continuous scan 75
 externally retriggered scan 77
 single-value analog input 74
 single-value analog output 82
 single-value digital I/O 87
 software-retriggered scan 76
 triggered scan 76
 waveform generation 84
output
 channel-gain list 80
 clock sources 82
 pulses 107
 ranges 81
output channel-gain list
 specifying analog output channels 80
 specifying the digital output port 80
Output FIFO Underflow error 86
outputting pulses 51, 62, 94, 95, 96
over sample error 79, 86
overflow error 79

P

period measurement 94
 wiring 48
physical specifications 130
pin assignments
 Analog Input connector 156
 Digital In/Out connector 157

ports, digital I/O 87
post-trigger acquisition mode 99
power specifications 130
preparing to wire signals 35
pseudo-differential inputs 39, 68
pulse output
 one-shot 95
 rate generation 94
 repetitive one-shot 96
 testing 62
 types 91
 wiring 51
pulse width 91, 93
 wiring 48

Q

Quick DataAcq application 18
 running 55
QuickDAQ
 Advanced FFT Analysis option 19
 Base version 18
 FFT Analysis option 18

R

ranges
 analog input 73
 analog output 81
 number of 102
rate generation 94, 107
recommendations for wiring 35
repetitive one-shot pulse output 96, 107
resolution
 analog input 67
 analog output 80
 available 102
 number of 102
retrigger clock frequency 100
retriggered scan mode 76, 77
returning boards to the factory 113
RMA 113
running the Quick DataAcq application 55

S

sample clock sources 74
sample rate 75, 77
scan mode
 externally retriggered 77
 software-retriggered 76

- scan operations, analog input 74
- screw terminal assignments, EP355
 - attached to connector J2 144
 - attached to connector J3 146
- screw terminal panel, EP355 37, 143
- screw terminal panel, STP37 21
- SDK 20
- service and support procedure 112
- simultaneous clocking 106
- simultaneous start list 99
- single buffer wrap mode 100
- single-ended channels 39, 67, 101
 - number of 101
- single-value operations 99
 - analog input 74
 - analog output 82
 - digital I/O 87
- software trigger 78, 82, 105
- software-retriggered scan mode 76
- specifications 121
 - analog input 122
 - analog output 124
 - clocks 128, 129
 - counter/timer specifications 126
 - digital I/O 125
 - environmental 130
 - physical 130
 - power 130
 - regulatory 132
 - triggers 127
- specifying a single channel
 - analog input 68
 - analog output 80
- specifying one or more channels
 - analog input 69
 - digital I/O 70
- stopping an operation 74, 84
- STP connection box 159
- STP37 screw terminal panel 21
- SupportedGains 101
- SupportedResolutions 102
- SupportedVoltageRanges 102
- SupportsBinaryEncoding 100
- SupportsBuffering 100
- SupportsChannelListInhibit 101
- SupportsClockFalling 107
- SupportsClockRising 107
- SupportsContinuous 99
- SupportsContinuousMeasure 107
- SupportsCount 107
- SupportsDCCoupling 104
- SupportsDifferential 101
- SupportsExternalClock 106
- SupportsGateFalling 107
- SupportsGateHighEdge 107
- SupportsGateHighLevel 107
- SupportsGateLowEdge 107
- SupportsGateLowLevel 107
- SupportsGateNone 107
- SupportsGateRising 108
- SupportsHighToLowPulse 107
- SupportsInProgressFlush 100
- SupportsInternalClock 106
- SupportsInterrupt 108
- SupportsLowToHighPulse 107
- SupportsMeasure 107
- SupportsNegExternalTTLTrigger 105
- SupportsOneShot 107
- SupportsOneShotRepeat 107
- SupportsPosExternalTTLTrigger 105
- SupportsProgrammableGain 101
- SupportsRateGenerate 107
- SupportsSimultaneousClocking 106
- SupportsSimultaneousStart 99
- SupportsSingleEnded 101
- SupportsSingleValue 99
- SupportsSoftwareTrigger 105
- SupportsTriggeredScan 100
- SupportsUpDown 107
- SupportsVariablePulseWidth 107
- SupportsWrapSingle 100
- system requirements 28

T

- technical support 112
- throughput
 - maximum 106
 - minimum 106
- transferring data
 - analog input 78
 - analog output 86
- triggered scan 76, 100
 - number of scans per trigger 100
 - retrigger frequency 100
- triggers
 - analog input 78
 - external 78, 82
 - external negative digital 105
 - external positive digital 105
 - software 78, 82, 105
 - specifications 127

troubleshooting
 procedure 110
 service and support procedure 112
 troubleshooting table 110
TTL trigger 78, 82

U

underflow error 86
units, counter/timer 89
unpacking 27
up/down counting 92, 107
 wiring 47
updating the digital output port 80
USB cable 29, 30

V

variable pulse width 107
Visual Basic for .NET programs 19
Visual C# programs 19
voltage ranges 73, 102
 number of 102

W

waveform generation mode 84
wiring signals
 analog outputs 44, 155
 continuous edge-to-edge measurement 50
 current loop analog inputs 43
 differential analog inputs 40, 155
 digital inputs and outputs 45
 edge-to-edge measurement 49
 event counting applications 46, 47
 frequency measurement applications 48
 period measurement 48
 preparing 35
 pseudo-differential analog inputs 40, 154
 pulse output applications 51
 pulse width measurement 48
 recommendations 35
 single-ended analog inputs 39, 154
 to the BNC connection box 152
 to the STP connection box 159
 up/down counting 47
writing programs in
 C/C++ 20
 Visual Basic .NET 19
 Visual C# 19

