 
 
 




***User's Manual for
Standard TEMPpoint™, VOLTpoint™,
and MEASURpoint™ LXI
Instruments***

DT8871, DT8871U, DT8872, DT8873, DT8874



Twenty Second Edition
March, 2016

Copyright © 2016 by Data Translation, Inc.
All rights reserved.

Information furnished by Data Translation, Inc. is believed to be accurate and reliable; however, no responsibility is assumed by Data Translation, Inc. for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Data Translation, Inc.

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer software clause at 48 C.F.R, 252.227-7013, or in subparagraph (c)(2) of the Commercial Computer Software - Registered Rights clause at 48 C.F.R., 52-227-19 as applicable. Data Translation, Inc., 100 Locke Drive, Marlboro, MA 01752.

Data Translation, Inc.
100 Locke Drive
Marlboro, MA 01752-1192
(508) 481-3700
www.datatranslation.com
Fax: (508) 481-8620
E-mail: info@datx.com

Data Translation® is a registered trademark of Data Translation, Inc. MEASURpoint™, TEMPpoint™, VOLTpoint™, ISO-Channel™, and QuickDAQ™ are trademarks of Data Translation, Inc.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Radio and Television Interference

This equipment has been tested and found to comply with CISPR EN55022 Class A and EN61000-6-1 requirements and also with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications to this equipment not expressly approved by Data Translation could void your authority to operate the equipment under Part 15 of the FCC Rules.

Note: This product was verified to meet FCC requirements under test conditions that included use of shielded cables and connectors between system components. It is important that you use shielded cables and connectors to reduce the possibility of causing interference to radio, television, and other electronic devices.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

Table of Contents

About this Manual	11
Intended Audience.....	11
How this Manual is Organized	12
Conventions Used in this Manual	12
Related Information.....	13
Where To Get Help.....	13
 Chapter 1: Overview	 15
Hardware Features.....	16
TEMPpoint Features	16
VOLTpoint Features	18
MEASURpoint Features	19
Supported Software	21
Accessories	24
Getting Started Procedure.....	25
 Part 1: Getting Started	 27
 Chapter 2: Preparing to Use the Instrument	 29
Unpacking.....	31
Checking the System Requirements	32
Installing the Software.....	33
Prerequisite Software	33
Installation Instructions	33
Viewing the Documentation.....	34
 Chapter 3: Setting Up and Installing the Instrument	 35
Connecting the Instrument to the LAN	37
Connecting to a Site LAN	38
Connecting to a Private LAN	39
Connecting Using a Hub or Switch	39
Connecting Directly to a Computer	40
Applying Power	41
Getting an IP Address and Host Name.....	43
Determining Ethernet Activity	44
Resetting the Instrument.....	46

Chapter 4: Wiring Signals	47
General Wiring Recommendations	49
Warm-Up Time	50
Connecting Thermocouple Inputs	51
Connecting RTD Inputs	53
4-Wire RTD Connections	54
3-Wire RTD Connections	55
2-Wire RTD Connections	55
Connecting Voltage Inputs	57
Connecting Voltage Inputs to Thermocouple Channels	57
Connecting Voltage Inputs to RTD Channels	59
Connecting Voltage Inputs to Voltage Channels	60
Connecting Current Loop Inputs	62
Connecting Current Loop Inputs to Thermocouple Channels	62
Connecting Current Loop Inputs to RTD Channels	64
Connecting Current Loop Inputs to Voltage Channels	65
Connecting Digital I/O Signals	67
Connecting Digital Input Signals	68
Connecting Digital Output Signals	69
Chapter 5: Verifying the Operation of Your Instrument	71
Before Using the Web Interface	73
Java Requirements	73
Internet Explorer Browser Settings	73
JavaScript	73
Security Levels	74
Internet Zone	74
Local Intranet Zone	75
Trusted Sites Zone	76
Pop-up Blockers	77
Associating CSV Files with Microsoft Excel or Notepad	78
Locating Your Instrument on the LAN	79
Running the Eureka Discovery Utility	79
Configuring Windows Firewall Settings	80
Launching the Web Interface	82
Configuring the Instrument	83
LAN Configuration	83
Channel Configuration	84
Scan Rate	86
Filter Configuration	87
Alarm Limits Configuration	88

Digital Input and Trigger Configuration	89
Digital Output Configuration	90
Measuring Data and Controlling the Instrument	91
Starting and Stopping a Scan.	91
Controlling the Digital Outputs	92
Reading the Digital Inputs.	93
Downloading Measurements	94
Part 2: Using Your Instrument.	97
Chapter 6: Principles of Operation	99
Block Diagrams.	100
DT8871U Block Diagram	100
DT8871 Block Diagram.	101
DT8872 Block Diagram.	102
DT8873 Block Diagram.	103
DT8874 Block Diagram.	104
Analog Input Features	105
Analog Input Channels	105
Thermocouple Input Channels	106
Cold Junction Compensation	107
Open Thermocouple Detection.	107
RTD Channels	108
Input Ranges	108
Out of Range Data for Thermocouple Channels	109
Out of Range Data for RTD Channels	110
Out of Range Data for Voltage Channels	110
Resolution.	110
Calibration	110
Sample Clock Source	111
Trigger Source	111
Conversion Modes	112
Simultaneous Single-Value Operations	112
Continuous Scan Mode	112
Specifying Analog Input Channels	112
How Continuous Scan Works.	113
Filtering.	114
Data Format	114
Data Format for Thermocouple Channels	114
Data Format for RTD Channels	114
Data Format for Voltage Channels	114
Error Conditions	115

Digital I/O Features	116
Digital Input Lines	116
Digital Output Lines	117
Channel-to-Channel Isolation	117
Resolution	117
Operation Modes	117
Chapter 7: Troubleshooting	119
General Checklist	120
Technical Support	122
If Your Instrument Needs Factory Service	123
Appendix A: Specifications	125
Basic Instrument Specifications	126
Thermocouple Specifications	127
System Temperature Error for the DT8871U and DT8874	128
System Temperature Error for the DT8871	130
RTD Specifications	132
Temperature Specifications	133
Voltage Measurement Specifications	135
Isolation and Protection Specifications	137
Memory Specifications	138
Digital I/O Specifications	139
Power, Physical, and Environmental Specifications	140
Regulatory Specifications	141
Connector Specifications	142
Thermocouple Connectors	142
RTD Connectors	143
Voltage Connectors	143
Ethernet (RJ45) Connector	143
External Power Supply Specifications	145
Appendix B: Connector Pin Assignments	147
Appendix C: Configuring Network Settings on Your PC	149
Configuring the PC to Use Auto-IP	150
Specifying a Static IP Address for your Instrument	153
Reconfiguring the PC to Use a Static IP Address	154

Appendix D: About ISO-Channel Technology	155
ISO-Channel Technology.....	156
Why ISO-Channel Technology is Your Best Return on Investment	157
Understanding Ground Loops	157
ISO-Channel Eliminates Ground Loops and Increases Common-Mode Rejection..	158
Floating, Differential Signals	159
Simultaneous Architecture	160
Channel-to-Channel Isolation	161
Summary	162
Floating Signal Inputs Offer New Application Advantages	163
Isolating Each Input	164
New Application Derived from Isolated Channels	167
Summary	168
Index	169

About this Manual

TEMPpoint is a family of temperature measurement instruments that includes the DT9871U, DT9871, DT8871U, DT8871, DT9872, and DT8872. This manual describes the DT8871U, DT8871, and DT8872 Ethernet LXI (LAN eXtensions for Instrumentation) models.

VOLTpoint is a family of voltage measurement instruments that includes the DT9873 and DT8873. This manual describes the DT8873 LXI model.

MEASURpoint™ a family of mixed temperature and voltage measurement instruments that includes the DT9874 and DT8874. This manual describes the DT8874 LXI model.

Note: For information on the DT8875 MEASURpoint LXI instrument, refer to the *DT8875 MEASURpoint LXI Instrument User's Manual*.

For information on the DT8876 MEASURpoint LXI instrument, refer to the *DT8876 MEASURpoint LXI Instrument User's Manual*.

For information on the DT9871U, DT9871, DT9872, DT9873, and DT9874 USB models of TEMPpoint, VOLTpoint, and MEASURpoint, refer to the *User's Manual for Standard TEMPpoint, VOLTpoint, and MEASURpoint USB Instruments*.

The first part of this manual describes how to install and set up your instrument, and verify that the instrument is working properly.

The second part of this manual describes the features and capabilities of your instrument using the IVI-COM instrument driver software. Troubleshooting information is also provided.

Note: If you are programming the instrument using the IVI-COM driver, refer to the DtxMeasurement IVI-COM driver online help for more information.

If you are using Standard Commands for Programmable Instruments (SCPI) to program your instrument, refer to the *SCPI Programmer's Manual for MEASURpoint* for more information.

Intended Audience

This document is intended for engineers, scientists, technicians, or others responsible for using and/or programming a TEMPpoint, VOLTpoint, or MEASURpoint instrument. It is assumed that you have some familiarity with thermocouples, RTDs, and/or voltages and that you understand your application.

How this Manual is Organized

This manual is organized as follows:

- [Chapter 1, “Overview,”](#) summarizes the major features of the TEMPpoint, VOLTpoint, and MEASURpoint instruments, as well as the supported software and accessories.
- [Chapter 2, “Preparing to Use the Instrument,”](#) describes how to unpack the instrument, check the system requirements, install the software, and view the documentation online.
- [Chapter 3, “Setting Up and Installing the Instrument,”](#) describes how to apply power to the instrument and connect the instrument to the network.
- [Chapter 4, “Wiring Signals,”](#) describes how to wire signals to the instrument.
- [Chapter 5, “Verifying the Operation of Your Instrument,”](#) describes how to verify the operation of the instrument with the instrument’s web interface.
- [Chapter 6, “Principles of Operation,”](#) describes the analog input and digital I/O features of the TEMPpoint, VOLTpoint, and MEASURpoint instruments in detail.
- [Chapter 7, “Troubleshooting,”](#) provides information that you can use to resolve problems with your instrument, should they occur.
- [Appendix A, “Specifications,”](#) lists the specifications of the TEMPpoint, VOLTpoint, and MEASURpoint instruments.
- [Appendix B, “Connector Pin Assignments,”](#) describes the pin assignments of the digital I/O connector on the TEMPpoint, VOLTpoint, and MEASURpoint instruments.
- [Appendix C, “Configuring Network Settings on Your PC,”](#) describes how to configure the network settings of your PC to use Auto-IP or a static IP address.
- [Appendix D, “About ISO-Channel Technology,”](#) describes the benefits of ISO-Channel™ technology.
- An index completes this manual.

Conventions Used in this Manual

The following conventions are used in this manual:

- Notes provide useful information or information that requires special emphasis, cautions provide information to help you avoid losing data or damaging your equipment, and warnings provide information to help you avoid catastrophic damage to yourself or your equipment.
- Items that you select or type are shown in **bold**.

Related Information

Refer to the following documents for more information on using a TEMPpoint, VOLTpoint, or MEASURpoint LXI instrument:

- DtxMeasurement IVI-COM Driver online help. This document describes how to use the IVI-COM driver to access the capabilities of your instrument.

The IVI-COM driver works with any development environment that supports COM programming, including MATLAB® from The MathWorks™, Microsoft® Visual C#®.NET or Visual Basic®.NET, Agilent® VEE Pro, National Instruments™ LabVIEW™ or LabWindows™, and so on.

- *QuickDAQ 2103 User's Manual* (UM-24774). This manual describes how to create a QuickDAQ application to acquire and analyze data from a TEMPpoint, VOLTpoint, or MEASURpoint instrument.
- *SCPI Programmer's Manual for LXI Measurement Instruments*. For programmers who want to use the SCPI interface to program a TEMPpoint, VOLTpoint, or MEASURpoint instrument, this document describes the supported SCPI commands and example programs for these instruments.
- IVI foundation (www.ivifoundation.org)
- *Omega Complete Temperature Measurement Handbook and Encyclopedia®* or the Omega Engineering web site: <http://www.omega.com>. Both resources provide valuable information on thermocouple types, RTD types, standards, and linearization.

Where To Get Help

Should you run into problems installing or using a TEMPpoint, VOLTpoint, or MEASURpoint instrument, the Data Translation Technical Support Department is available to provide technical assistance. Refer to [Chapter 7](#) for more information. If you are outside the United States or Canada, call your local distributor, whose number is listed on our web site (www.datatranslation.com).



Overview

Hardware Features.....	16
Supported Software.....	21
Accessories	24
Getting Started Procedure.....	25

Hardware Features

Data Translation provides a number of LXI (Ethernet) instruments to meet your measurement needs, including the following:

- TEMPpoint – a family of temperature measurement instruments
- VOLTpoint – a family of voltage measurement instruments
- MEASURpoint – a family of mixed temperature and voltage measurement instruments

All of these Ethernet instruments are class C devices that comply with LXI version 1.1.

The following sections summarize the features of the TEMPpoint, VOLTpoint, and MEASURpoint LXI instruments.

TEMPpoint Features

TEMPpoint instruments include the following models: DT8871U, DT8871, and DT8872.

[Figure 1](#) shows a DT8871U instrument.



Figure 1: TEMPpoint Instrument

The key features of TEMPpoint instruments are as follows:

- *DT8871U and DT8871:*
 - Configurable analog input channels for thermocouple or differential voltage inputs; easy-access jacks for each channel for quick wiring
 - One CJC (cold junction compensation) input for each thermocouple channel

- B, E, J, K, N, R, S, and T thermocouple types supported; the instrument automatically linearizes the measurements and returns the data as a 32-bit, floating-point temperature values
- Input range of ± 0.075 V for the DT8871U (with 0.25 μ V RMS A/D noise using no software filtering) and ± 1.25 V for the DT8871 (with 5 μ V RMS A/D noise using no software filtering)
- Break-detection circuitry to detect open thermocouple inputs
- *DT8872:*
 - Configurable analog input channels for RTDs and differential voltage inputs; easy-access jacks for each channel for quick wiring
 - 100 Ω , 500 Ω , and 1000 Ω platinum RTD types supported using alpha curves of 0.00385 (European) or 0.00392 (American)
 - 4-wire, 3-wire, or 2-wire configurations; the DT8872 automatically linearizes the measurements and returns the data as 32-bit, floating-point temperature, resistance, or voltage values
 - Input range of ± 1.25 V
- One 24-bit, Delta-Sigma A/D converter per channel for simultaneous, high-resolution measurements
- ± 500 V galvanic isolation channel-to-channel and to the host computer to protect signal integrity
- Throughput rate of up to 10 Samples/s for all channels.
- Software or external, digital trigger on digital input line 0 starts acquisition
- Auto-calibrating front-end resets the zero point on each power-up; in addition, the instrument supports anytime calibration, performing an auto-calibration function on software command
- Measurement Instrument Calibration Utility allows you to calibrate the instrument in the field (see [page 23](#) for more information on this utility)
- 8 opto-isolated digital input lines; you can read the digital input port through the analog input data stream for correlating analog and digital measurements
- 8 opto-isolated digital output lines; the outputs are solid-state relays that operate from ± 30 V at currents up to 400 mA (peak) AC or DC

VOLTpoint Features

Figure 2 shows a VOLTpoint instrument.



Figure 2: VOLTpoint Instrument

The key features of VOLTpoint (DT8873) instruments are as follows:

- Direct connection of analog input channels for differential voltage inputs; removable screw terminal blocks for each channel for quick wiring
- One 24-bit, Delta-Sigma A/D converter per channel for simultaneous, high-resolution measurements
- ± 500 V galvanic isolation channel-to-channel and to the host computer to protect signal integrity
- Software-selectable input range of ± 10 V, ± 100 V, or ± 400 V per channel
- Throughput rate of up to 10 Samples/s for all channels
- Software or external, digital trigger on digital input line 0 starts acquisition
- Auto-calibrating front-end resets the zero point on each power-up; in addition, the instrument supports anytime calibration, performing an auto-calibration function on software command
- Measurement Instrument Calibration Utility allows you to calibrate the instrument in the field (see [page 23](#) for more information on this utility)
- 8 opto-isolated digital input lines; you can read the digital input port through the analog input data stream for correlating analog and digital measurements
- 8 opto-isolated digital output lines; the outputs are solid-state relays that operate from ± 30 V at currents up to 400 mA (peak) AC or DC

MEASURpoint Features

The standard MEASURpoint (DT8874) instrument provides 16 thermocouple channels, 16 RTD channels, and 16 voltage channels. [Figure 3](#) shows a MEASURpoint instrument.



Figure 3: MEASURpoint Instrument

The key features of MEASURpoint (DT8874) instruments are as follows:

- *Analog Input Channels 0 to 15:*
 - Configurable channels for thermocouple or differential voltage inputs; easy-access jacks for each channel for quick wiring
 - One CJC (cold junction compensation) input for each thermocouple channel
 - B, E, J, K, N, R, S, and T thermocouple types supported; the instrument automatically linearizes the measurements and returns the data as a 32-bit, floating-point temperature values
 - Input range of ± 0.075 V (with $0.25 \mu\text{V}$ RMS A/D noise using no software filtering)
 - Break-detection circuitry to detect open thermocouple inputs

- *Analog Input Channels 16 to 31:*
 - Configurable analog input channels for RTDs and differential voltage inputs; easy-access jacks for each channel for quick wiring
 - 100 Ω , 500 Ω , and 1000 Ω platinum RTD types supported using alpha curves of 0.00385 (European) or 0.00392 (American)
 - 4-wire, 3-wire, or 2-wire configurations; the DT8872 automatically linearizes the measurements and returns the data as 32-bit, floating-point temperature, resistance, or voltage values
 - Input range of ± 1.25 V
- *Analog Input Channels 31 to 48:*
 - Direct connection of analog input channels for differential voltage inputs; removable screw terminal blocks for each channel for quick wiring
 - Software-selectable input range of ± 10 V, ± 100 V, or ± 400 V per channel
- One 24-bit, Delta-Sigma A/D converter per channel for simultaneous, high-resolution measurements
- ± 500 V galvanic isolation channel-to-channel and to the host computer to protect signal integrity
- Throughput rate of up to 10 Samples/s for all channels
- Software or external, digital trigger on digital input line 0 starts acquisition
- Auto-calibrating front-end resets the zero point on each power-up; in addition, the instrument supports anytime calibration, performing an auto-calibration function on software command
- Measurement Instrument Calibration Utility allows you to calibrate the instrument in the field (see [page 23](#) for more information on this utility)
- 8 opto-isolated digital input lines; you can read the digital input port through the analog input data stream for correlating analog and digital measurements
- 8 opto-isolated digital output lines; the outputs are solid-state relays that operate from ± 30 V at currents up to 400 mA (peak) AC or DC

Supported Software

The following software is available for use with the TEMPpoint, VOLTpoint, and MEASURpoint instruments:

- **Eureka Discovery Utility** – This utility helps you locate or "discover" all LXI (Ethernet) instruments that are connected to your system and provides the following information about your instrument: the IP address, manufacturer, model number, serial number, and version of the firmware that is running on your instrument. In addition, you can use this utility to configure Windows firewall settings and update the firmware for your Data Translation LXI instrument.
- **Instrument Web Interface** – This built-in interface, described in [Chapter 5](#), allows you to verify the operation of your instrument and perform basic functions with Internet Explorer and no additional software. Using it, you can configure your instrument, control output signals, measure input signals, and save results to disk.
- **QuickDAQ Base Version** – The base version of QuickDAQ is free-of-charge and allows you to acquire and analyze data from all Data Translation USB and Ethernet devices, except the DT9841 Series, DT9817, DT9835, and DT9853/54. Using the base version of QuickDAQ, you can perform the following functions:
 - Discover and select your devices.
 - Configure all input channel settings for the attached sensors.
 - Load/save multiple hardware configurations.
 - Generate output stimuli (fixed waveforms, swept sine waves, or noise signals).
 - On each supported data acquisition device, acquire data from all channels supported in the input channel list.
 - Choose to acquire data continuously or for a specified duration.
 - Choose software or triggered acquisition.
 - Log acquired data to disk in an .hpf file.
 - Display acquired data during acquisition in either a digital display using the Channel Display window or as a waveform in the Channel Plot window.
 - Choose linear or logarithmic scaling for the horizontal and vertical axes.
 - View statistics about the acquired data, including the minimum, maximum, delta, and mean values and the standard deviation in the Statistics window.
 - Export time data to a .csv or .txt file; you can open the recorded data in Microsoft Excel® for further analysis.
 - Read a previously recorded .hpf data file.
 - Customize many aspects of the acquisition, display, and recording functions to suit your needs, including the acquisition duration, sampling frequency, trigger settings, filter type, and temperature units to use.

- **QuickDAQ FFT Analysis Option** – When enabled with a purchased license key, the QuickDAQ FFT Analysis option includes all the features of the QuickDAQ Base version plus basic FFT analysis features, including the following:
 - The ability to switch between the Data Logger time-based interface and the FFT Analyzer block/average-based interface.
 - Supports software, freerun, or triggered acquisition with accept and reject controls for impact testing applications.
 - Allows you to perform single-channel FFT (Fast Fourier Transform) operations, including AutoSpectrum, Spectrum, and Power Spectral Density, on the acquired analog input data. You can configure a number of parameters for the FFT, including the FFT size, windowing type, averaging type, integration type, and so on.
 - Allows you to display frequency-domain data as amplitude or phase.
 - Supports dB or linear scaling with RMS (root mean squared), peak, and peak-to-peak scaling options
 - Supports linear or exponential averaging with RMS, vector, and peak hold averaging options.
 - Supports windowed time channels.
 - Supports the following response window types: Hanning, Hamming, Bartlett, Blackman, Blackman Harris, and Flat top.
 - Supports the ability to lock the waveform output to the analysis frame time.
 - Allows you to configure and view dynamic performance statistics, including the input below full-scale (IBF), total harmonic distortion (THD), spurious free dynamic range (SFDR), signal-to-noise and distortion ratio (SINAD), signal-to-noise ratio (SNR), and the effective number of bits (ENOB), for selected time-domain channels in the Statistics window.
 - Supports digital IIR (infinite impulse response) filters.
- **QuickDAQ Advanced FFT Analysis Option** – When enabled with a purchased software license, the QuickDAQ Advanced FFT Analysis option includes all the features of the QuickDAQ Base version with the FFT Analysis option plus advanced FFT analysis features, including the following:
 - Allows you to designate a channel as a Reference or Response channel.
 - Allows you to perform two-channel FFT analysis functions, including Frequency Response Functions (Inertance, Mobility, Compliance, Apparent Mass, Impedance, Dynamic Stiffness, or custom FRF) with H1, H2, or H3 estimator types, Cross-Spectrum, Cross Power Spectral Density, Coherence, and Coherent Output Power.
 - Supports the Exponential response window type.
 - Supports the following reference window types: Hanning, Hamming, Bartlett, Blackman, Blackman Harris, FlatTop, Exponential, Force, and Cosine Taper windows.
 - Supports real, imaginary, and Nyquist display functions.
 - Allows you to save data in the .uff file format.

- **DtxMeasurement IVI-COM driver** – This driver provides access to the instrument's functions through a COM server. The IVI-COM driver works in any 32-bit development environment that supports COM programming, including MATLAB, Visual Basic.NET, Visual C#.NET, Agilent VEE Pro, LabVIEW, LabWindows, and others.
- **SCPI commands** – Use SCPI commands to program TEMPpoint, VOLTpoint, or MEASURpoint LXI instruments. Refer to the *SCPI Programmer's Manual for LXI Measurement Instruments* for information on the supported SCPI commands and example programs.
- **Measurement Instrument Calibration Utility** – Users can calibrate a TEMPpoint, VOLTpoint, or MEASURpoint instrument in the field using precise calibration equipment and the Measurement Instrument Calibration Utility. Since each instrument consists of up to 48 individual channels, great care must be taken to ensure that proper warm-up times are followed and precise calibration equipment is used.

The calibration utility ships with a comprehensive help file that describes the required equipment and calibration procedure, including warm-up times, for each instrument.

The calibration utility allows you to revert to the factory calibration for any or all channels, or revert back to the last user calibration values, if desired. In addition, this utility generates a report that lists the starting and ending calibration values for each channel, allowing traceability.

Refer to the Data Translation web site (www.datatranslation.com) for information about selecting the right software package for your needs.

Accessories

The following optional accessories are available for TEMPpoint, VOLTpoint, or MEASURpoint instruments:

- **STP37 screw terminal panel** – The STP37, shown in [Figure 4](#), permits easy screw terminal connections for accessing the digital I/O signals of a TEMPpoint, VOLTpoint, or MEASURpoint instrument.

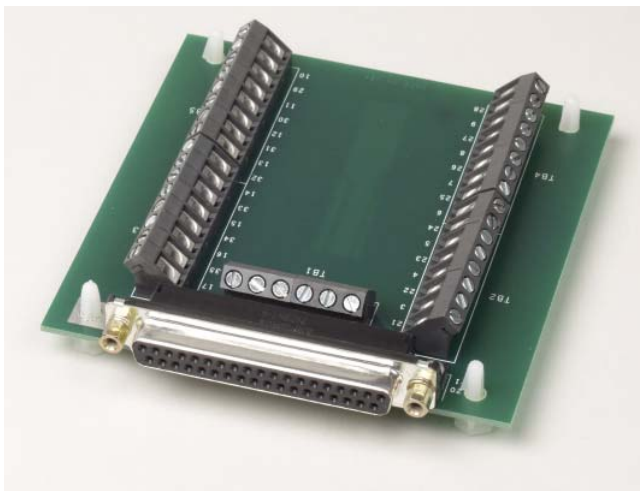


Figure 4: STP37 Screw Terminal Panel

- **EP333 cable** – The EP333, shown in [Figure 5](#), is a 2-meter shielded cable with two 37-pin connectors that connects the STP37 screw terminal panel to the digital I/O connector of the instrument.



Figure 5: STP37 Screw Terminal Panel

- **EP373 Single Rack-mount Kit** – Mounts one TEMPpoint, VOLTpoint, or MEASURpoint instrument in a rack.
- **EP374 Dual Rack-mount Kit** – Mounts two TEMPpoint, VOLTpoint, or MEASURpoint instruments side-by-side in a rack.

Getting Started Procedure

The flow diagram shown in [Figure 6](#) illustrates the steps needed to get started using a TEMPpoint, VOLTpoint, or MEASURpoint instrument. This diagram is repeated in each Getting Started chapter; the shaded area in the diagram shows you where you are in the getting started procedure.

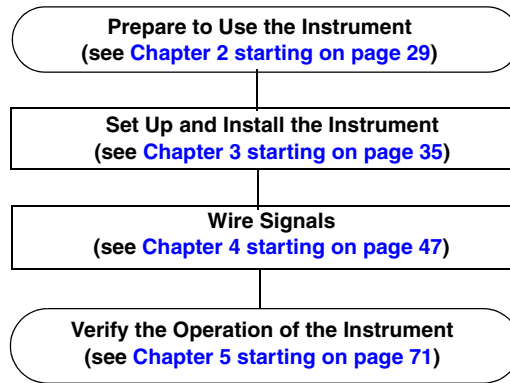



Figure 6: Getting Started Flow Diagram

Part 1: Getting Started



Preparing to Use the Instrument

Unpacking	31
Checking the System Requirements	32
Installing the Software	33
Viewing the Documentation	34

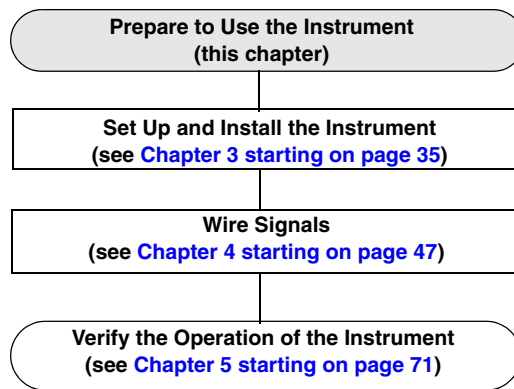

Unpacking

Open the shipping box and verify that the following items are present:

- TEMPpoint, VOLTpoint, or MEASURpoint instrument
- EP372 Ethernet cable
- EP361 +5V power supply and cable
- MEASURpoint Software CD-ROM
- For DT8872, DT8873, and DT8874 instruments, a bag of pluggable screw terminable blocks and a screwdriver.

If an item is missing or damaged, contact Data Translation. If you are in the United States, call the Customer Service Department at (508) 481-3700, ext. 1323. An application engineer will guide you through the appropriate steps for replacing missing or damaged items. If you are located outside the United States, call your local distributor, listed on Data Translation's web site (www.datatranslation.com).

Checking the System Requirements

For reliable operation, ensure that your computer meets the following system requirements:

- Processor: Pentium 4/M or equivalent
- RAM: 1 GB
- Screen Resolution: 1024 x 768 pixels
- Disk Space: 4 GB
- Ethernet port
- CD-ROM drive
- Administrator privileges for software installation
- For access to the instrument web interface:
 - Java Version 6, Update 5 or greater
 - Internet Explorer 6.0 or 7.0 web browser

Refer to [page 73](#) for more information on installing Java and configuring your browser settings

- Acrobat Reader 5.0 or later for viewing documentation

Installing the Software

This section describes how to install the software you need to use your TEMPpoint, VOLTpoint, or MEASURpoint instrument.

Prerequisite Software

No prerequisite software is required if you are using a single client to access a TEMPpoint, VOLTpoint, or MEASURpoint instrument on the LXI bus, or if you are managing how multiple clients concurrently access the instrument on the LXI bus. (In these case, your application can use sockets to communicate with the instrument.)

If, however, you want multiple clients to access your instrument on the LXI bus, and you want to "lock" access to the instrument so that one client cannot change the configuration of the instrument that another client is accessing, you need to install VISA; we recommend either Agilent VISA or NI-VISA from National Instruments. You can then use the VISA methods viLock/viUnlock to prevent other clients from accessing the instrument.

To install Agilent VISA, do the following:

1. Go to **www.agilent.com**, enter **IO Libraries Suite** in the search field, and select **Agilent IO Libraries Suite 15.0** from the search results.
2. Follow the instructions on Agilent's web site to download and install the Agilent IO Libraries, which include VISA support, VISA COM support, and the Agilent Connection Expert tool.

We recommend that you run Data Translation's Eureka Discovery Utility that is provided with the MEASURpoint software to locate your LXI instrument on the network (see [page 79](#) for more information).

Installation Instructions

You can install all the software for your instrument either from the web (at <http://www.datatranslation.com/cd/measurpoint>) or from the **MEASURpoint Software CD** that is shipped with the instrument. To ensure that you get the latest updates, it is recommended that you install the software from the web.

The installation program guides you through the installation process.

Viewing the Documentation

Note: To view the documentation, you must have Adobe Reader 5.0 or greater installed on your system.

You can access the documentation for your instrument from the Windows Start menu as follows:

- For documentation about the TEMPpoint, VOLTpoint, or MEASURpoint instrument, click **Programs -> Data Translation, Inc -> Hardware Documentation -> Measurement User's Manual for LXI Instruments**.
- For documentation on the Eureka Discovery Utility, click **Programs -> Data Translation, Inc -> Instrument Support -> Eureka LXI Instrument Discovery**.
- For documentation on the QuickDAQ application, click **Programs -> Data Translation, Inc -> QuickDAQ 2014 -> QuickDAQ User's Manual**.
- For documentation on the DtxMeasurement IVI-COM driver, click **Programs -> IVI -> DtxMeasurement -> Documentation**.
- For documentation about SCPI support, click **Programs -> Data Translation, Inc -> Measurement SCPI Support -> SCPI Programmer's Manual for Measurement**.


The following may be helpful when using Adobe Reader:

- To navigate to a specific section of the document, click a heading from the table of contents on the left side of the document.
- Within the document, click the text shown in blue to jump to the appropriate reference (the pointer changes from a hand to an index finger).
- To go back to the page from which the jump was made, click the right mouse button and **Go Back**, or from the main menu, click **Document**, and then **Go Back**.
- To increase or decrease the size of the displayed document, from the main menu, click **View**, and then **Zoom**.
- By default, Adobe Reader smooths text and monochrome images, sometimes resulting in blurry images. If you wish, you can turn smoothing off by clicking **File**, and then **Preferences/General**, and unchecking **Smooth Text and Images**.



Setting Up and Installing the Instrument

Connecting the Instrument to the LAN	37
Applying Power	41
Getting an IP Address and Host Name.....	43
Determining Ethernet Activity.....	44
Resetting the Instrument.....	46

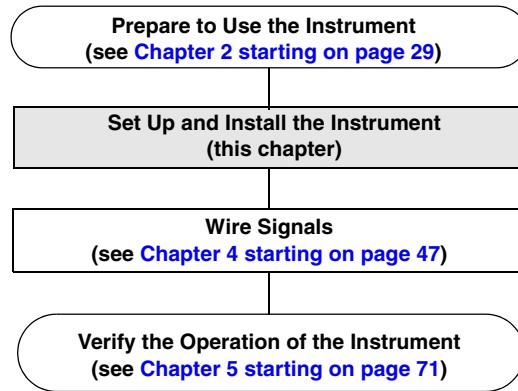

Note: Your TEMPpoint, VOLTpoint, and MEASURpoint instruments are factory-calibrated. Thereafter, yearly recalibration is recommended. Refer to [page 110](#) for more information on calibration.

Connecting the Instrument to the LAN

Figure 7 shows the LAN (RJ45) connector on the rear of the instrument that is used to connect your instrument to the LAN (Local Area Network).



Figure 7: LAN Connector on the Rear of the Instrument

This section describes how to connect your instrument to the LAN. Two connection schemes are shown:

- Site LAN connections, described on this page
- Private LAN connections, described on [page 39](#)

Note: It is recommended that you consult with your network administrator to ensure that all network security, performance, and reliability issues are considered when using connecting instruments to the LAN.

Connecting to a Site LAN

A site LAN is useful in applications that require access by many users or access by users at distributed sites. In this connection scheme, a DHCP (Dynamic Host Configuration Protocol) server is used to assign an IP address to the instrument.

Figure 8 shows a typical site LAN connections using a dedicated Ethernet hub, switch, or router. Figure 9 shows typical site LAN connections without using a dedicated Ethernet hub, switch, or router.

Note: Use standard LAN cables for network connections. TEMPpoint, VOLTpoint, and MEASURpoint instruments ship with a standard LAN cable (EP372) for connecting to the LAN (RJ45) connector on the rear panel of the instrument.

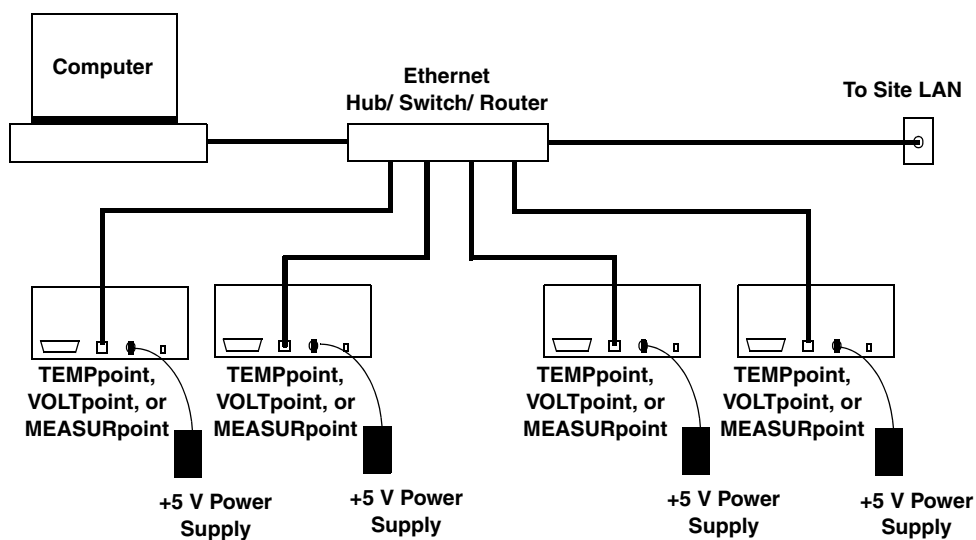


Figure 8: Typical Site LAN Connections using a Hub, Switch, or Router

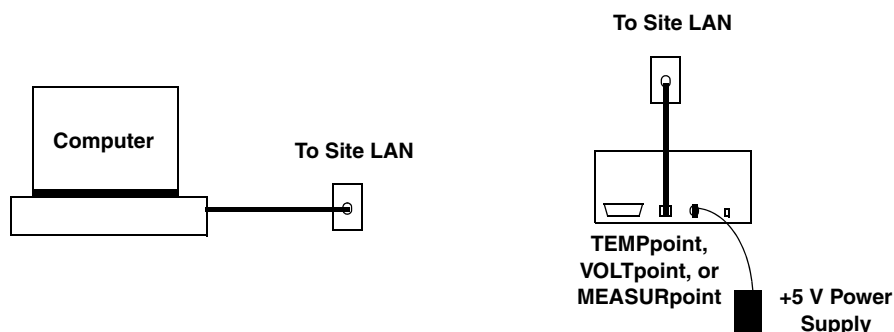


Figure 9: Typical Site LAN Connections Without Using a Hub, Switch, or Router

Connecting to a Private LAN

A private LAN (or subnet) generally involves the direct connection of the instruments to the computer, and may include Ethernet hubs or switches. Access to the instruments is limited to users that are directly connected to the private LAN; therefore, security, performance, and reliability are generally better on a private LAN than on a site LAN.

In this connection scheme, the DHCP (Dynamic Host Configuration Protocol) server is typically not available; therefore, Auto-IP is used to assign an IP address to the instrument.

Note: If no DHCP server exists and your PC is set up to use a static IP address, you must temporarily reconfigure your PC to use Auto-IP, as described on [Appendix C](#) starting on [page 149](#).

Connecting Using a Hub or Switch

[Figure 10](#) shows a typical connection scheme when connecting TEMPpoint, VOLTpoint, or MEASURpoint instruments to a private LAN using a dedicated Ethernet hub or switch.

Note: Use standard LAN cables for network connections. The instrument ships with a standard LAN cable (EP372) for connecting to the LAN (RJ45) connector on the rear panel of the instrument.

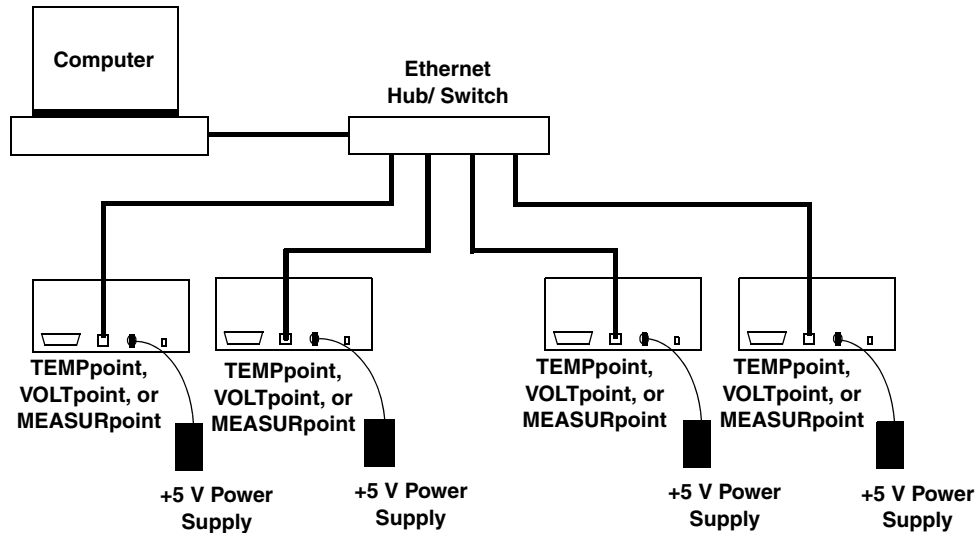


Figure 10: Typical Private LAN Connections using a Hub or Switch

Connecting Directly to a Computer

Optionally, you can connect the TEMPpoint, VOLTpoint, or MEASURpoint instrument directly to your computer, creating an ad hoc network, as shown in [Figure 11](#). Be aware that the time and date settings of the instrument will not be updated using this connection method. Therefore, this connection scheme is generally recommended for quick set up and verification only.

Note: TEMPpoint, VOLTpoint, and MEASURpoint instruments do not support the Auto-MDIX function; therefore, use a crossover cable rather than a standard LAN cable to connect your instrument unless your computer has enabled the Auto-MDIX function.

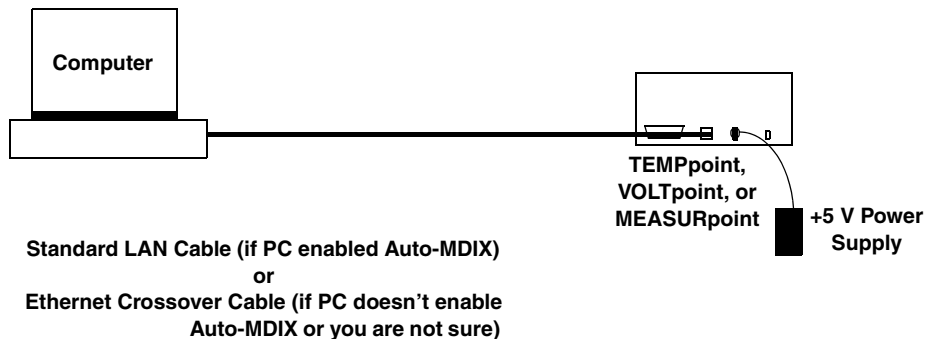


Figure 11: Typical Private LAN Connections when Connecting Directly to a Computer

Applying Power

TEMPpoint, VOLTpoint, and MEASURpoint instruments are shipped with an EP361 +5V power supply and cable. To apply power to the instrument, do the following:

1. Connect the +5 V power supply to the power connector on the rear panel of the instrument. Refer to [Figure 12](#).



Figure 12: Attaching a +5 V Power Supply to the Instrument

2. Plug the power supply into a wall outlet.

Note: For proper grounding of your measurement instrument, ensure that you use the power supply and cable (EP361) that is provided with the instrument and that you use all three prongs of the cable when connecting it to your wall outlet.

3. Press the Power switch on the rear panel of the instrument, shown in [Figure 12](#), to turn on the instrument.

The Power LED on the front panel lights to indicate that power is on.

Figure 13 shows the location of the LEDs on the front panel of the instrument; a MEASURpoint instrument is shown in this example.

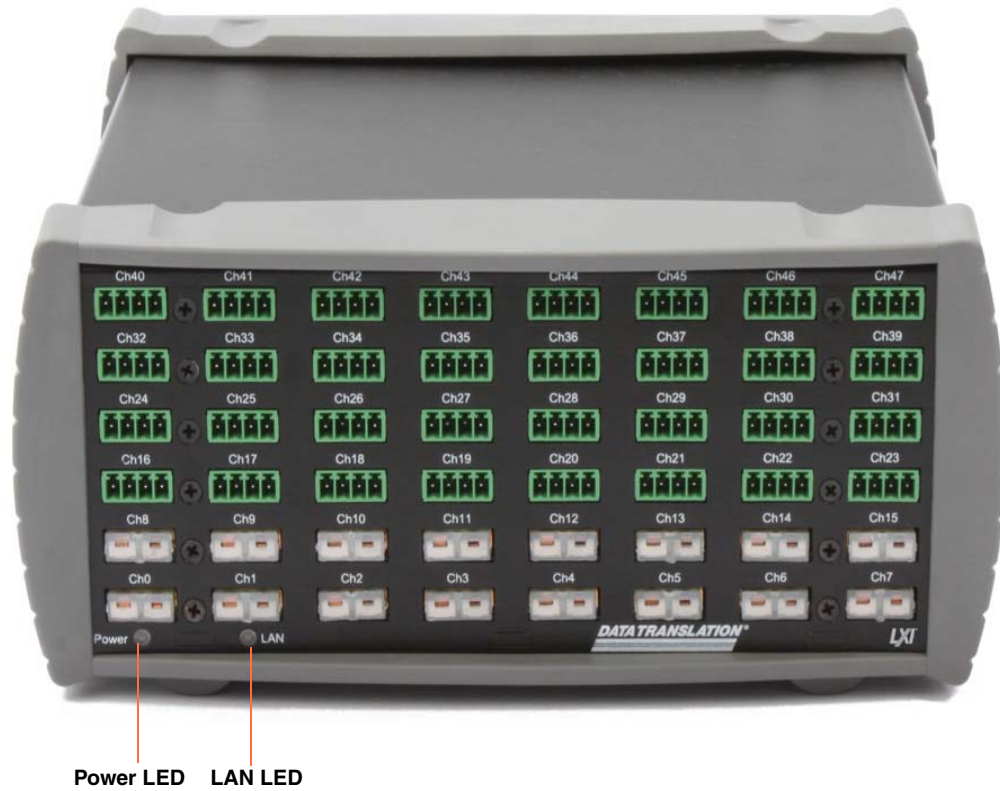


Figure 13: LEDs on the Front Panel of the Instrument

Getting an IP Address and Host Name

Once your instrument is connected to the LAN and powered on, the instrument automatically requests an Ethernet address from a DHCP (Dynamic Host Configuration Protocol) server, if available, and a host name from a DNS (Dynamic Domain Name Service) server, if available.

If these services are not available on the LAN, the instrument uses Auto-IP to set up its TCP/IP configuration. In this case, the IP address is in the range of 169.254.0.0 to 169.254.255.255 with a subnet mask of 255.255.0.0.

Note: If no DHCP server exists and your PC is set up to use a static IP address, you must temporarily reconfigure your PC to use Auto-IP, then configure your instrument to use a static IP address, as described in [Appendix C](#) starting on [page 149](#).

You can use the instrument's web interface, described in [Chapter 5](#) starting on [page 71](#), to see the IP address and host name that is assigned to your instrument.

Notes: When programming a TEMPpoint, VOLTpoint, or MEASURpoint instrument, you access the instrument through its address string, which consists of an IP address or host name, such as **TCPIP0::192.43.218.69::inst0::INSTR** or **TCPIP0::192.43.218.69::SOCKET**. If a host name was returned by the DNS server, you can also address the instrument using its host name, such as **TCPIP0::arrakis.datx.com::inst0::INSTR**.

For IVI-COM programmers, you can also assign a VISA alias to the instrument. For example, rather than addressing the instrument as **TCPIP0::192.43.218.69::inst0::INSTR**, you can a VISA alias, such as **TEMPpoint1**, instead. See your VISA documentation for more information on VISA resource strings and creating VISA aliases.

Determining Ethernet Activity

You can use the ENet Link and ENet Activity LEDs on the rear of the instrument, shown in [Figure 14](#), with the LAN LED on the front of the instrument, shown in [Figure 13](#), to determine the Ethernet activity on your instrument. [Table 1](#) describes the meaning of these LEDs.

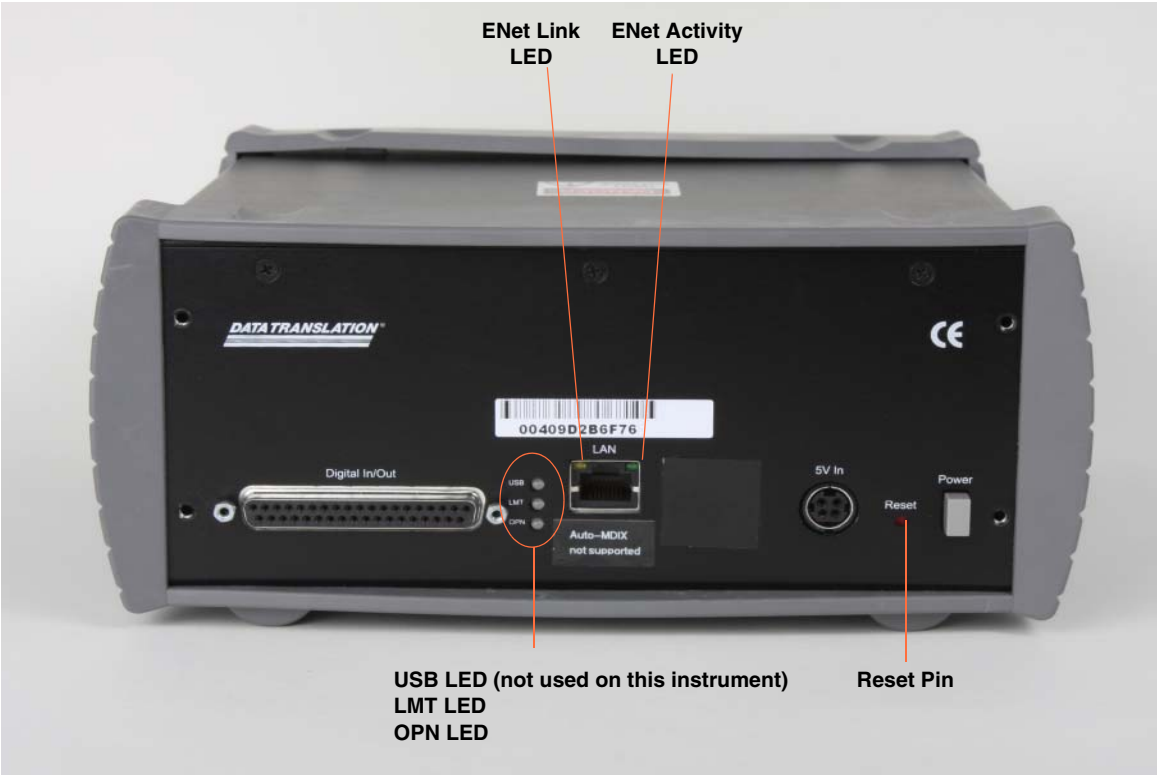


Figure 14: Rear Panel of the Instrument

Table 1: Using LEDs to Determine Ethernet Activity

LEDs	Color	Description
LAN LED (on front panel)	Solid Green	Instrument has valid IP address.
	Blinking Green	Instrument identified using the Web interface; see page 79 for more information.
	Red	If the Ethernet link is operational, the instrument does not have a valid IP address. Otherwise, the Ethernet link is not operational.

Table 1: Using LEDs to Determine Ethernet Activity (cont.)

LEDs	Color	Description
ENet Link LED (on rear panel)	Yellow	Ethernet link operational.
	Off	Ethernet link not operational.
ENet Activity LED (on rear panel)	Green	Network traffic detected.
	Off	No network traffic detected.

Resetting the Instrument

If needed, you can restore the default configuration of your instrument by pressing the Reset pin on the rear panel of the instrument, shown in [Figure 14 on page 44](#), until the LAN LED on the front panel turns off (which takes approximately 5 seconds), and then releasing the Reset pin.

The instrument reboots automatically using the factory-default LAN configuration (DHCP and auto-IP enabled); this process typically takes up to 40 seconds to complete. This forces the instrument to re-acquire an IP address from the DHCP server, or if that fails, to use Auto-IP to get an IP address.


Note: The default configuration overwrites any changes that you have made to the LAN configuration (IP address and password) using the instrument's web interface. Refer to [page 83](#) for information on the default values that are used when the instrument is reset.

The calibration parameters are not affected by the reset.



Wiring Signals

General Wiring Recommendations	49
Warm-Up Time	50
Connecting Thermocouple Inputs	51
Connecting RTD Inputs	53
Connecting Voltage Inputs	57
Connecting Current Loop Inputs	62
Connecting Digital I/O Signals	67

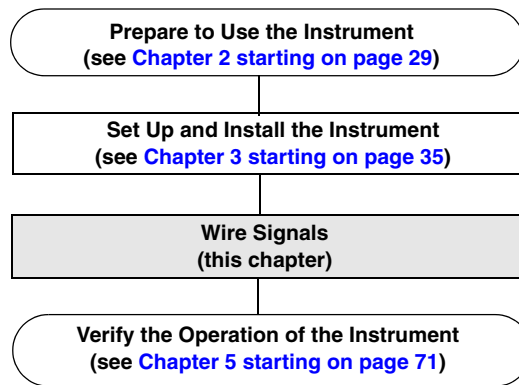

General Wiring Recommendations

Keep the following recommendations in mind when wiring signals to a TEMPpoint, VOLTpoint, or MEASURpoint instrument:

- Separate power and signal lines by using physically different wiring paths or conduits.
- To avoid noise, do not locate the instrument and cabling next to sources that produce high electromagnetic fields, such as large electric motors, power lines, solenoids, and electric arcs, unless the signals are enclosed in a mumetal shield.
- Locate the instrument's front panel as far away as possible from sources of high or low temperatures or strong air currents, such as fans.
- Prevent electrostatic discharge to the I/O while the instrument is operational.
- When wiring thermocouples, select an appropriate wire length and gauge for each thermocouple; in general, use the shortest wire length and largest gauge for the application to yield best results.
- Use shielded wire for maximum rejection of electrical interference.

Warm-Up Time

For accurate thermocouple measurements, MEASURpoint instruments require a warm-up time of 1 hour for the analog circuitry to stabilize.

For accurate RTD measurements, ensure that your RTD sensors and external calibration resistors warm up for 1 minute after the MEASURpoint instrument has been warmed up for 1 hour.

Connecting Thermocouple Inputs

The DT8871U, DT8871, and DT8874 instruments contain thermocouple jacks for connecting thermocouple inputs.

Note: On the standard DT8874 instrument, channels 0 to 15 correspond to the thermocouple input channels.

Internally, these signals are connected in differential mode. You can mix and match the following thermocouple types across channels: B, E, J, K, N, R, S, and/or T.

Each thermocouple input jack is polarized and accepts a mating plug in the appropriate orientation. Table 2 lists the color designations for the + and – polarities of the supported thermocouple types for both the ANSI (American) and IEC (International) standards.

Table 2: Thermocouple Color Designation Standards

Thermocouple Standard	Thermocouple Type	Wire Color Coding + Polarity	Wire Color Coding – Polarity
ANSI	Type J	White	Red
	Type K	Yellow	Red
	Type T	Blue	Red
	Type E	Violet	Red
	Type S	Black	Red
	Type R	Black	Red
	Type B	Gray	Red
	Type N	Orange	Red
IEC	Type J	Black	White
	Type K	Green	White
	Type T	Brown	White
	Type E	Violet	White
	Type S	Orange	White
	Type R	Orange	White
	Type B	Gray	White
	Type N	Pink	White

For more information on thermocouple standards, refer to the following web site:
<http://www.omega.com/thermocouples.html>.

CAUTION:

When connecting inputs to the thermocouple connectors on a MEASURpoint or TEMPPoint instrument, it is highly recommended that you use only original Omega thermocouple plugs (SMPW), as connectors from other suppliers may not be equivalent mechanically. Refer to [page 142](#) for more information on the connectors.

If you use connectors from suppliers other than Omega, there is a risk that you may mechanically damage the thermocouple connectors on the MEASURpoint or TEMPPoint instrument.

Figure 15 shows how to connect a thermocouple input to a thermocouple channel.

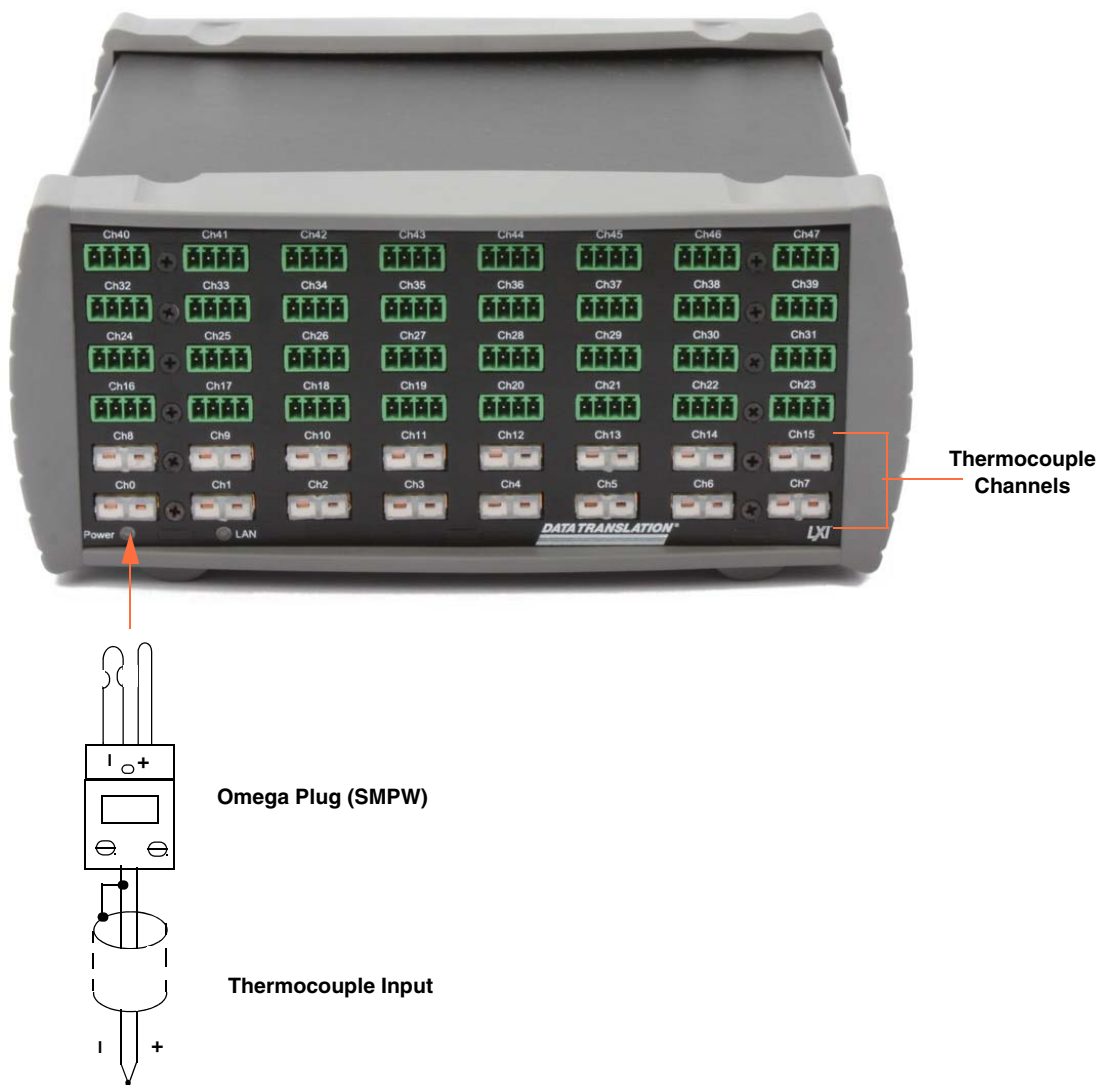


Figure 15: Connecting Thermocouple Inputs

Connecting RTD Inputs

Each DT8872 and DT8874 contains pluggable screw terminals for connecting RTD inputs. Internally, these signals are connected in differential mode.

Note: On the standard DT8874 instrument, channels 16 to 31 correspond to the RTD input channels.

Figure 16 shows the numbering of the screw terminal blocks for RTD connections.

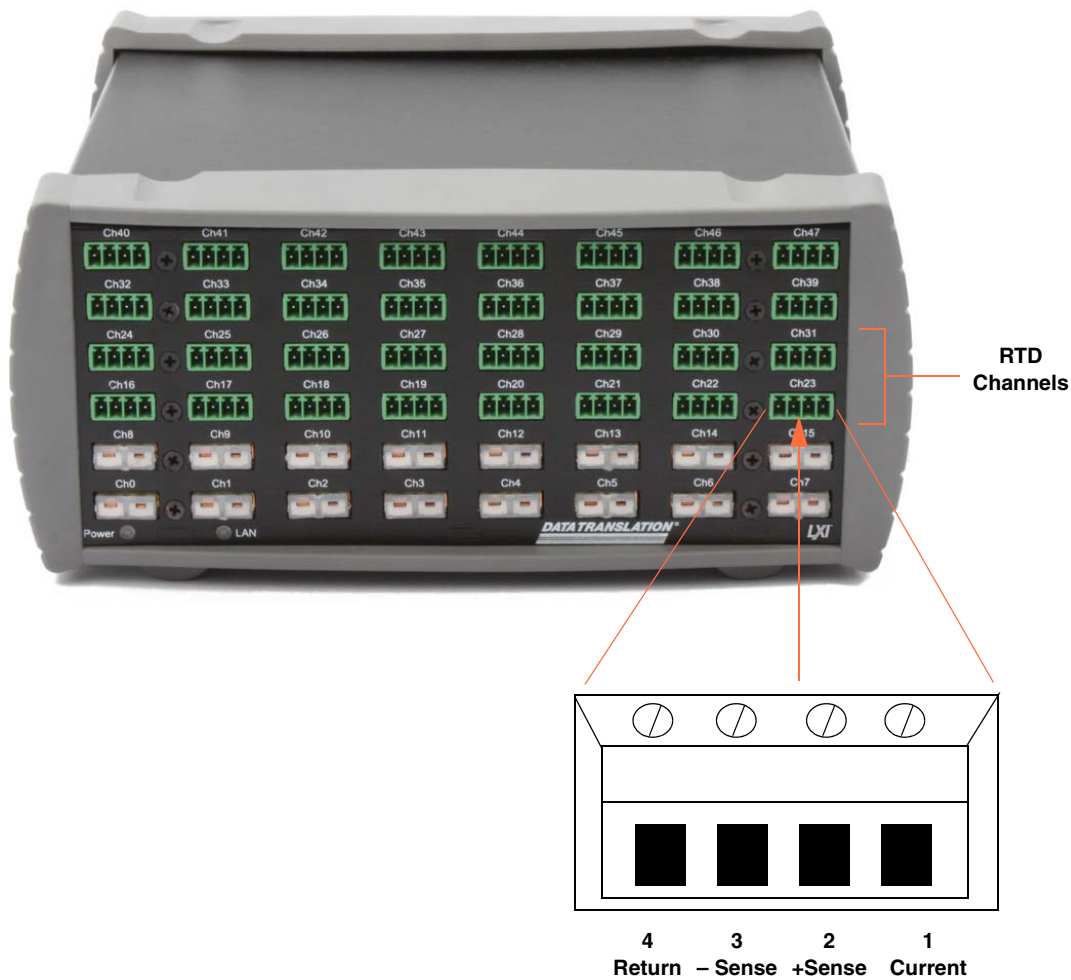


Figure 16: Screw Terminal Block Numbering for RTD Connections

Note: To make wiring easier, use the supplied screwdriver to attach your signals to the screw terminal blocks. When you are finished, plug the screw terminal block into the screw terminal header that corresponds to the channel to which you are wiring.

The DT8872 supplies each RTD channel with $425\ \mu\text{A}$ of excitation current to prevent self-heating. The resistance of the RTD circuit increases gradually, repeatably, and linearly with temperature. As the resistance increases, the voltage drop across the RTD also increases. The DT8872 reads this voltage drop and automatically converts the voltage to the appropriate temperature based on the RTD type.

The DT8872 and DT8874 support Pt100 (100 Ω Platinum), Pt500 (500 Ω Platinum), and Pt1000 (1000 Ω Platinum) RTD types using Alpha coefficients of 0.00385 and 0.00392; you can mix and match RTD types across RTD channels. Refer to the following web site for more information on RTD types: <http://www.omega.com>.

To connect an RTD input, you can use a 4-wire, 3-wire, or 2-wire connection scheme, described in the following subsections. For the best accuracy, use 4-wire RTD connections; this connection scheme enables Kelvin sensing to minimize errors due to lead wire resistance.

4-Wire RTD Connections

The 4-wire configuration offers the best accuracy with long connection wires, compared to the 3- and 2-wire configurations. The 4-wire connection scheme eliminates errors due to lead wire resistance (R_L) and thermal heating. Wire impedance of up to 100 Ω anywhere in the hookup is automatically cancelled as long as the sense wires are connected.

Figure 17 shows a 4-wire RTD connection.

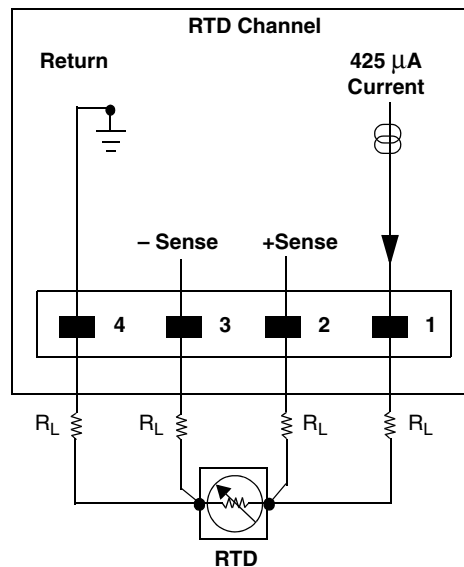


Figure 17: 4-Wire RTD Connection

3-Wire RTD Connections

The 3-wire configuration eliminates one wire from the 4-wire RTD connection. Lead wire resistance (R_L) errors in the return wire from $-Sense$ may be introduced unless the voltage drop is essentially equal and opposite to the voltage drop across $+Sense$.

Figure 18 shows a 3-wire RTD connection.

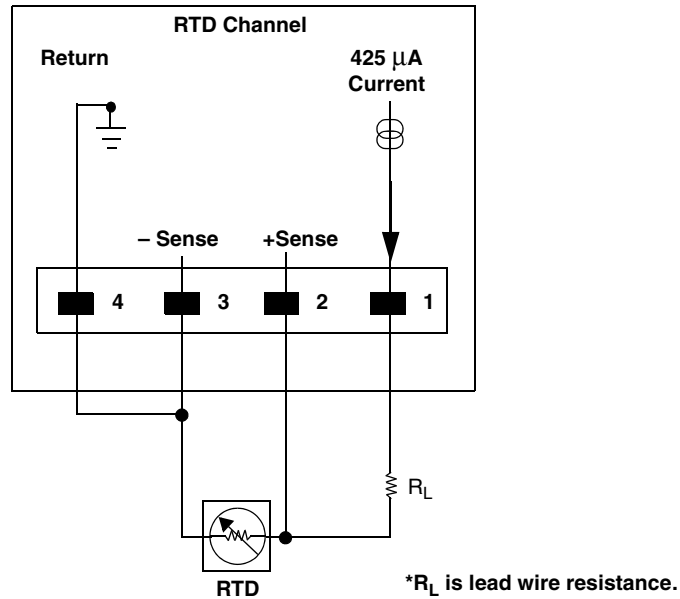


Figure 18: 3-Wire RTD Connection

2-Wire RTD Connections

The 2-wire configuration is the least accurate of the RTD wiring configurations because the lead wire resistance (R_L) and its variation with temperature contribute significant measurement errors, particularly if the lead wire is long. If you decide to use the 2-wire connection scheme, ensure that you use short lead wire connections.

For example, if the lead resistance is 0.5Ω in each wire, the lead resistance adds a 1Ω of error to the resistance measurement. Using a 100Ω RTD (Pt100) with a $0.00385/^{\circ}\text{C}$ European curve coefficient, the resistance represents an initial error of $1 \Omega / (0.385 \Omega / ^{\circ}\text{C})$ or 2.6°C . Since the lead wire resistance changes with ambient temperature, additional errors are also introduced in the measurement.

Figure 19 shows a 2-wire RTD connection.

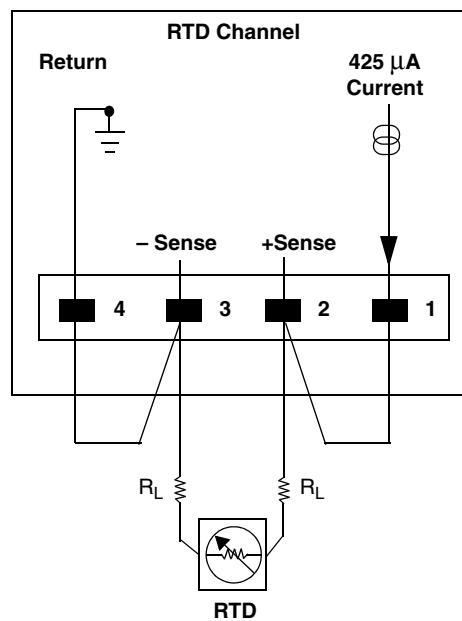


Figure 19: 2-Wire RTD Connection

Connecting Voltage Inputs

The way you connect voltage inputs depends on the channel type you are using. This section describes how to connect voltage inputs to thermocouple input channels, RTD input channels, and voltage input channels.

Connecting Voltage Inputs to Thermocouple Channels

[Figure 20](#) shows how to connect a differential voltage input to a thermocouple input channel on the DT8871U, DT8871, or DT8874 instrument.

Note: On the standard DT8874 instrument, channels 0 to 15 correspond to the thermocouple input channels.

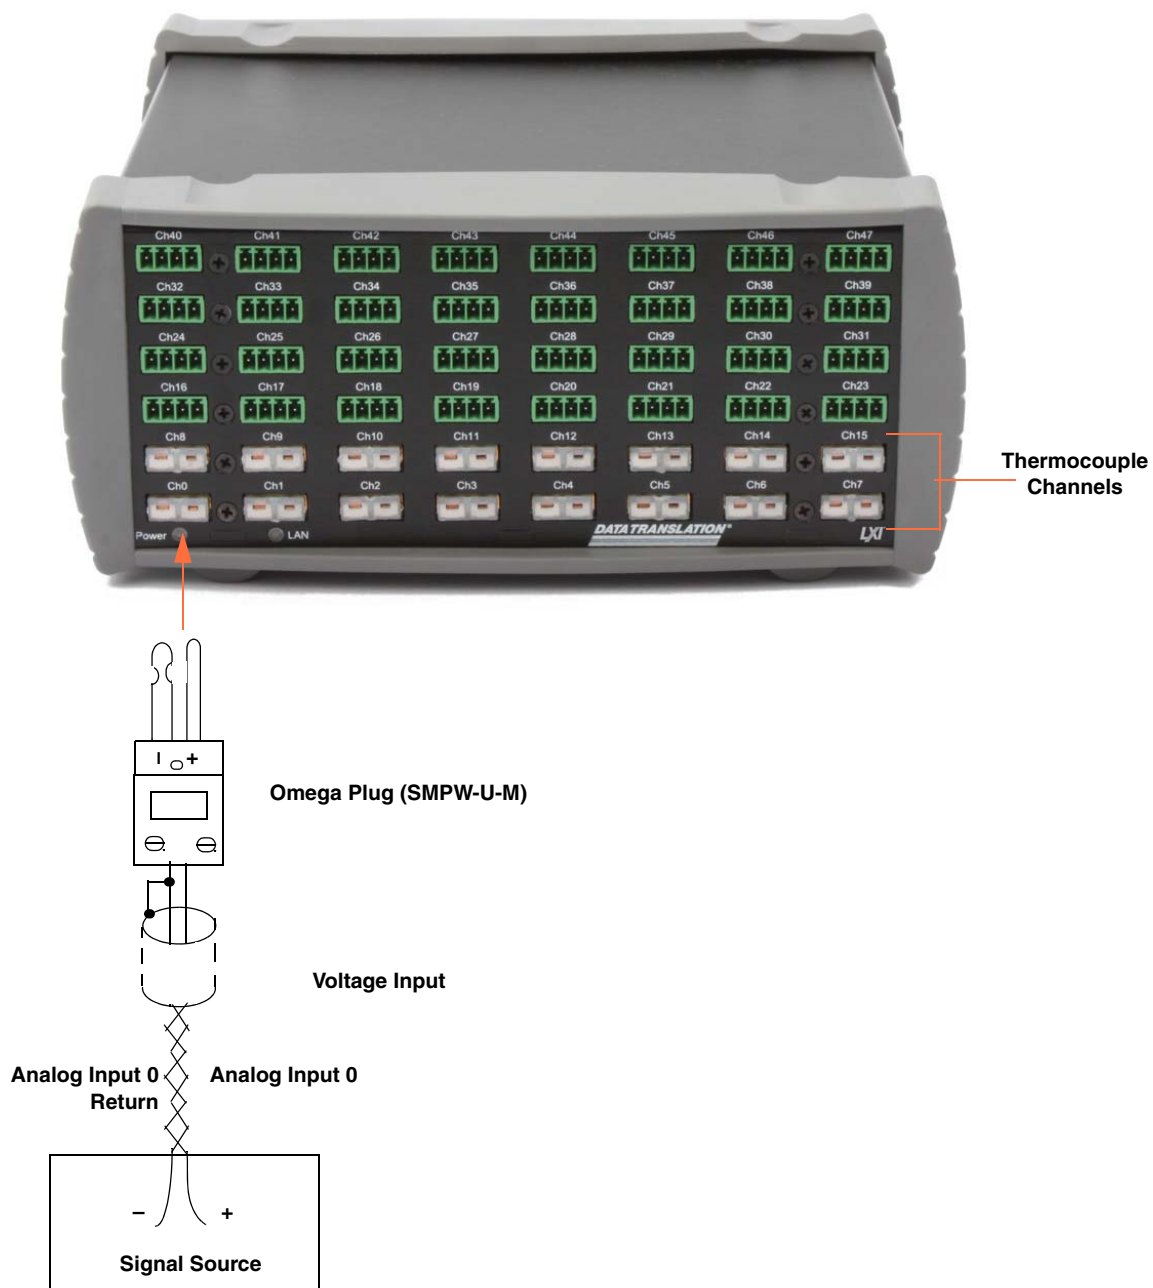


Figure 20: Connecting Voltage Inputs to a Thermocouple Channel

Connecting Voltage Inputs to RTD Channels

Figure 21 shows how to connect a voltage input to an RTD channel on a DT8872 or DT8874 instrument.

Note: On the standard DT8874 instrument, channels 16 to 31 correspond to the RTD input channels.

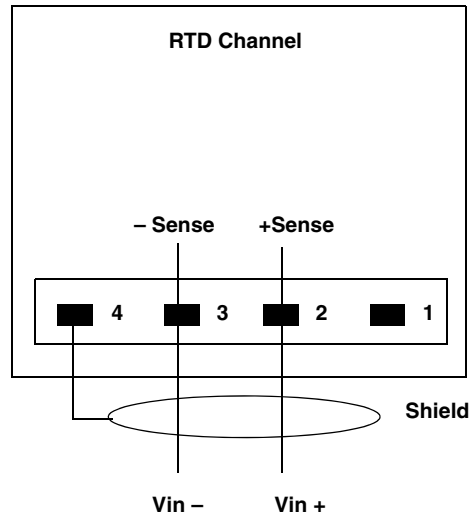


Figure 21: Connecting Voltage Inputs to an RTD Channel

The input impedance is well over 100 M Ω using the voltage -Sense and +Sense inputs.

For best accuracy when connecting voltage inputs, use twisted-pair wires with a dead-ended shield connected to pin 4 of the screw terminal block.

Connecting Voltage Inputs to Voltage Channels

Each DT8873 and DT8874 contains pluggable screw terminals for connecting voltage inputs.

Note: On the standard DT8874 instrument, channels 32 to 47 correspond to the voltage input channels.

Figure 22 shows the numbering of the screw terminal blocks for voltage connections.

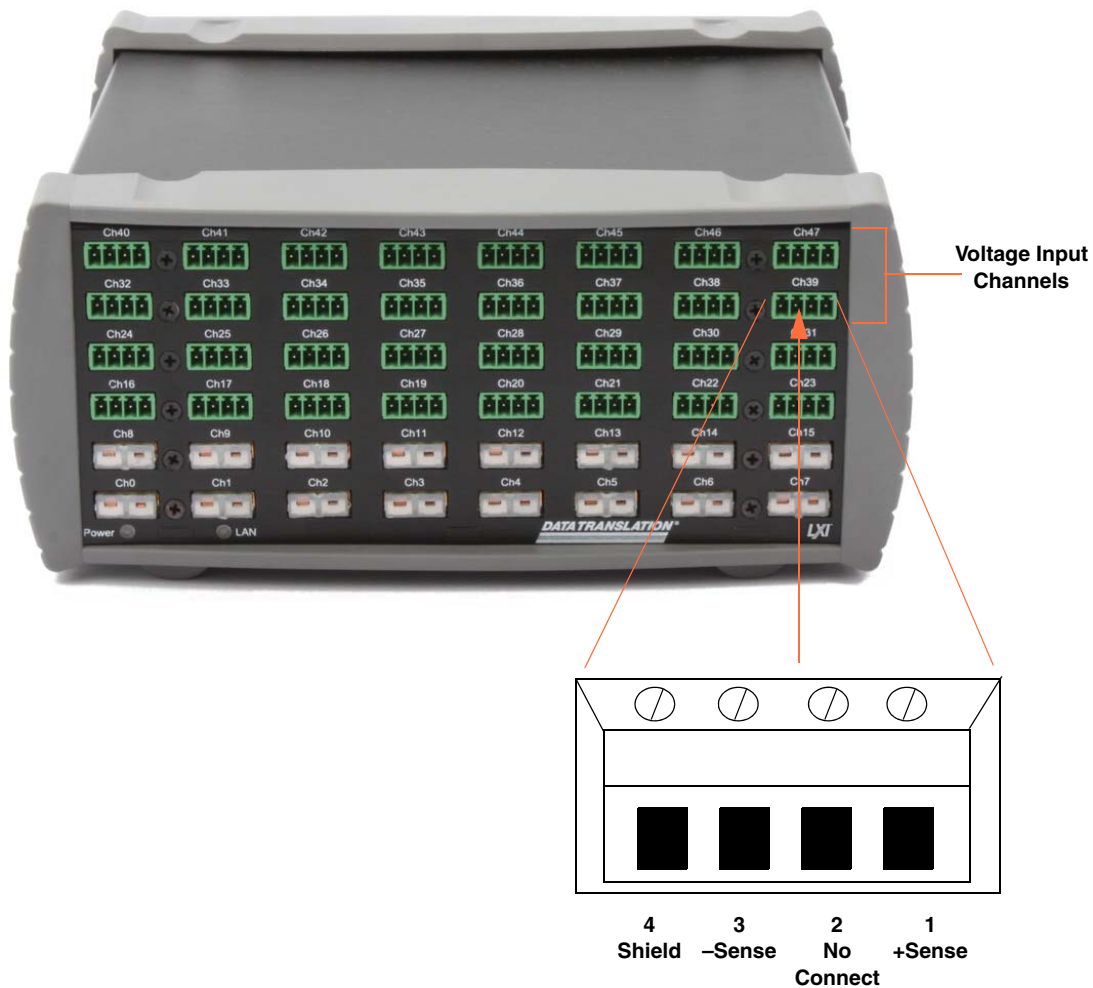


Figure 22: Screw Terminal Block Numbering for Voltage Connections

Note: To make wiring easier, use the supplied screwdriver to attach your signals to the screw terminal block. When you are finished, plug the screw terminal block into the screw terminal header that corresponds to the channel to which you are wiring.

Figure 23 shows how to connect voltage inputs to the DT8873 and DT8874.

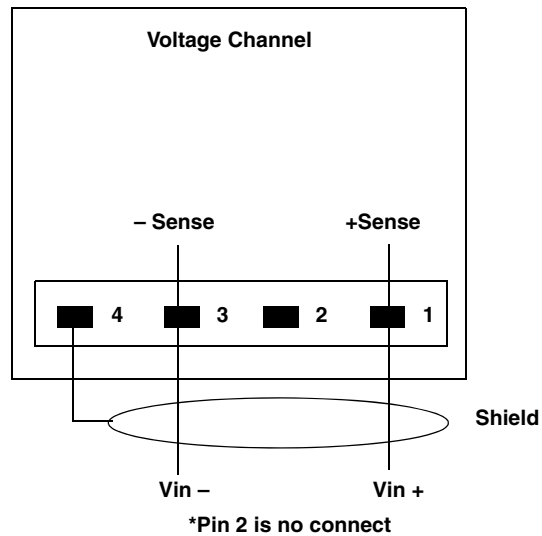


Figure 23: Connecting Voltage Inputs

The input impedance is well over 100 M Ω using the voltage -Sense and +Sense inputs.

Note: For best accuracy when connecting voltage inputs, use twisted-pair wires with a dead-ended shield connected to pin 4 of the screw terminal block.

Connecting Current Loop Inputs

In some applications, such as solar cell, fuel cell, and car battery testing applications, you may want to accurately sense and measure current in a high voltage loop.

TEMPpoint, VOLTpoint, and MEASURpoint instruments provide channel-to-channel isolation of ± 500 V, meaning that each input can be referenced to ± 500 V.

The way you connect current loop inputs depends on the channel type you are using. This section describes how to connect current loop inputs to thermocouple input channels, RTD input channels, and voltage input channels.


Connecting Current Loop Inputs to Thermocouple Channels

Thermocouple input channels on the DT8871U and DT8874 have an input range of ± 0.075 V. Therefore, you can use a $1\ \Omega$ series resistor to measure ± 0.075 A. Similarly, you can use a $0.1\ \Omega$ series resistor to measure ± 0.75 A.

Thermocouple input channels on the DT8871 have an input range of ± 1.25 V. Therefore, you can use a $1\ \Omega$ series resistor to measure ± 1.25 A. Similarly, you can use a $0.1\ \Omega$ series resistor to measure ± 12.5 A or a $10\ \Omega$ series resistor to measure ± 0.125 A.

[Figure 24](#) shows how to wire your signals to measure a current loop. In this example, the input is referenced to ± 80 V.

Note: On the standard DT8874 instrument, channels 0 to 15 correspond to the thermocouple input channels.

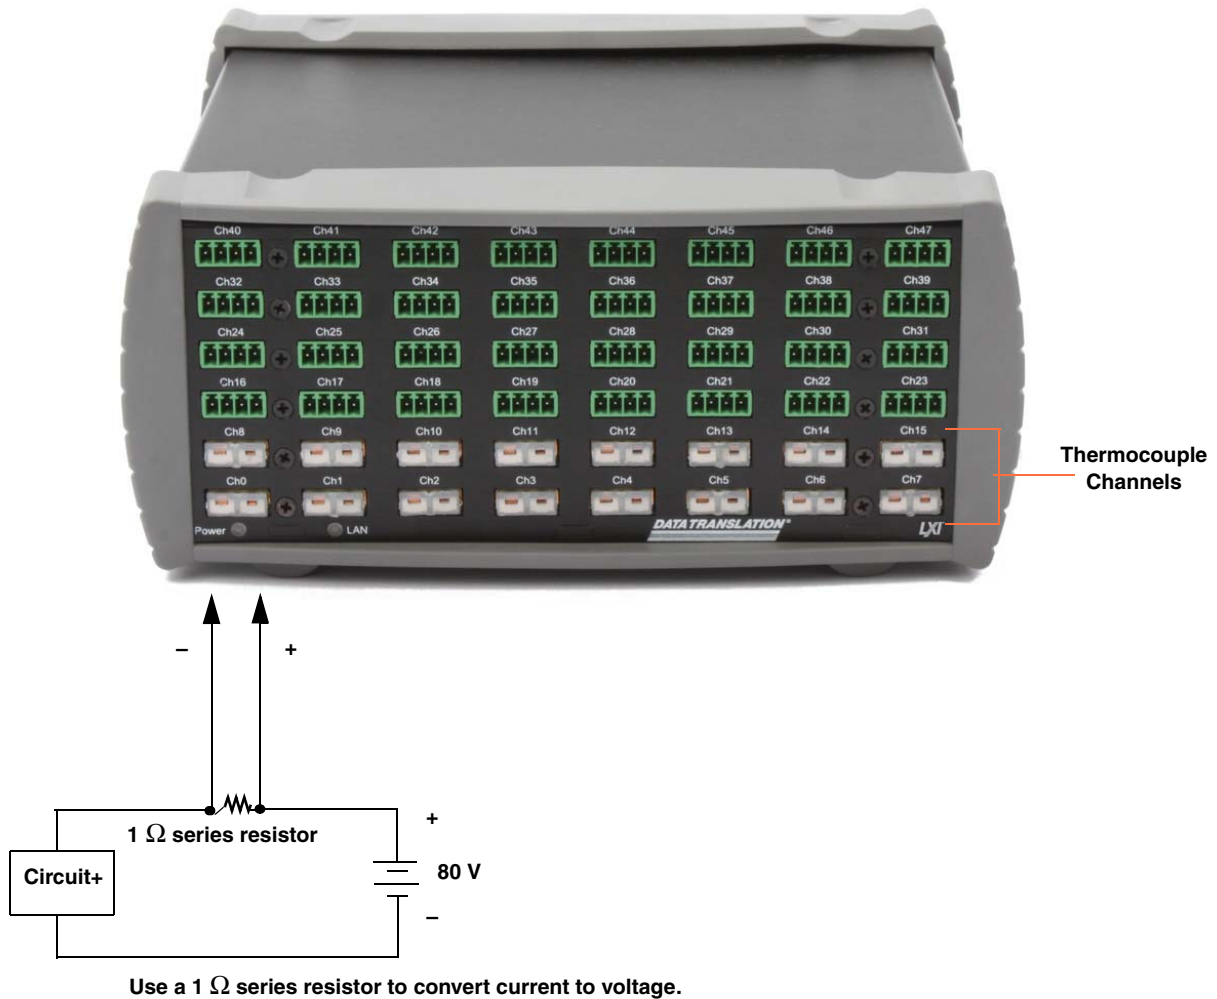

For thermocouple channels on the DT8871U and DT8874, 1 Ω = 0.075 A = 0.075 V.
 For thermocouple channels on the DT8871, 1 Ω = 1.25 A = 1.25 V.


Figure 24: Connecting Current Loop Inputs to Thermocouple Channels

Connecting Current Loop Inputs to RTD Channels

RTD channels on the DT8872 and DT8874 instruments have an input range of ± 1.25 V. Therefore, you can use a $1\ \Omega$ shunt resistor to measure ± 1.25 A. Similarly, you can use a $0.1\ \Omega$ shunt resistor to measure ± 12.5 A or a $10\ \Omega$ shunt resistor to measure ± 0.125 A.

Figure 25 shows how to wire your signals to measure a current loop. In this example, the input is referenced to ± 80 V.

Note: On the standard DT8874 instrument, channels 16 to 31 correspond to the RTD input channels.

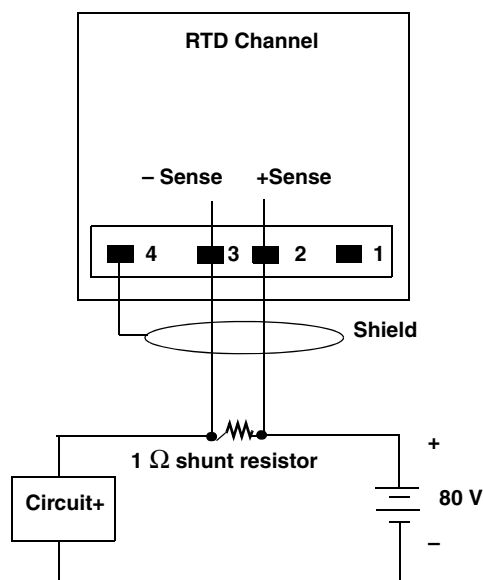

Use a $1\ \Omega$ shunt resistor to convert current to voltage: $1\ \Omega = 1.25\ \text{A} = 1.25\ \text{V}$.

Figure 25: Connecting Current Loop Inputs to RTD Channels

Connecting Current Loop Inputs to Voltage Channels

Voltage input channels on the DT8873 and DT8874 instruments have an input range of ± 10 V, ± 100 V, or ± 400 V. You select the input range for each channel using software.

Note: On older versions of the instrument, the input range was fixed and depended on the model you purchased.

With the 24-bit A/D converter, high current, high side current shunts can be used for resolutions of less than 0.01 A on a 100 A range.


Typical Shunts:

- Vishay WSMS5515
0.2 m Ω – 2 Ω – 100 A – 20 μ V
- Vishay CSM2512S
10 m Ω – 1 Ω – 10 A – 100 μ V
- Deltec MUB-500-50
0.1 m Ω – 25 Ω – 500 A – 50 μ V

Note: The resolution is ± 2 mV on a ± 100 V range and ± 0.3 mV on the ± 10 V range. Since the resolution of the ± 400 V range is ± 8 mV, using current loop inputs with this range is impractical in most applications.

On the standard DT8874 instrument, channels 32 to 47 correspond to the voltage input channels.

Figure 26 shows an example of wiring signals to measure ± 20 mA using the ± 10 V input range.

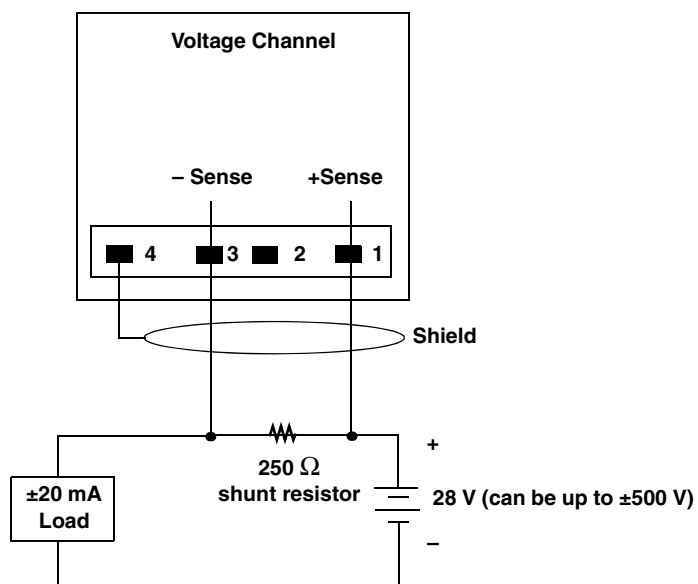

In this example, the input range is $\pm 10 \text{ V}$.

Figure 26: Connecting a Current Loop Input to a Voltage Channel to Measure $\pm 20 \text{ mA}$

Connecting Digital I/O Signals

To make digital I/O connections easier, you can use the optional STP37 screw terminal panel and EP333 cable with your TEMPpoint, VOLTpoint, or MEASURpoint instrument. Connect the STP37 to the digital I/O connector of the instrument as shown in [Figure 27](#):

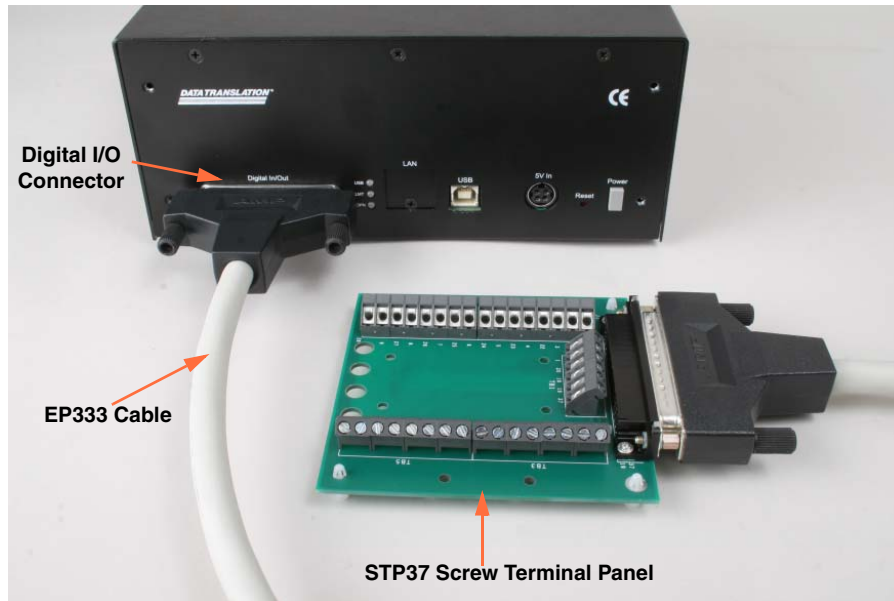


Figure 27: Connecting the Instrument to the STP37

[Figure 28](#) shows the layout of the STP37 screw terminal panel and lists the assignments of each screw terminal.


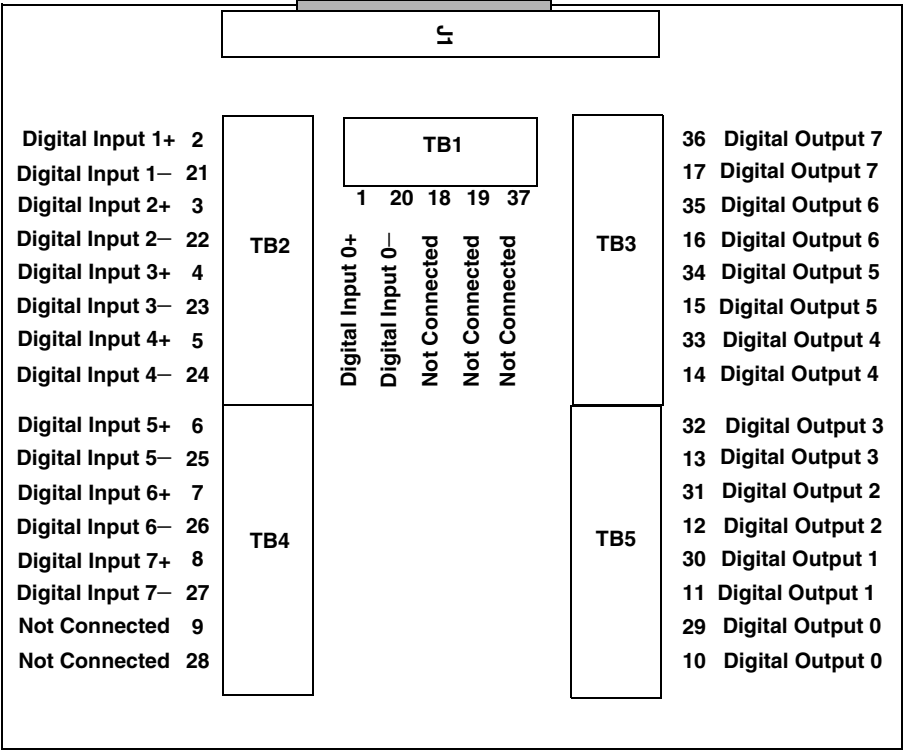


Figure 28: STP37 Screw Terminal Panel

Connecting Digital Input Signals

Figure 29 shows how to connect digital input signals (lines 0 and 1, in this case) to the digital I/O connector on the TEMPpoint, VOLTpoint, or MEASURpoint instrument.

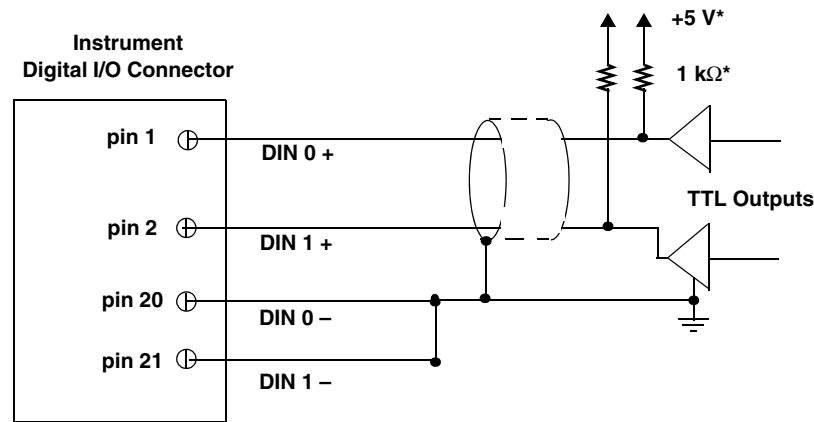

*1 kΩ pull-up to +5 V required for TTL outputs.

Figure 29: Connecting Digital Inputs

Connecting Digital Output Signals

The digital output lines of a TEMPpoint, VOLTpoint, or MEASURpoint instrument act as solid-state relays. The customer-supplied signal can be ± 30 V at up to 400 mA (peak) AC or DC.

You can use the digital output lines of the instrument to control solid-state or mechanical relays or high-current electric motors. [Figure 30](#) shows how to connect digital output signals to line 0 of the instrument to control a motor relay.


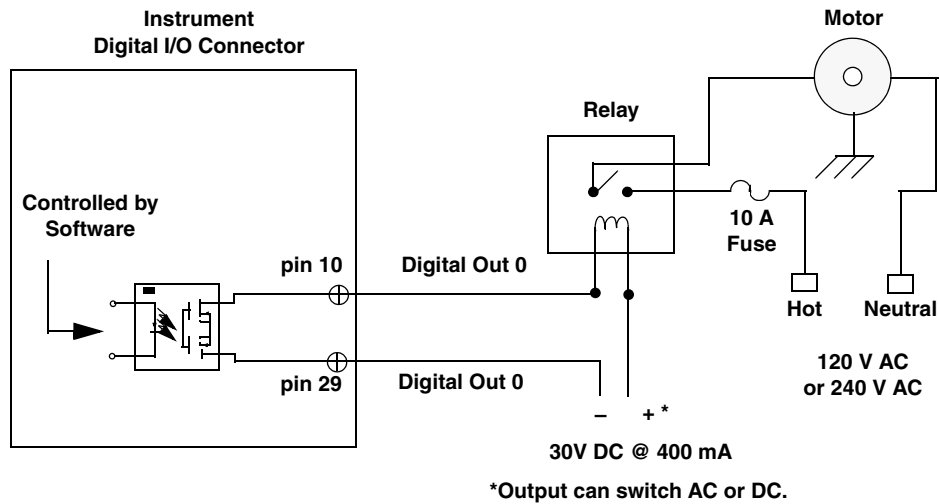


Figure 30: Switching up to 30 V at 400 mA



Verifying the Operation of Your Instrument

Before Using the Web Interface	73
Locating Your Instrument on the LAN	79
Configuring the Instrument	83
Measuring Data and Controlling the Instrument	91
Downloading Measurements	94

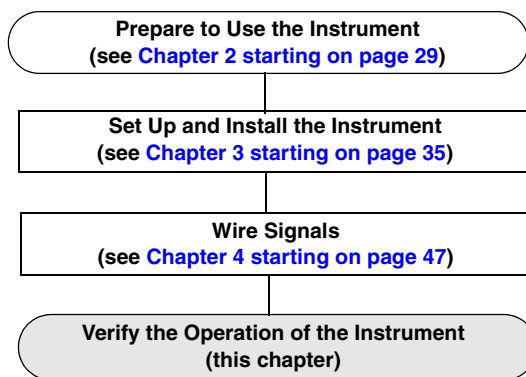

You can verify the operation of your instrument using the instrument's web interface. You can configure, measure, and control the instrument either locally or remotely using this interface.

You can also use the Measurement Framework application that is provided with the instrument, if desired, to verify the operation of your instrument; refer to the documentation provided with the Measurement Framework application for more information.

This chapter focuses on verifying your instrument using the web interface.

Note: DT8871, DT8871U, DT8872, and DT8873 instruments with firmware version 2.2.3.1 or greater are identified in firmware as DT8874-xxT-xxR-xx-V, where xxT specifies the number of thermocouple channels, xxR specifies the number of RTD channels, and xxV specifies the number of voltage input channels.

Before Using the Web Interface

This section describes system requirements and browser settings for proper operation of the instrument's web interface.

Note: At any instant, up to 8 clients can access the instrument concurrently using the web interface.

Up to 12 additional clients can access the instrument concurrently using SCPI commands over VISA or sockets. Of these, 4 can be VXI-11 clients, which use the ::SOCKETS or VISA::INSTR resource to access the instrument.

At this time, the web and SCPI interfaces cannot be "locked;" therefore, one client can change the configuration of the instrument that another client is accessing. However, you can optionally lock the VXI-11 interface using the VISA APIs viLock/viUnlock; this prevents other VXI-11 clients (including VXI-11 discovery) from accessing the instrument. Refer to the SCPI documentation for your instrument for more information on supported SCPI commands.

Java Requirements

Before using the instrument web interface, ensure that your computer has Version 6, Update 5 or greater of Java installed; this version of Java installs version 1.6 of the Java plug-in. You can verify Java versions and settings by accessing the Java Control Panel, select Windows **Start -> Control Panel** and open the **Java** dialog. To download or upgrade Java, go to www.java.com.

Internet Explorer Browser Settings

For proper operation of the instrument's web interface, ensure that your Internet Explorer is configured as follows:


- JavaScript (Active Scripting) must be enabled
- Security level of the instrument's IP address must be Medium-high or lower
- Pop-up blockers must be disabled

The following sections describe how to configure these settings.

JavaScript

To enable JavaScript (also referred to as Active Scripting), perform the following steps:

1. From the Internet Explorer browser, select **Tools -> Internet Options**.
2. Click the **Security** tab.
3. Select **Internet**, and then click **Custom Level**.
4. Scroll down to the **Scripting** section.

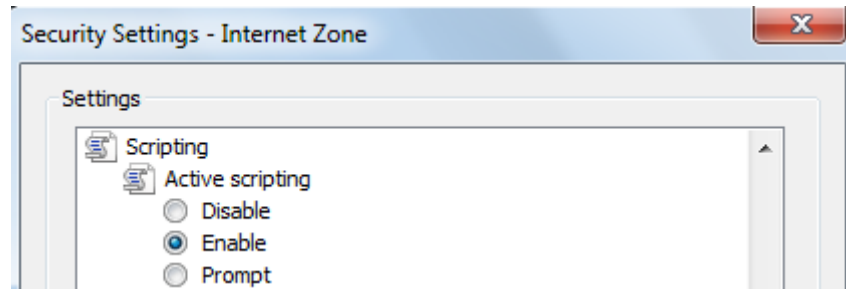

5. Under **Active Scripting**, select **Enable**, and then click **OK**.

Security Levels


By default, the IP address of the instrument is added to the Internet zone. If you'd rather leave the settings of the Internet zone at a level higher than Medium-high, then you can add the IP address of the instrument to either the Local intranet or Trusted sites zone and configure the security level of that zone to Medium-high or lower.

The following section describe how to configure each zone.

Internet Zone

To configure the security level of the instrument module's IP address in the Internet zone, perform the following steps:

1. From the Internet Explorer browser, select **Tools -> Internet Options**.
2. Click the **Security** tab.

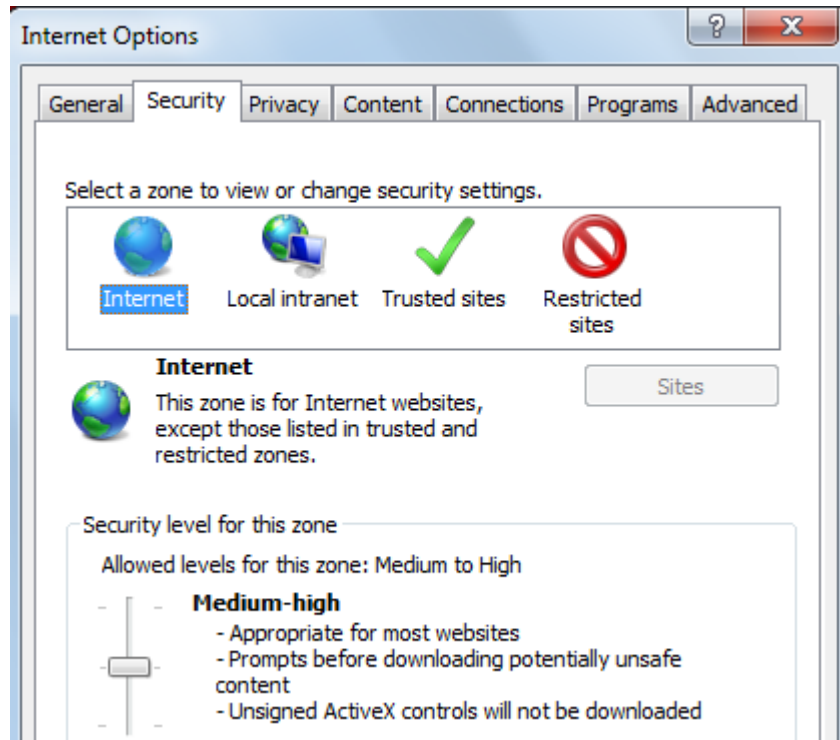


3. Select **Internet** and move the slide bar to select a security level of Medium-high or lower.
4. Click **OK**.

Local Intranet Zone

To add the IP address of the instrument to the **Local intranet** zone and configure its security level, do the following:

1. From the Internet Explorer browser, select **Tools -> Internet Options**.
2. Click the **Security** tab.
3. Click **Local intranet**, and click **Sites**.
4. Select which web sites to add to the zone, and then click **Advanced**.
5. Enter the IP address of the instrument to the zone, and click **Add**.

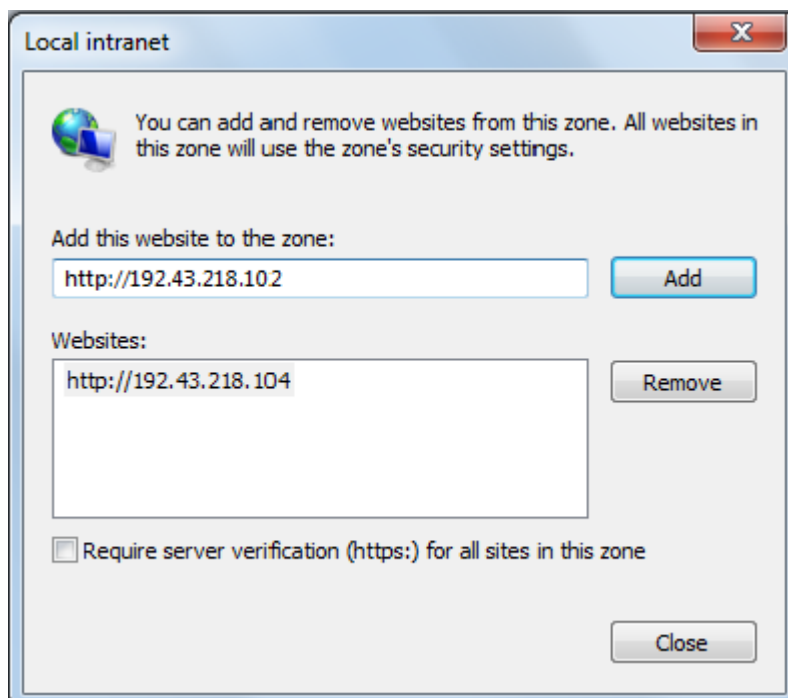


6. Click **Close**.
7. Move the slide bar to select a security level of Medium-high or lower.
8. Click **OK**.

Trusted Sites Zone

To add the instrument's IP address to the **Trusted sites** zone and configure its security level, do the following:

To add the IP address of the instrument to the **Trusted sites** zone and configure its security level, do the following:

1. From the Internet Explorer browser, select **Tools -> Internet Options**.
2. Click the **Security** tab.
3. Click **Trusted sites**, and click **Sites**.
4. Enter the IP address of the instrument to the zone (note that the address must be prefaced by (https://), and click **Add**.

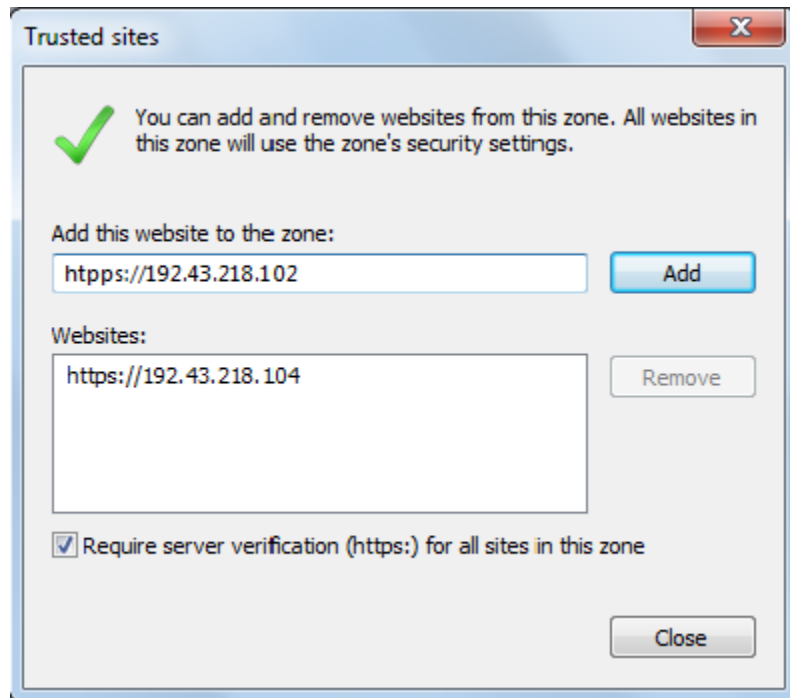

5. Click **Close**.
6. Move the slide bar to select a security level of Medium-high or lower.
7. Click **OK**.

Pop-up Blockers

To disable pop-up blockers, perform the following steps:


1. From the Internet Explorer browser, select **Tools ->Pop-up Blocker**.
2. Select **Turn Off Pop-up Blocker**.

Associating CSV Files with Microsoft Excel or Notepad

If files with the .CSV extension do not have the proper file associations/actions set up, then clicking **Download** in the Download Measurements page of the instrument web interface will not present the option of saving the data to a file or loading the data to an application, such as Microsoft Excel® or Microsoft® Notepad, that can display it. Instead, the data will be displayed in the browser.

The following steps describe how to associate a CSV file with Microsoft Excel or Notepad in Windows XP; refer to the documentation for your operating system for more information:

1. From the Windows **Control Panel**, open the **Folder Options** dialog, and select **File Types**.
2. Scroll down to the **CSV** entry and select it. (If it is not in the list add it as a new file type by selecting **New** and entering **CSV**).
3. Click **Advanced** to access the Edit File Type dialog box.
4. Click **New** to access the New Action dialog box.
5. Enter **Open** in the **Action:** edit field.
6. Click **Browse** and find **Excel.exe** (typically located in C:\Program Files\Microsoft Office\OFFICExx\EXCEL.EXE) or **Notepad.exe** (typically located in C:\Windows\Notepad.exe) on your system, and then click **OK**.

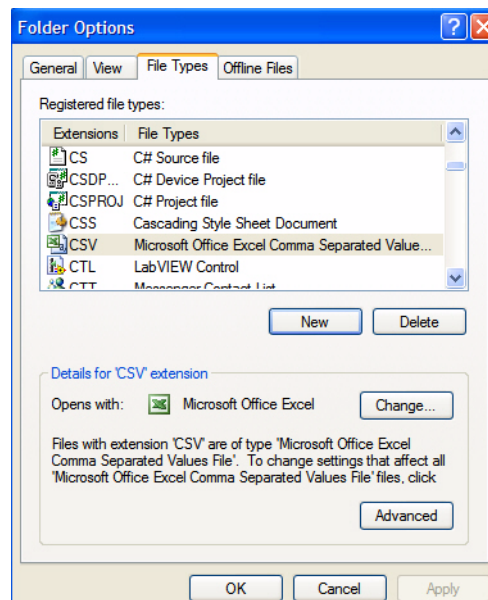

7. Click **OK**.

Now when you click **Download** on the Download Measurements web page, you should see a dialog box asking if you want to Open or Save the data in the appropriate application.

Locating Your Instrument on the LAN

To access the web interface of your instrument, you must determine its IP address on your TCP/IP network.

Note: Discovery works only for devices on the same subnet.

We recommend that you run Data Translation's Eureka Discovery Utility that is provided with the instrument to locate your instrument on the network quickly. Alternatively, you can use other LXI discovery tools, such as Agilent Connection Expert, if you have them installed on your computer. Or you can check your router's address assignments or locate the instrument's MAC (Ethernet hardware) address in your DHCP server log.

Running the Eureka Discovery Utility

To use the Eureka Discovery Utility, from the Windows Start menu, click **Programs -> Data Translation, Inc -> Instrument Support -> Eureka LXI Instrument Discovery**.

A screen similar to the one shown in [Figure 31](#) appears.

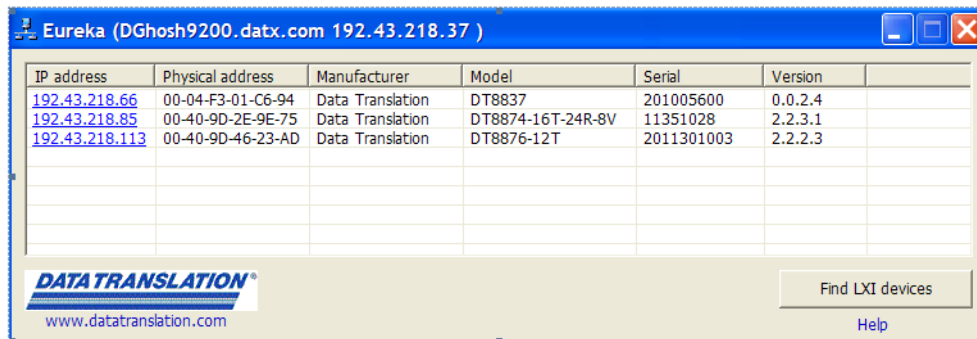


Figure 31: Eureka LXI Discovery Utility


If you are having trouble seeing your instrument in this list, check your Windows firewall settings using the information in the next section; otherwise, skip this section and continue with [“Launching the Web Interface”](#) on page 82.

Configuring Windows Firewall Settings

If you are having trouble seeing your instrument using the Eureka Discovery Utility, check your Windows firewall settings by doing the following:


1. Right click in the tile bar of the Eureka Discovery Utility.

The following menu options appear:

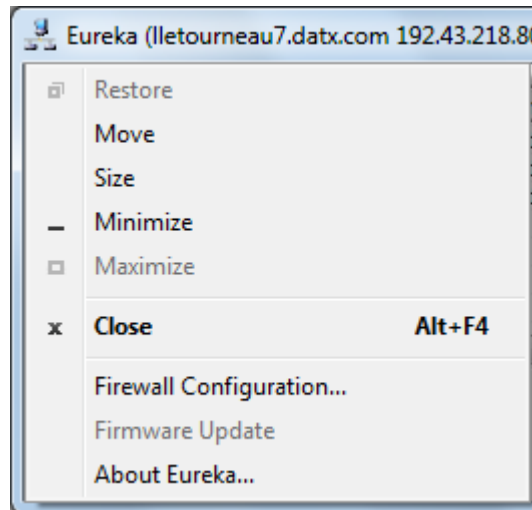

2. Click the **Firewall Configuration...** option.

The following window appears:

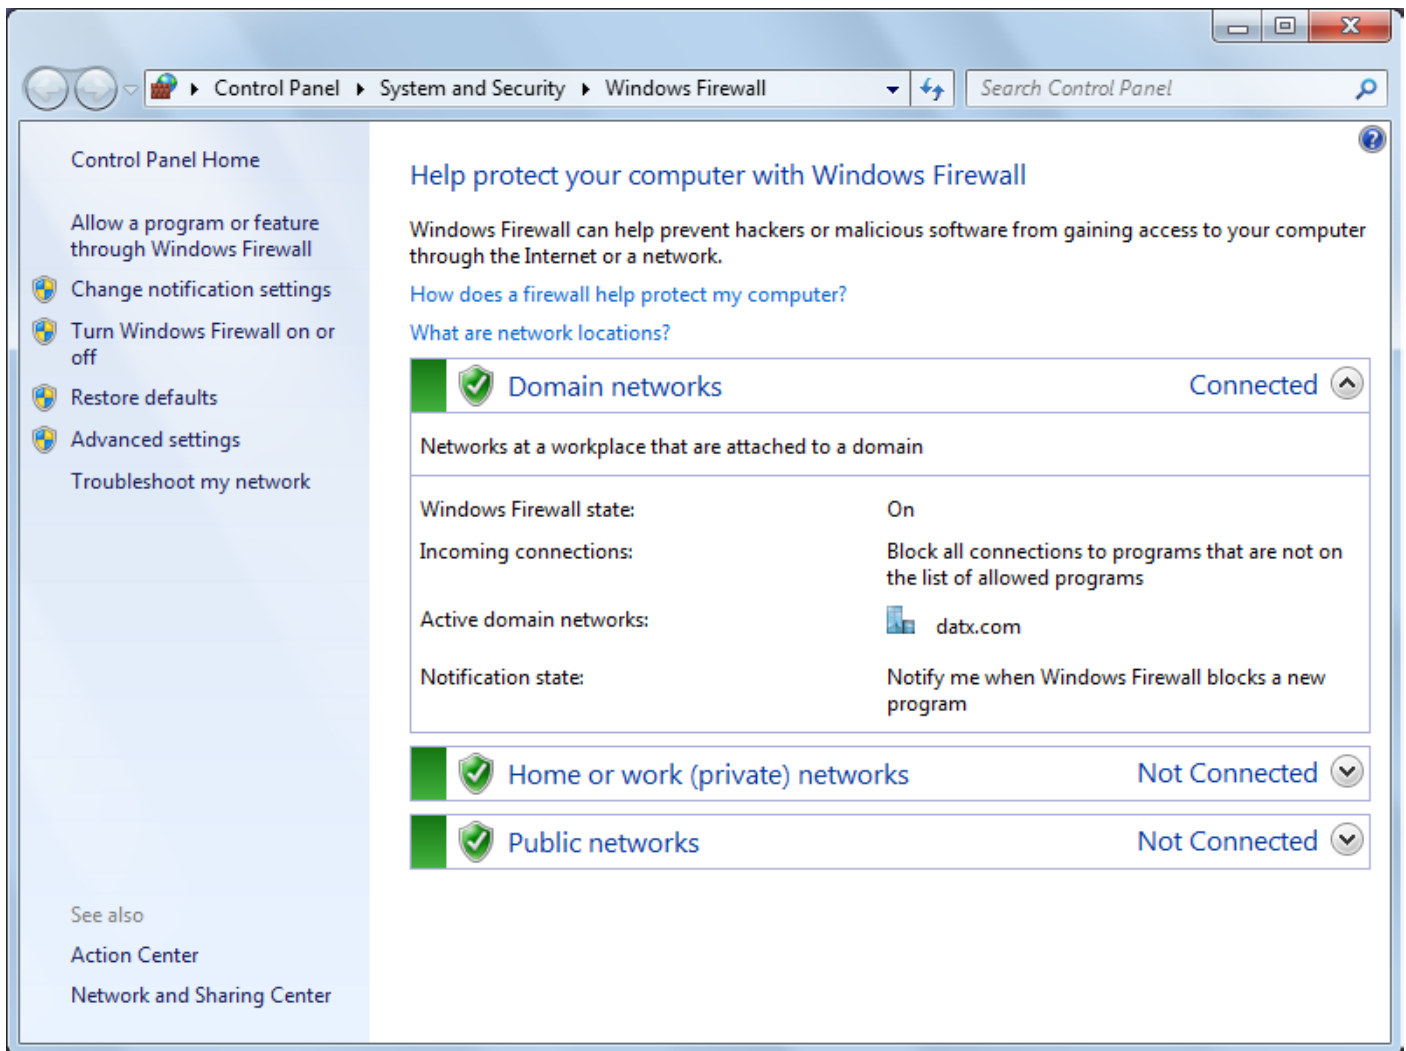

3. On the left side of the window, select **Turn Windows Firewall on or off**, select **Turn On Windows Firewall** setting for proper operation of the Eureka Discovery Utility, and click **OK**.
4. On the left side of the window, select **Allow a program or feature through Windows Firewall**, ensure that Eureka LXI Instrument Discovery is included in the list of exceptions, and click **OK**.
5. If Eureka LXI Instrument Discovery is not included in the exception list, add the utility to the list of exceptions by doing the following:
 - a. Click **Allow another program...**
 - b. Browse to **C:\Program Files\Data Translation\Instrument Support\Eureka.exe**, and click **Open**.
The Eureka LXI Instrument Discovery utility appears in the window.
 - c. Click **Add** to add the utility to the list of exceptions.
 - d. Click **OK** to exit from the Windows Firewall Configuration menu.

Launching the Web Interface

From the Eureka utility, double-click the appropriate IP address to open the web pages for your instrument using your default web browser. Alternatively, you can enter the IP address of your instrument directly in your Internet Explorer address bar to see the instrument's web interface.

The main web page, similar to the following screen, shows information about your instrument on the network:

The screenshot displays the Data Translation LXI web interface. At the top, it shows 'DATA TRANSLATION' and 'LXI' logos, with a 'DISCONNECTED' status and a 'Start scan' button. The left sidebar contains a navigation menu with categories: DT8874-16T-24R-8V, Device information, Configuration, Measurement & control, and Help. The main content area is titled 'Device Information' and includes a 'Turn on' button for the 'device identification indicator'. Below this is a table listing various device parameters and their values.

Item	Value
Manufacturer	Data Translation Inc.
Instrument model	DT8874-16T-24R-8V
Instrument type	Isolation $\pm 500V$, 16 Thermocouple, 24 RTD, 8 Voltage
Firmware revision	2.2.3.1 6.7.4.93
Serial number	11351028
Description*	Development System.
LXI Class	C
LXI version	1.1
Hostname*	betelgeuse.datx.com
MAC address	00:40:9D:2E:9E:75
IP address*	192.43.218.85 (DHCP)
Link status	100 Mbps, Half duplex
VISA resource string	TCP/IP::192.43.218.85::INSTR TCP/IP::192.43.218.85::5025::SOCKET
SNTP server*	192.43.244.18
Current Time	Thu Feb 9 1:10 PM 2012
Time Zone*	GMT -5 hour

*[Modify](#)

If you have multiple instruments connected to the network, you can click "Turn ON front panel identification indicator" to light the LAN LED on the instrument, described on [page 42](#), to indicate the device you are using.

To change the description, IP address, or time source associated with the instrument, click the **Modify** links to navigate to the LAN Configuration page, described on [page 83](#).

Configuring the Instrument

Web pages are provided for configuring the following aspects of your instrument:

- Local Area Network (LAN) settings
- Channels that you want to measure
- Scan rate
- Filter
- Alarm limits
- Digital I/O lines

LAN Configuration

Use the **Configuration** -> **LAN** web page to configure the Local Area Network (LAN) settings for the instrument. A screen similar to the following appears:

The screenshot shows the LAN configuration interface for a Data Translation instrument. The page has a header with the Data Translation logo, a 'STOPPED' status indicator, and a 'Start scan' button. On the left is a navigation menu with options like Device information, Configuration, LAN, Channel, Scan rate, Filter, Limits, Digital Input & Trigger, Digital Output, Measurement & control, Acquisition, Digital Input, Digital Output, Help, FAQ, Product Information, and Technical Support. The main content area is titled 'LAN configuration' and includes 'Save changes' and 'Discard changes' buttons, along with a 'Help' link. The settings are organized into a table with 'Item' and 'Value' columns.

Item	Value
Hostname	
Description/Service name	Development System. DO NOT USE
IP address assignment	<input checked="" type="radio"/> DHCP <input checked="" type="checkbox"/> Automatic private IP address enabled <input type="radio"/> Static <div> Static IP Address configuration <div>192.168.187.163 IP</div> <div>255.255.255.0 Mask</div> <div>192.168.187.218 Gateway</div> <div>Primary DNS</div> <div>Secondary DNS</div> </div>
SNTP server	<div>192.43.244.18 Primary</div> <div>132.163.4.101 Secondary</div>
Time zone	GMT -5 hours
Password	admin

When you first access your instrument, the LAN settings that the instrument obtained through DHCP or AutoIP should be sufficient. If you need to make changes later, click the **Modify** button to enable changes. Contact your system administrator and view the instrument's built-in help pages to determine the correct LAN settings.

Note: If you want to assign a static IP address, ensure that you uncheck the checkbox called **Automatic private IP address enabled**.

When you click **Modify**, you must supply a password for the instrument.

The username is **admin**; it cannot be changed. The default password is **admin**. You can change the password on this page.

Note that the new password is saved in permanent memory in the instrument and goes into effect after the instrument reboots. If you are prompted for a password before the instrument reboots, you must enter your original password. The web interface, IVI-COM driver, and SCPI interface use the same password. You can also configure the password using the IVI-COM driver or through SCPI commands.

You are prompted for this password any time the instrument's configuration is changed or when an attempt is made to start or stop a scan. This mechanism relies on features in the HTTP standard to prevent unauthorized users from reconfiguring or operating the instrument. Note, however, that authentication is not required to view the instrument's configuration or scan results.

Note: The DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments with firmware version 2.2.3.1 or greater use the default user name **admin** and the default password **admin**. Firmware version 2.2.3.1 and greater support password-protected commands. Therefore, you must enter the appropriate password to change the instrument's configuration or to start and stop a scan.

If the firmware version for these instruments is less than 2.2.3.1, then the default user name is **sysadmin** and the default password is **user**. Firmware versions less than 2.2.3.1 do not support password-protected commands. Therefore, you are not prompted to enter a password to change the instrument's configuration or to start or stop a scan.

Specify the time zone that is used by the instrument as an offset (either + or –) from GMT (Greenwich Mean Time). The specified hour and minute is added to the UTC (Coordinated Universal Time) time that is maintained by the instrument. For example choosing –5 hours, 0 minutes sets the current time zone used by the instrument to five hours and 0 minutes behind GMT.

Channel Configuration

Use the **Configuration -> Channel** web page to enable the channels that you want to measure, specify the sensor to use for each channel, and add a label to describe each channel, if desired. A screen similar to the following appears:

DATA TRANSLATION® STOPPED **LXI**

[Start scan](#)

DT8874-16T-24R-8V

Device information
Configuration
 LAN
 Channel
 Scan rate
 Filter
Limits
 Digital Input & Trigger
 Digital Output
Measurement & control
 Acquisition
 Digital Input
 Digital Output
Help
 FAQ
 Product Information
 Technical Support

Limit Configuration

[Save changes](#) [Discard changes](#) [Help](#)

Channel	Enable	Low Limit	High Limit	Digital Output
0	<input type="checkbox"/> Enable			None ▼
1	<input type="checkbox"/> Enable			None ▼
2	<input type="checkbox"/> Enable			None ▼
3	<input type="checkbox"/> Enable			None ▼
4	<input type="checkbox"/> Enable			None ▼
5	<input type="checkbox"/> Enable			None ▼
6	<input type="checkbox"/> Enable			None ▼
7	<input type="checkbox"/> Enable			None ▼
8	<input type="checkbox"/> Enable			None ▼
9	<input type="checkbox"/> Enable			None ▼
10	<input type="checkbox"/> Enable			None ▼
11	<input type="checkbox"/> Enable			None ▼
12	<input type="checkbox"/> Enable			None ▼
13	<input type="checkbox"/> Enable			None ▼
14	<input type="checkbox"/> Enable			None ▼

To change your channel configuration, do the following:

1. Under **Enable Channel**, check the boxes next to the channels that you want to collect data. You can use the **Enable All** and **Disable All** buttons for quick configuration of many channels.
2. Under **Type**, select the sensor type for each configured channel from the drop-down list boxes. If all the channels are of the same type (thermocouple, RTD, or voltage), you can use the **Set all** button to change all channels to the sensor type specified in the heading's drop-down list box.
3. Describe the channels, if desired, by entering text in the **Label** field corresponding to the channel that you want to describe.
4. Click **Save configuration** to apply your changes. If you do not save before leaving this page, your changes are lost.

You can also click the **Discard changes** button (before you save) to return to the previous configuration, if desired.

Scan Rate

Use the **Configuration -> Scan Rate** web page to set the scan rate for all channels on the instrument. A screen similar to the following appears:

The screenshot shows the LXI Data Translation web interface. At the top, there is a header with the 'DATA TRANSLATION' logo on the left, a 'STOPPED' status indicator with a circular icon in the center, and the 'LXI' logo on the right. Below the status indicator is a 'Start scan' button. The main content area is divided into a left sidebar and a right main panel. The sidebar contains a menu with the following items: 'DT8874-16T-24R-8V', 'Device information', 'Configuration' (highlighted), 'LAN', 'Channel', 'Scan rate' (highlighted), 'Filter', 'Limits', 'Digital Input & Trigger', 'Digital Output', 'Measurement & control', 'Acquisition', 'Digital Input', 'Digital Output', 'Help', 'FAQ', 'Product Information', and 'Technical Support'. The main panel is titled 'Scan Rate' and contains two buttons: 'Save changes' (in red) and 'Discard changes' (in green). Below these buttons is a text input field containing '7.500000' followed by 'Hz'. Underneath the input field, the minimum and maximum values are listed: 'Minimum 0.000114Hz' and 'Maximum 7.500000Hz'. A 'Help' link is visible in the top right corner of the main panel.

To change your instrument's scan rate, do the following:

1. Type a value, in Hertz, between the minimum and maximum shown in the Scan Rate field.


Note: The scan rate that you specify is rounded to the closest "correct" value that the instrument can accept without error. Internally, the 10 Hz clock is divided by an integer in the range of 1 to 65535 (the internal clock divider) to determine the closest value. When you save the scan rate configuration, the actual scan rate is shown.

2. Click **Save configuration** to apply your changes. If you do not save before leaving this page, your changes are lost.

You can also click the **Discard changes** button (before you save) to return to the previous configuration, if desired.

Filter Configuration

Use the **Configuration** -> **Filter** web page to configure the filter type used by the instrument. A screen similar to the following appears:

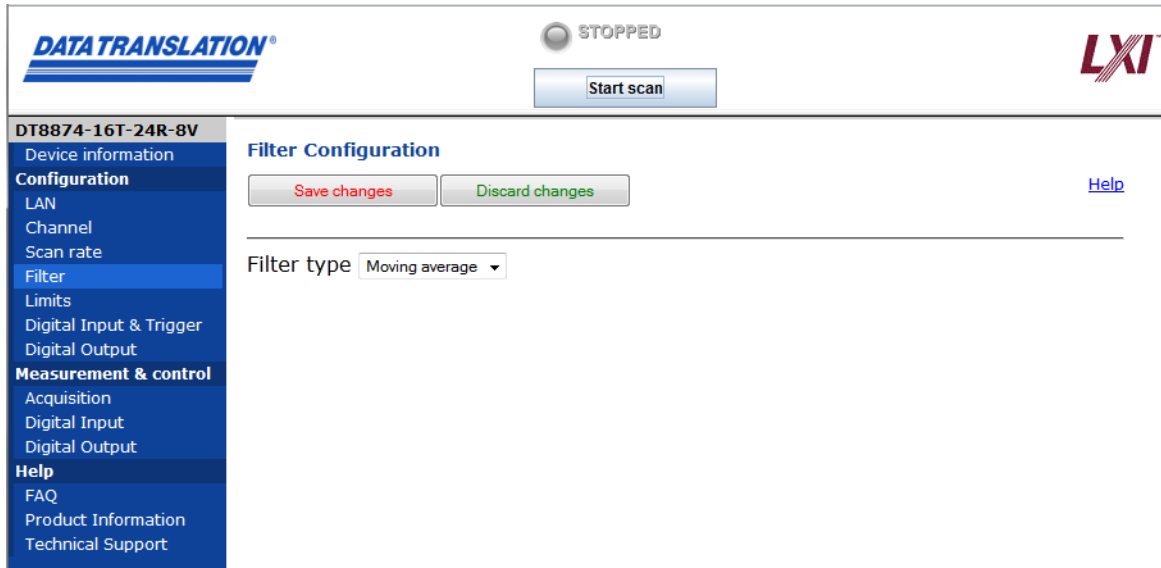

You can choose one of the following filter types:

- **Raw** – No filter. Provides fast response times, but the data may be difficult to interpret. Use when you want to filter the data yourself.

The Raw filter type returns the data exactly as it comes out of the Delta-Sigma A/D converters. Note that Delta-Sigma converters provide substantial digital filtering above the Nyquist frequency.

Generally, the only time it is desirable to use the Raw filter setting is if you are using fast responding thermocouples, sampling them at higher speeds (> 1 Hz), and need as much response speed as possible.

- **Moving average** – (The default filter setting.) Provides a compromise of filter functionality and response time. This filter can be used in any application.

This low-pass filter takes the previous 16 samples, adds them together, and divides by 16.

Alarm Limits Configuration

Use the **Configuration -> Limits** web page to define alarm conditions for specific enabled channels that you want to measure. A screen similar to the following appears.

DATA TRANSLATION LXI

STOPPED
 [Start scan](#)

DT8874-16T-24R-8V

Configuration

- Device information
- Configuration**
 - LAN
 - Channel
 - Scan rate
 - Filter
 - Limits**
 - Digital Input & Trigger
 - Digital Output
- Measurement & control
 - Acquisition
 - Digital Input
 - Digital Output
- Help
 - FAQ
 - Product Information
 - Technical Support

Limit Configuration [Help](#)

[Save changes](#) [Discard changes](#)

Channel	Enable	Low Limit	High Limit	Digital Output
0	<input type="checkbox"/> Enable Disable all	<input type="text"/> °C	<input type="text"/> °C	None ▼
1	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
2	<input type="checkbox"/> Enable	<input type="text"/> °C	<input type="text"/> °C	None ▼
3	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
4	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
5	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
6	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
7	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
8	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
9	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
10	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
11	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
12	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
13	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼
14	<input type="checkbox"/> Enable	<input type="text"/> V	<input type="text"/> V	None ▼

If the alarm condition occurs, the specified digital output line is turned on.

To set up limit checking, do the following:

1. Under **Limit**, click the **Enable** buttons next to the channels for which you want to define limits. You can use the **Disable All** button to quickly stop limit checking on all channels. For each channel:
2. Enter a value in the **Low Limit** text box.
3. Enter a value in the **High Limit** text box.
4. (Optional) Select a **Digital Output** line to set from the drop-down list box for this channel. This line is set to 1 when the limit range (high or low) is exceeded.


When multiple channels are configured to set a digital output line, a logical OR condition exists between them, and any value out of range sets the line to 1.

5. Click **Save configuration** to apply your changes. If you do not save before leaving this page, your changes are lost.

You can also click the **Discard changes** button (before you save) to return to the previous configuration, if desired.

Digital Input and Trigger Configuration

Use the **Configuration -> Digital Input & Trigger** web page to configure the digital input lines of your instrument:

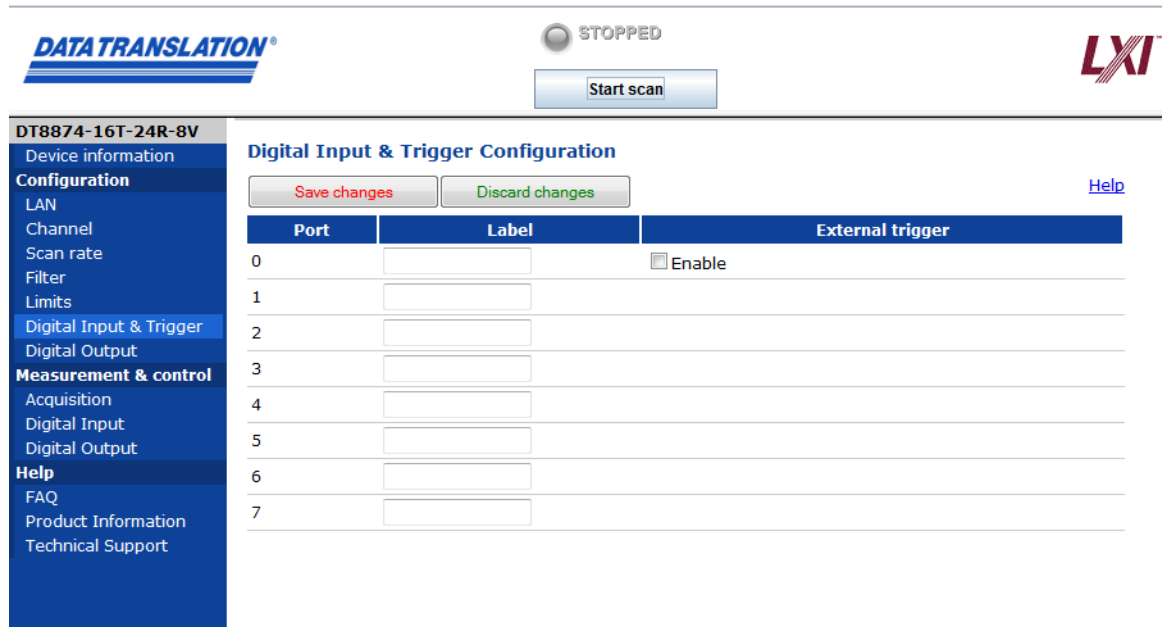

DATA TRANSLATION® STOPPED **LXI**

[Start scan](#)

DT8874-16T-24R-8V

Device information

Configuration

LAN

Channel

Scan rate

Filter

Limits

Digital Input & Trigger

Digital Output

Measurement & control

Acquisition

Digital Input

Digital Output

Help

FAQ

Product Information

Technical Support

Digital Input & Trigger Configuration

[Save changes](#)
[Discard changes](#)
[Help](#)

Port	Label	External trigger
0	<input type="text"/>	<input type="checkbox"/> Enable
1	<input type="text"/>	
2	<input type="text"/>	
3	<input type="text"/>	
4	<input type="text"/>	
5	<input type="text"/>	
6	<input type="text"/>	
7	<input type="text"/>	

To change your digital input configuration, do the following:

1. Describe the digital input lines, if desired, by entering text in the **Label** field corresponding to the digital input line that you want to describe.
2. To enable use of an external, digital trigger on digital input line 0, click the **Enable** checkbox under the External trigger heading.
3. Click **Save configuration** to apply your changes. If you do not save before leaving this page, your changes are lost.

You can also click the **Discard changes** button (before you save) to return to the previous configuration, if desired.

Digital Output Configuration

Use the **Configuration -> Digital Out** web page to configure the digital output lines of your instrument:

DATA TRANSLATION® STOPPED LXI™

DT8874-16T-24R-8V

Configuration

- Device information
- Configuration
- LAN
- Channel
- Scan rate
- Filter
- Limits
- Digital Input & Trigger
- Digital Output
- Measurement & control
- Acquisition
- Digital Input
- Digital Output
- Help
- FAQ
- Product Information
- Technical Support

Digital Output Configuration

[Save changes](#) [Discard changes](#) [Help](#)

Port	Label
0	<input type="text"/>
1	<input type="text"/>
2	<input type="text"/>
3	<input type="text"/>
4	<input type="text"/>
5	<input type="text"/>
6	<input type="text"/>
7	<input type="text"/>

To change your digital output configuration, do the following:

1. Describe the digital output lines, if desired, by entering text in the **Label** field corresponding to the digital output line that you want to describe.
2. Click **Save configuration** to apply your changes. If you do not save before leaving this page, your changes are lost.

You can also click the **Discard changes** button (before you save) to return to the previous configuration, if desired.

Measuring Data and Controlling the Instrument

Use the Control web pages start or stop data acquisition on the sensor channels or to update the value of the digital output line.

Starting and Stopping a Scan

To start or stop a scan, use the **Measurement & control** -> **Channel** web page.

The screenshot displays the DATA TRANSLATION LXI web interface. At the top, there is a 'TRIGGERED' status indicator and a 'Stop scan' button. Below this, the interface is divided into a left sidebar and a main content area. The sidebar contains navigation links: DT8874-16T-24R-8V, Device information, Configuration (LAN, Channel, Scan rate, Filter, Limits, Digital Input & Trigger, Digital Output), Measurement & control (Acquisition, Digital Input, Digital Output), and Help (FAQ, Product Information, Technical Support). The main content area features a 'Digital Meter' tab and a 'Download' button. Below these is a grid of 48 channels (Ch0 to Ch47) arranged in 6 rows and 8 columns. Each channel box displays a measurement value and a unit. For example, Ch16 shows 467.48 Ω, Ch19 shows 0.7619 V, Ch47 shows -0.9560 V, and Ch15 shows 26.81 °C. Some channels show 'V' for voltage or '°C' for temperature, while others show specific units like Ω.

Press the **Start scan** button to begin acquiring data from the sensors. The measurements are displayed on the screen. Press the **Stop scan** button to stop acquiring data from the sensors.

Notice the following aspects of the display:

- When acquiring data, the **Start scan** button changes to say **Stop scan** and the currently configured scan rate is displayed.
- Each box on the Meter tab represents one of the analog input channels, in the same position as the physical connectors.
- If you configured custom labels for some of the channels, those labels are shown here rather than the channel numbers.
- Red boxes indicate that the value is out of range for the specified sensor type.
- The values are updated only for the channels that you enabled, and at the scan rate you configured.

Controlling the Digital Outputs

Use the **Measurement & control** -> **Digital Output** web page to view the current state of the digital output lines, and manually change them if desired. A screen similar to the following appears:

The screenshot shows the LXI web interface for the DT8874-16T-24R-8V device. The top status bar indicates the device is "STOPPED" with a "Start scan" button. The sidebar on the left contains navigation links: Device information, Configuration (LAN, Channel, Scan rate, Filter, Limits, Digital Input & Trigger, Digital Output), Measurement & control (Acquisition, Digital Input, Digital Output), and Help (FAQ, Product Information, Technical Support). The "Digital Output" link is selected.

The main content area is titled "Digital Output Status and Control" and displays a table with the following data:

Port	Label	Current state	New state
0		Closed	<input type="button" value="Open"/>
1		Closed	<input type="button" value="Open"/>
2		Open	<input type="button" value="Close"/>
3		Open	<input type="button" value="Close"/>
4		Open	<input type="button" value="Close"/>
5		Open	<input type="button" value="Close"/>
6		Open	<input type="button" value="Close"/>
7		Open	<input type="button" value="Close"/>

Green indicates that the digital output line/relay is closed; red indicates that the digital output line/relay is open.

Note: You cannot change the configuration of digital output lines that were configured for limit checking on the **Configuration** -> **Limits** page.

To change the status of a digital output line/relay, click the **Open/Close** toggle buttons under the **Change State** heading for the digital output lines that you want to change. You can use these controls to activate or deactivate an external device based on criteria other than temperature that you define.

Reading the Digital Inputs

While the instrument is scanning, you can use the **Measurement & control -> Digital Input** web page to view the current value of the digital input port. A screen similar to the following appears:

DT8874-16T-24R-8V

STOPPED

Start scan

Digital Input Status

Port	Label	Current state
0		Open
1		Open
2		Open
3		Open
4		Open
5		Open
6		Open
7		Open


If you configured custom labels for the digital input lines, those labels are shown here.

The **Current state** LEDs show green if the digital input line is on (relay is closed) or red if the digital input line is off (relay is open).

Downloading Measurements

Note: Before using this feature, ensure that you have associated CSV files with Microsoft Excel or Notepad, described on [page 78](#), or the data will be displayed in the browser and not saved to a file.

You can use the **File -> Download Measurements** web page to download your measurement results, including timestamp and limit values, if applicable, to disk. A screen similar to the following appears:

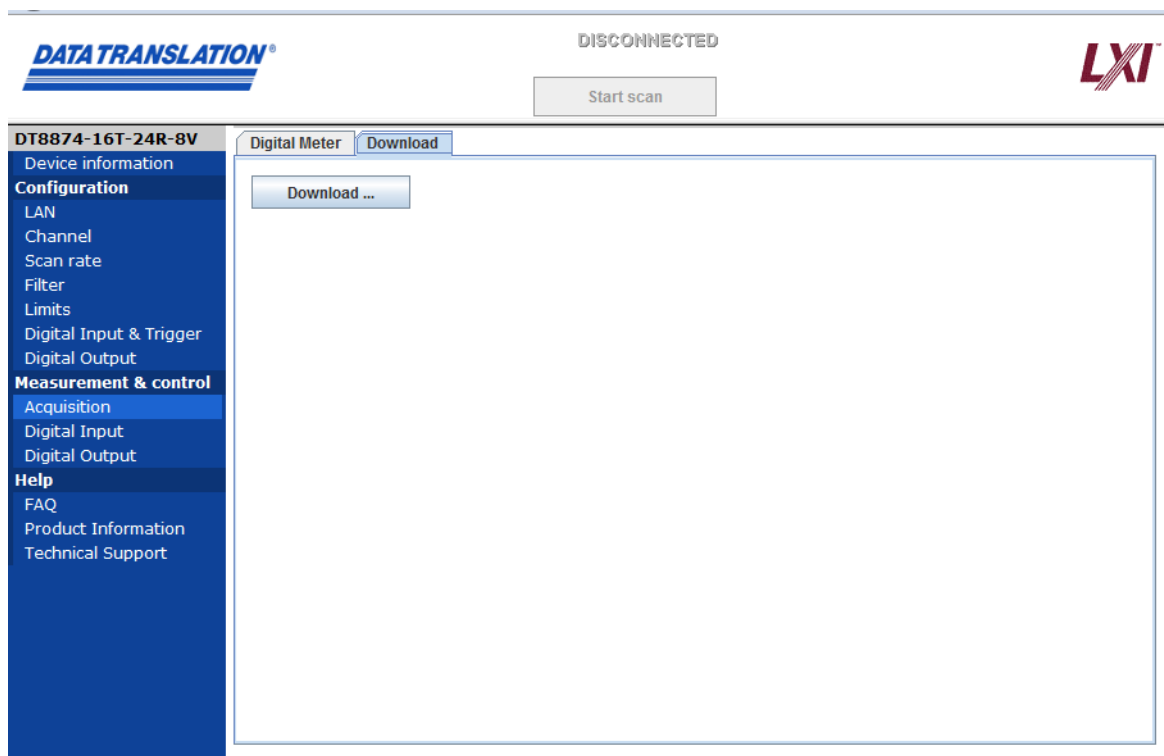


Measurements taken by the instrument are stored in a large circular buffer; when the buffer is full, the oldest data is overwritten with the most recent data.


To download your data, do the following:

1. Click the **Download** button on this page.

If scanning has been stopped, all the data in the buffer is downloaded to a comma-separated CSV file, starting with the most recent data.

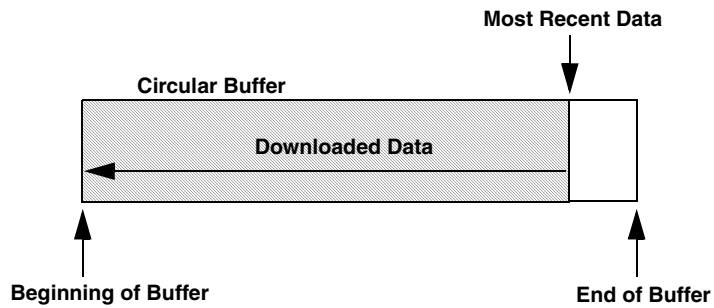

If scanning is in progress, a snapshot of the data from the most recent data (at the time that the **Download** button was clicked) to the oldest data in the buffer is downloaded to a comma-separated CSV file.

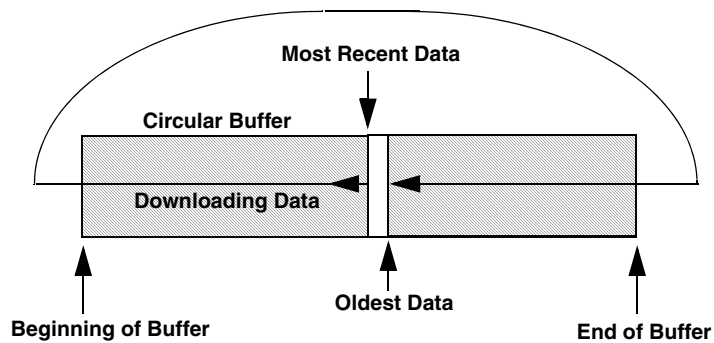

2. In the resulting dialog box, choose **Open** or **Save**.
 - If you choose **Open**, the CSV file opens in the associated application (Microsoft Excel or Notepad).
 - If you choose **Save**, you can open the CSV file in Microsoft Excel, Notepad, or other utilities for analysis at a later time.

Under some circumstances, your data may be displayed in a frame in the browser, or Excel may open the data in the frame. Change your Microsoft Excel, Microsoft Explorer, and Internet Explorer settings to turn off these behaviors and open your files directly in Excel.

Part 2: Using Your Instrument



Principles of Operation

Block Diagrams	100
Analog Input Features	105
Digital I/O Features	116

Block Diagrams

This section includes the block diagrams for the DT8871U, DT8871, and DT8872 TEMPpoint instruments, DT8873 VOLTpoint instrument, and DT8874 MEASURpoint instruments.

DT8871U Block Diagram

Figure 32 shows the block diagram of the DT8871U TEMPpoint instrument.

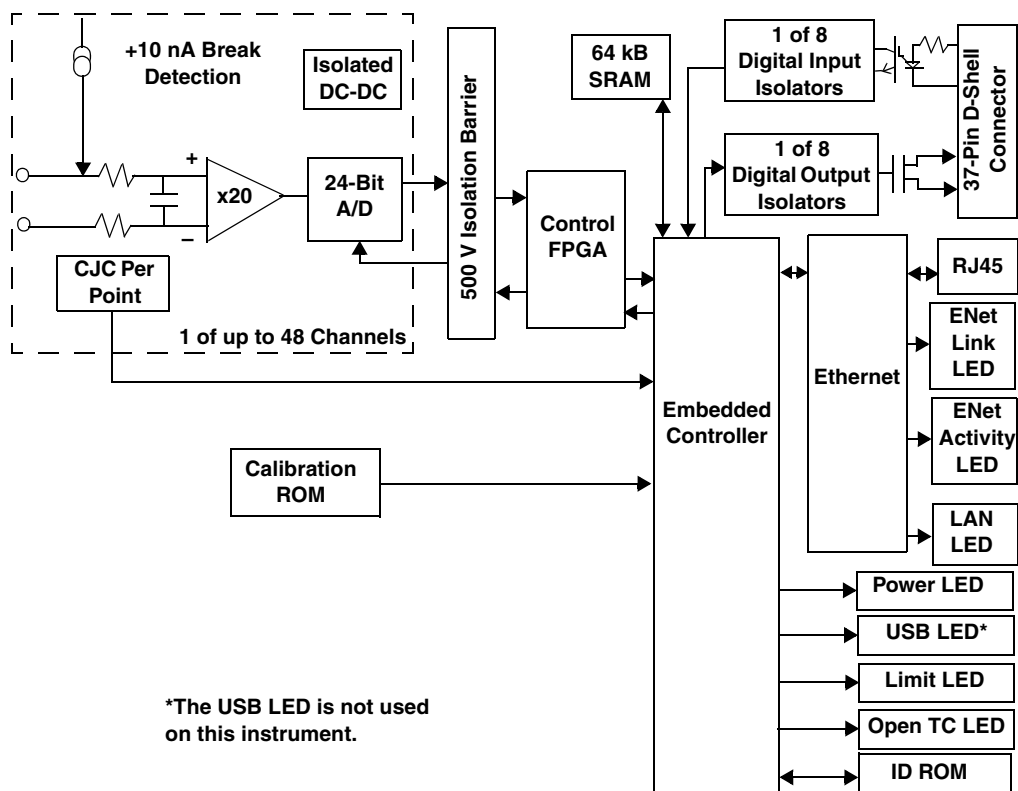


Figure 32: Block Diagram of the DT8871U TEMPpoint Instrument

DT8871 Block Diagram

Figure 33 shows the block diagram of the DT8871 instrument.

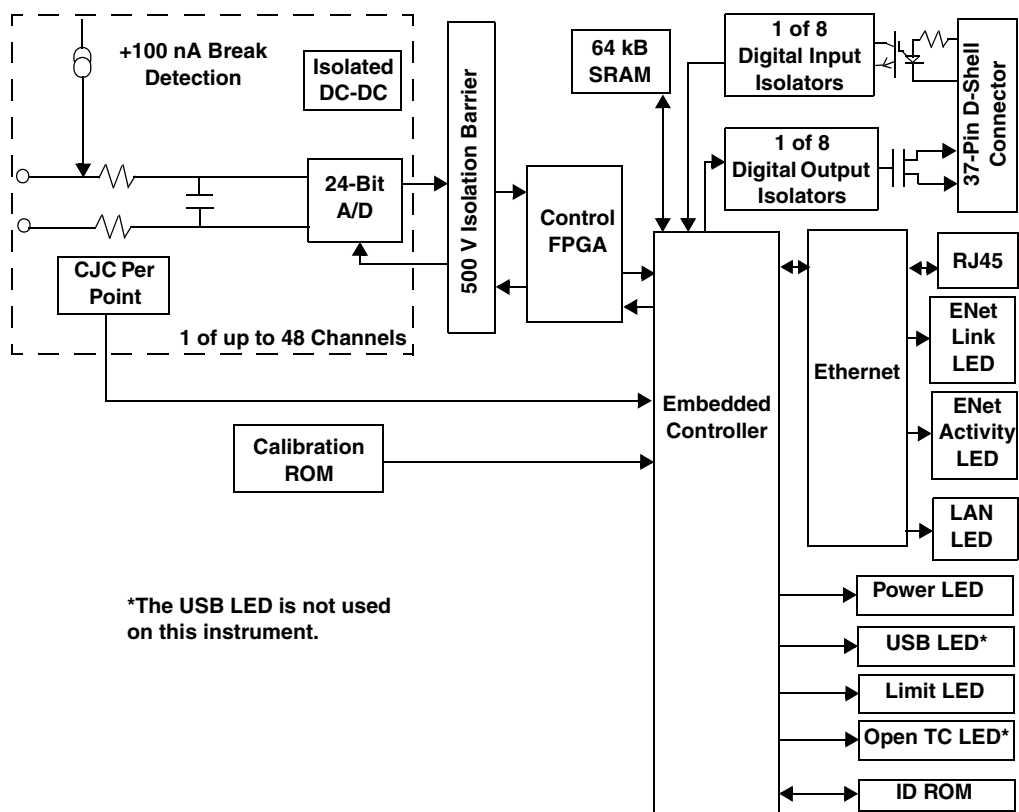


Figure 33: Block Diagram of the DT8871 TEMPpoint Instrument

DT8872 Block Diagram

Figure 34 shows the block diagram of the DT8872 TEMPpoint instrument.

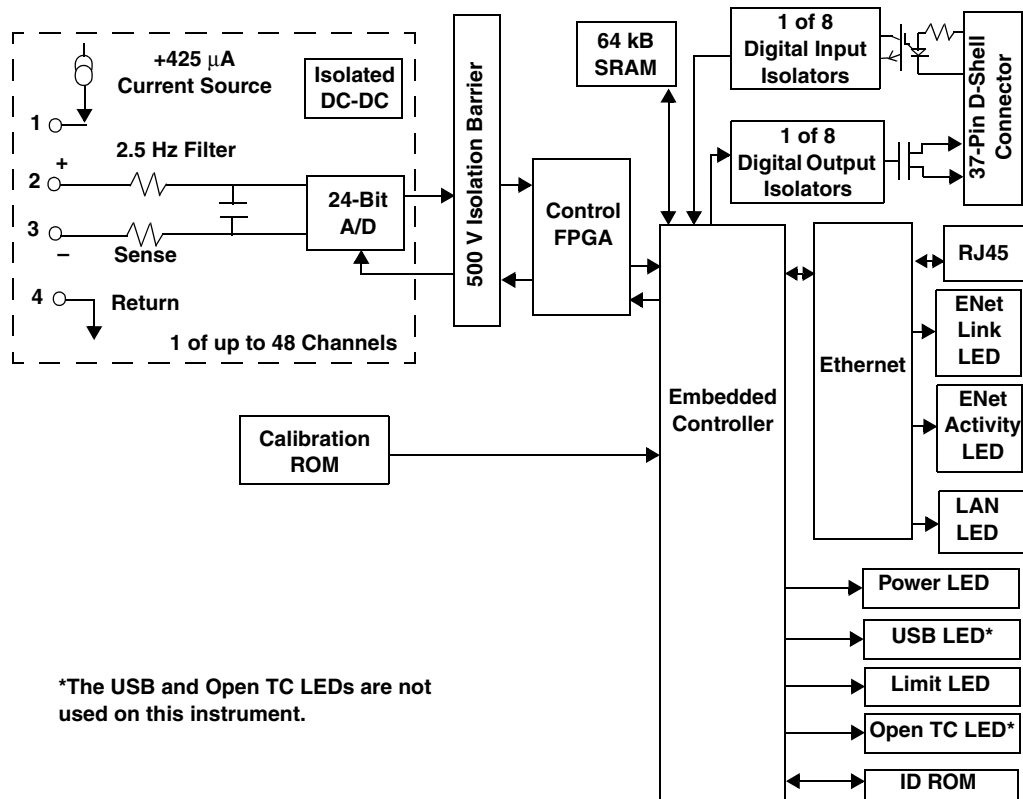


Figure 34: Block Diagram of the DT8872 TEMPpoint Instrument

DT8873 Block Diagram

Figure 35 shows the block diagram of the DT8873 VOLTpoint instrument.

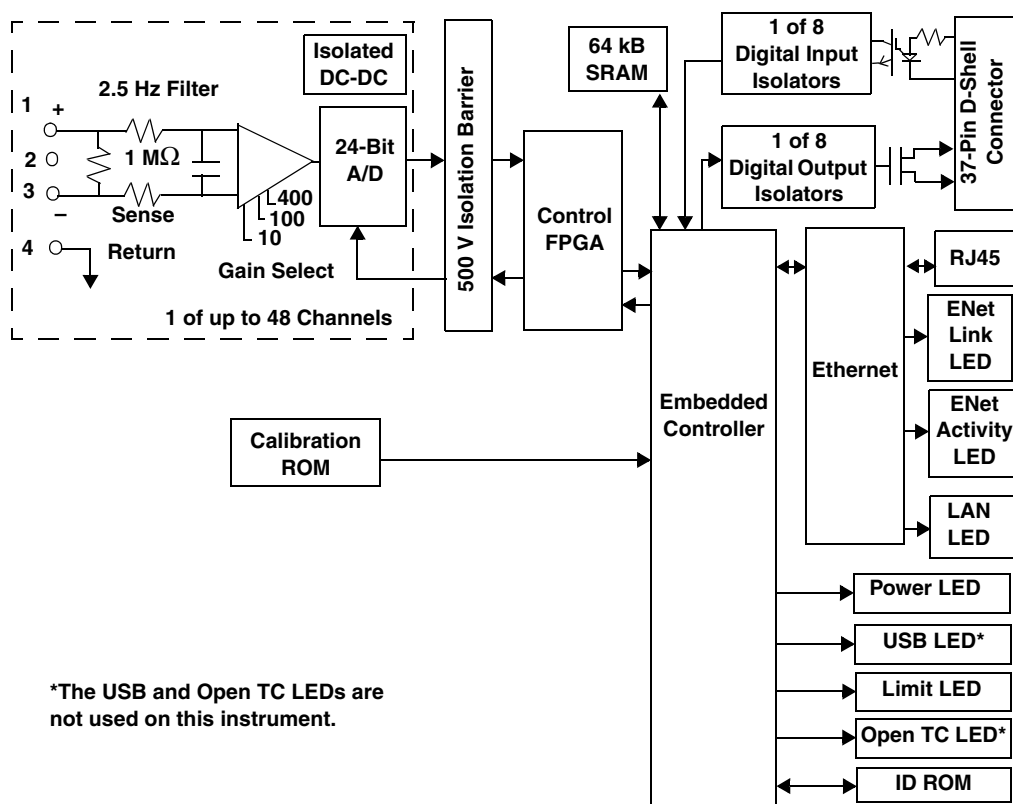


Figure 35: Block Diagram of the DT8873 VOLTpoint Instrument

DT8874 Block Diagram

Figure 36 shows the block diagram of the DT8874 MEASURpoint instrument.

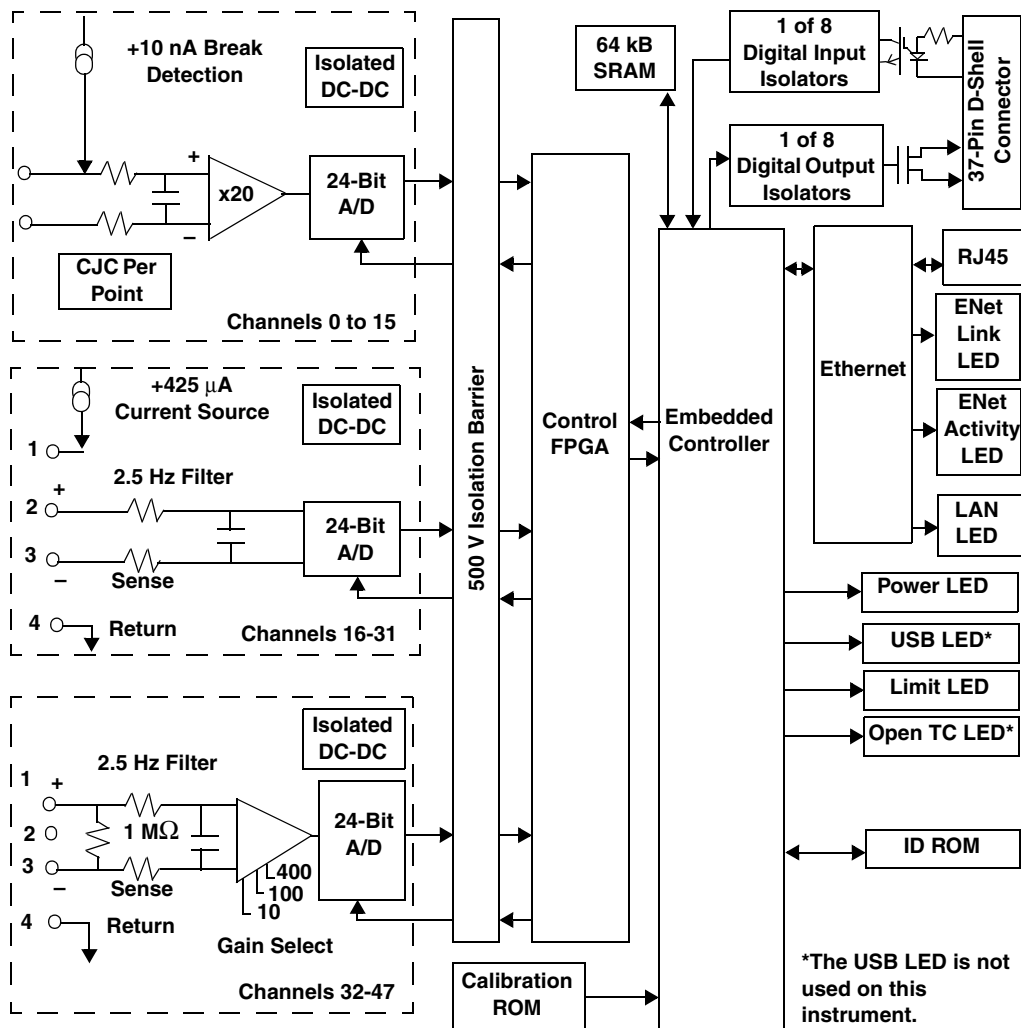


Figure 36: Block Diagram of the DT8874 MEASURpoint Instrument

Analog Input Features

This section describes the following features of the analog input (A/D) subsystem on TEMPpoint, VOLTpoint, and MEASURpoint instruments:

- Analog input channels, described on this page
- Input ranges, described on [page 108](#)
- Resolution, described on [page 110](#)
- Calibration, described on [page 110](#)
- Sample clock, described on [page 111](#)
- Trigger source, described on [page 111](#)
- Conversion modes, described on [page 112](#)
- Filtering, described on [page 114](#)
- Data format, described on [page 114](#)
- Error conditions, described on [page 115](#)

Analog Input Channels

TEMPpoint, VOLTpoint, and MEASURpoint instruments provide up to 48 analog input channels. The number of channels and the channel types supported (thermocouple, RTD, or voltage input) depend on the specific instrument model you purchased, as shown in [Table 3](#).

Table 3: Number and Type of Analog Input Channels

Instrument Type	Models	# of Analog Input Channels	Channel Types
TEMPpoint	DT8871U-8 and DT8871-8	8	8 thermocouple inputs (numbered 0 to 7)
	DT8871U-16 and DT8871-16	16	16 thermocouple inputs (numbered 0 to 15)
	DT8871U-24 and DT8871-24	24	24 thermocouple inputs (numbered 0 to 23)
	DT8871U-32 and DT8871-32	32	32 thermocouple inputs (numbered 0 to 31)
	DT8871U-40 and DT8871-40	40	40 thermocouple inputs (numbered 0 to 39)
	DT8871U-48 and DT8871-48	48	48 thermocouple inputs (numbered 0 to 47)
	DT8872-8	8	8 RTD inputs (numbered 0 to 7)
	DT8872-16	16	16 RTD inputs (numbered 0 to 15)
	DT8872-24	24	24 RTD inputs (numbered 0 to 23)
	DT8872-32	32	32 RTD inputs (numbered 0 to 31)
	DT8872-40	40	40 RTD inputs (numbered 0 to 39)
	DT8872-48	48	48 RTD inputs (numbered 0 to 47)

Table 3: Number and Type of Analog Input Channels (cont.)

Instrument Type	Models	# of Analog Input Channels	Channel Types
VOLTpoint	DT8873-8	8	8 voltage inputs (numbered 0 to 7)
	DT8873-16	16	16 voltage inputs (numbered 0 to 15)
	DT8873-24	24	24 voltage inputs (numbered 0 to 23)
	DT8873-32	32	32 voltage inputs (numbered 0 to 31)
	DT8873-40	40	40 voltage inputs (numbered 0 to 39)
	DT8873-48	48	48 voltage inputs (numbered 0 to 47)
MEASURpoint	DT8874-16T-16R-16V	48	16 thermocouple inputs (numbered 0 to 15)
			16 RTD inputs (numbered 16 to 31)
			16 voltage inputs (numbered 32 to 47)

Thermocouple Input Channels

For channels that support thermocouples, you can attach a voltage input or any of the following thermocouple types in a mix and match fashion: B, E, J, K, N, R, S, and/or T.

By default, these channels are configured for voltage inputs. You can specify the thermocouple types for channels over the LAN using the web interface, as described in [“Channel Configuration” on page 84](#), in the QuickDAQ application, or by using an API call in your application program. You can also use standard SCPI commands over VISA or sockets, if desired.

Note: In a mix-and-match system, it is easy to accidentally mismatch the software and hardware configuration for a channel. Therefore, it is recommended that you pay particular attention when configuring channels, since the resultant errors may be not large enough to notice initially, but may be significantly larger than the accuracy specification for the instrument.

Since each channel has its own 24-bit A/D, analog inputs are measured simultaneously. Refer to [page 112](#) for more information on specifying the channels for a scan.

[Table 4](#) lists the supported measurement range for each thermocouple type. (Refer to [page 108](#) for information on the supported input range for voltage measurements.)

Table 4: Supported Measurement Range for Each Thermocouple Type

Thermocouple Type	Supported Measurement Range	
	Minimum	Maximum
B	250° C (482° F)	1820° C (3308° F)
E	–200° C (–328° F)	1000° C (1832° F)
J	–210° C (–346° F)	1200° C (2192° F)
K	–200° C (–328° F)	1372° C (2502° F)
N	–200° C (–328° F)	1300° C (2372° F)
R	–50° C (–58° F)	1768° C (3214° F)
S	–50° C (–58° F)	1768° C (3214° F)
T	–200° C (–328° F)	400° C (752° F)

Refer to [Appendix A](#) for the thermocouple accuracy of thermocouple channels over the dynamic range of the instrument.

Cold Junction Compensation

Each thermocouple channel has its own cold-junction compensation (CJC) at the input. The software reads the value of the CJC input along with the value of the analog input channel and automatically corrects for errors based on the specified thermocouple type and the thermocouple linearization data stored in onboard ROM.

A separate multiplexed A/D is used to acquire all the CJC input values. The software takes care of correlating the CJC measurements with the analog input measurements.

Note: The software provides the option of returning CJC values in the data stream. This option is seldom used, but is provided if you want to implement your own temperature conversion algorithms in software when using continuous operations. Refer to [page 114](#) for more information on this feature.

Open Thermocouple Detection

Break detection circuitry (+10 nA on the DT8871U and DT8874; +100 nA on the DT8871) is provided for thermocouple channels to ensure that open thermocouples are detected. The Open (OPN) LED on the rear panel lights when this condition occurs; see [Figure 14 on page 44](#) for the location of this LED.

In addition, the software returns the value `SENSOR_IS_OPEN` (99999 decimal) for any channel that was configured for a thermocouple input and has either an open thermocouple or no thermocouple connected to it. This value is returned anytime a voltage greater than 100 mV is measure on the input, since this value is greater than any legitimate thermocouple voltage.

If the channel is configured for a voltage input (not a thermocouple type), the Open (OPN) LED never lights and the `SENSOR_IS_OPEN` value is not returned. Instead, the voltage value is returned. If no input is connected to the channel, the software returns a value of approximately 0.7 V due to the open thermocouple detection pull-up circuit.

RTD Channels

For channels that support RTDs, you can attach a voltage input or any of the following RTD types in a mix and match fashion: Platinum 100 Ω (Pt100), Platinum 500 Ω (Pt500), or Platinum 1000 Ω (Pt1000) RTD using an European alpha curve of 0.00385 or an American alpha curve of 0.00392. The supported temperature measurement range for these RTD types is -200°C (-328°F) to 850°C (1562°F). You can also measure a resistance value between 0 and 4k Ohms, if desired. (Refer to [page 108](#) for information on the supported input range for voltage measurements.)

By default, all channels are configured for voltage inputs. You can specify the RTD types for channels over the LAN using the web interface, as described in “[Channel Configuration](#)” on [page 84](#), in the QuickDAQ application, or by using an API call in your application program. You can also use standard SCPI commands over VISA, if desired.

Note: In a mix-and-match system, it is easy to accidentally mismatch the software and hardware configuration for a channel. Therefore, it is recommended that you pay particular attention when configuring channels, since the resultant errors may be not large enough to notice initially, but may be significantly larger than the accuracy specification for the instrument.

Since each channel has its own 24-bit A/D, analog inputs are measured simultaneously. Refer to [page 112](#) for more information on specifying the channels for a scan.

Input Ranges

The input voltage range that is supported by your TEMPpoint, VOLTpoint, or MEASURpoint instrument depends on the specific instrument model that you purchased, as shown in [Table 5](#).

Table 5: Supported Input Ranges

Instrument Type	Models	Input Range
TEMPpoint	DT8871U	± 0.75 V for all channels
	DT8871	± 1.25 V for all channels
	DT8872	± 1.25 V for all channels
VOLTpoint	DT8873	± 10 V, ± 100 V, or ± 400 V (software-selectable for each channel) ^a
MEASURpoint	DT8874-16T-16R-16V	± 0.75 V for channels 0 to 15; ± 1.25 V for channels 15 to 31; ± 10 V, ± 100 V, or ± 400 V for channels 32 to 47 (software-selectable for each channel)

a. Older versions of this instrument had fixed input ranges of ± 10 V, ± 100 V, or ± 400 V, depending on the model purchased.

Out of Range Data for Thermocouple Channels

Each thermocouple type corresponds to an allowable voltage range. If a voltage is measured on the input that is outside of the legal range for the selected thermocouple type, the channel may be configured for the wrong type of thermocouple or something other than a thermocouple may be connected to the channel.

For channels configured with a thermocouple type of None (voltage), the Limit (LMT) LED on the rear panel of the instrument lights to alert you when the voltage is out of range; see [Figure 14 on page 44](#) for the location of this LED.

For channels configured with a thermocouple type other than None (voltage), the LMT LED lights when the temperature limit is out of range for the specified thermocouple type.

In addition, if the input voltage is less than the legal voltage range for the selected thermocouple type, the software returns the value TEMP_OUT_OF_RANGE_LOW (–88888 decimal). If the input voltage is greater than the legal voltage range for the selected thermocouple type, the software returns the value TEMP_OUT_OF_RANGE_HIGH (88888 decimal).

Note: If you are continuously measuring from a properly configured thermocouple input channel and the thermocouple opens or becomes disconnected, the open thermocouple pull-up circuit causes the input voltage to rise to approximately 0.7 V over a few seconds.

In this case, the temperature value rises very quickly, and you will receive the TEMP_OUT_OF_RANGE_HIGH (88888 decimal) value followed by the OPEN_SENSOR (99999 decimal) value. In this case, the OPN LED lights when the open thermocouple is detected and the LMT LED lights when the temperature limit is out of range for the thermocouple type.

Out of Range Data for RTD Channels

Each RTD type corresponds to an allowable voltage range. If a voltage is measured on the input that is outside of the legal range for the selected RTD type, the channel may be configured for the wrong type of RTD or something other than an RTD may be connected to the channel.

For channels configured with a RTD type of voltage, the Limit (LMT) LED on the rear panel of the instrument lights to alert you when the voltage is out of range (greater than +1.25 V or less than -1.25 V); see [page 44](#) for the location of this LED. For channels configured with an RTD type other than voltage, the LMT LED lights when the temperature limit is out of range for the specified RTD type.

In addition, if the input voltage is less than the legal voltage range for the selected RTD type, the software returns the value TEMP_OUT_OF_RANGE_LOW (-88888.0 decimal). If the input voltage is greater than the legal voltage range for the selected RTD type, the software returns the value TEMP_OUT_OF_RANGE_HIGH (88888.0 decimal).

Out of Range Data for Voltage Channels

Each voltage input channel has an allowable voltage range (± 10 V, ± 100 V, or ± 400 V). You configure the input range for each channel using software. If a voltage is measured on the input that is outside of the legal range for that channel, the Limit (LMT) LED on the rear panel of the instrument lights to alert you; see [page 44](#) for the location of this LED.

Resolution

TEMPpoint, VOLTpoint, and MEASURpoint instruments support a resolution of 24 bits for the analog input subsystem; you cannot specify the resolution in software.

Calibration

Each TEMPpoint, VOLTpoint, and MEASURpoint instrument is factory-calibrated to meet or exceed its published specifications using standards traceable to NIST.

The calibration process includes multiple steps. First, the A/D on each channel is calibrated for offset and gain; these values (including the zero point) are stored in ROM. Then, each CJC circuit is calibrated for thermocouple input channels, and the reference current is characterized for RTD channels.

While each instrument was designed to preserve high accuracy measurements over time, it is recommended that your instrument be recalibrated every year to ensure that it meets or exceeds specifications.

You can calibrate your instrument in the field using precise calibration equipment and the Measurement Instrument Calibration Utility. Refer to the help file for the Measurement Instrument Calibration Utility for detailed information.

Optionally, you can return your instrument to Data Translation for recalibration. For information on factory recalibration, contact Data Translation at 508-481-3700, ext. 1323 (if you are in the USA) or call your local distributor (if you are located outside the USA); see our web site (www.datatranslation.com) for the name and telephone number of your nearest distributor.

In addition, each instrument auto-calibrates on each power-up cycle to guarantee high-accuracy measurements. This process, also known as auto-zeroing, resets the zero point of each A/D. You can also auto-calibrate the instrument at any time (as long as acquisition is not in progress) using a software command. Refer to your software documentation for more information on the auto-calibration feature.

Sample Clock Source

TEMPpoint, VOLTpoint, and MEASURpoint instruments support an internal clock with a maximum sampling rate of 10 Samples/s.

Use software to specify an internal clock source and a clock frequency between 0.000152590219 Hz and 10.0 Hz.

Note: The clock frequency that you specify is rounded to the closest "correct" value that the instrument can accept without error. Internally, the 10 Hz clock is divided by an integer in the range of 1 to 65535 (the internal clock divider) to determine the closest value. Using software, you can query this setting to determine the actual clock frequency that is used.

When the continuous operation is started, all the channels specified in the channel list are read simultaneously at the specified clock frequency.

Trigger Source

A trigger is an event that occurs based on a specified set of conditions. Acquisition starts when the instrument detects the initial trigger event and stops when you stop the operation.

TEMPpoint, VOLTpoint, and MEASURpoint instruments support the following trigger sources for starting analog input operations:

- **Software trigger** – A software trigger event occurs when you start the analog input operation (the computer issues a write to the instrument to begin conversions).
- **External digital trigger** – An external digital trigger event occurs when the instrument detects a voltage from +3 V to +28 V DC on digital input line 0. Initially, the external signal must be low and then go high for at least 100 ms to be detected as a trigger. Once triggered, the state of digital input 0 is ignored.

Conversion Modes

TEMPpoint, VOLTpoint, and MEASURpoint instruments support simultaneous single value and continuous scan conversion modes for reading input measurements.

This section describes each of these conversion modes.

Simultaneous Single-Value Operations

If you want a snapshot of all the analog input channels at one point in time, you can perform a simultaneous single-value operation, also called a single values operation, using SCPI commands.

Note: This operation mode is supported in SCPI only; it is not supported by the IVI-COM driver or the instrument's web interface.

Use one of the **:MEASure** SCPI commands to specify the channels that you want to sample and the configuration of the channels, if needed. One single value is then acquired from each analog input channel simultaneously and returned.

If you need to continuously acquire data from one or more channels use continuous scan mode, described next, instead.

Continuous Scan Mode

Continuous scan mode takes full advantage of the capabilities of the TEMPpoint, VOLTpoint, and MEASURpoint instruments. Use continuous scan mode if you want to accurately control the period between successive simultaneous conversions of specific channels.

In addition to the analog input channels, this conversion mode allows you to read the digital input port (all 8 digital input lines) as part of the analog input data stream. This feature is particularly useful when you want to correlate the timing of analog and digital events.

Specifying Analog Input Channels

Using software, enable the analog input channels that you want to sample by specifying the channel numbers in the channel list. You can also read the value of the digital input port through the analog input data stream by specifying the digital input channel in the channel list; the number of the digital input channel depends on how many channels the TEMPpoint, VOLTpoint, or MEASURpoint instrument provides, as shown in [Table 6](#).

Table 6: Supported Channels for Continuous Operations

Total Number of Analog Input Channels	Channel for Reading the Digital Input Port
0 to 7	8
0 to 15	16
0 to 23	24
0 to 31	32
0 to 39	40
0 to 47	48

The channels are read in order from the lowest channel number to the highest channel number in the list of enabled channels; this process is known as a scan.


How Continuous Scan Works

When you issue a command to start the scan, the instrument simultaneously samples all the analog input channels, CJC inputs (if applicable), and the digital input port, and converts the analog inputs to temperature, resistance, or voltage based on the sensor type. If the channel is enabled, the sampled data is placed in the FIFO on the instrument.

The FIFO on the instrument is used as a circular buffer. Acquisition continues indefinitely until you stop the operation. When the FIFO is full, the operation wraps to the beginning of the FIFO; values are overwritten starting at the first location in the FIFO. It is up to your application to retrieve the data from the FIFO; refer to your software documentation for more information.

The conversion rate is determined by the frequency of the input sample clock; refer to [page 111](#) for more information about the input sample clock. The sample rate, which is the rate at which a single entry in the channel list is sampled, is the same as the conversion rate due to the simultaneous nature of the MEASURpoint instrument.

[Figure 37](#) illustrates scanning a list of three enabled channels: channel 0, channel 1, and channel 2. In this example, analog input data is acquired simultaneously on each clock pulse of the input sample clock. Data is acquired continuously.

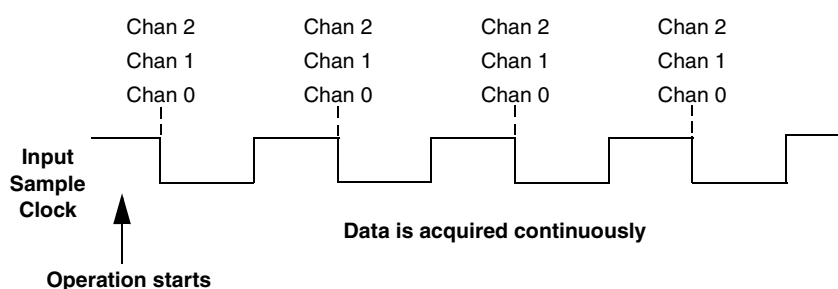**Figure 37: Continuous Scan Mode**

Filtering

TEMPpoint, VOLTpoint, and MEASURpoint instruments use a Delta-Sigma analog-to-digital converter (ADC) for each analog input channel to provide simultaneous sampling of all inputs. The Delta-Sigma converter operates at 10 Hz effectively providing a filter that rejects 50 Hz and 60 Hz power line frequency components and that removes *aliasing*, a condition where high frequency input components erroneously appear as lower frequencies after sampling.

In addition to the filter provided in hardware, you can further reduce noise by selecting one of the following filter options in software: Moving Average or Raw. Refer to [page 87](#) and to your software documentation for more information on selecting a filter type.

Data Format

TEMPpoint, VOLTpoint, and MEASURpoint instruments return data as 32-bit floating-point values. How the data is returned depends on the channel type, as described in the following subsections.

Data Format for Thermocouple Channels

If you specify a thermocouple type of None for a thermocouple input channel, a voltage measurement is selected and the instrument returns a voltage value. For the DT8871U and DT8874 instruments, the value is in the range of ± 0.075 V; for the DT8872 instrument, the value is in the range of ± 1.25 V. For all other thermocouple types, a temperature value, in degrees C, or one of the error constants, described on [page 115](#), is returned.

In normal operation, one floating-point value is returned for each enabled channel (including the digital input port). If you enable the capability of returning CJC data in the data stream, described on [page 107](#), two floating-point values are returned in the data stream for each enabled analog input channel. The first value in the pair represents the temperature (or voltage) of the channel; the second value in the pair represents the CJC temperature (in degrees C) for that channel.

Data Format for RTD Channels

If you specify an RTD type of None for an RTD input channel, a voltage measurement is selected and the instrument returns a voltage value in the range of ± 1.25 V. If you specify an RTD type of Ohms, a resistance value is returned. For all other RTD types, a temperature value, in degrees C, or one of the error constants, described on [page 115](#), is returned.

One floating-point value is returned for each enabled channel (including the digital input port).

Data Format for Voltage Channels

For voltage channels, a voltage value in the range of ± 10 V, ± 100 V, or ± 400 V is returned, depending on how the channel was configured.

One floating-point value is returned for each enabled channel (including the digital input port).

Error Conditions

TEMPpoint, VOLTpoint, and MEASURpoint instruments report overrun errors by sending an overrun event to the application program. If this error condition occurs, the instrument stops acquiring and transferring data to the host computer. To avoid this error, try one or more of the following:

- Reduce the sample rate
- Close any other applications that are running
- Run the program on a faster computer

Additionally, the following constants may be reported to the host:

- 99999.0 – SENSOR_IS_OPEN, described on [page 107](#)
- 88888.0 – TEMP_OUT_OF_RANGE_HIGH, described on [page 109](#) and [page 110](#)
- -88888.0 – TEMP_OUT_OF_RANGE_LOW, described on [page 109](#) and [page 110](#)

If any of these constants is reported, the A/D subsystem continues to acquire data; the error condition is cleared when the data falls within range.

Digital I/O Features

TEMPpoint, VOLTpoint, and MEASURpoint instruments provide 8 digital input lines and 8 digital output lines that you can use to control external equipment, including solid-state or mechanical relays.


This section describes the following digital I/O features:

- Digital input lines, described below
- Digital output lines, described on [page 117](#)
- Channel-to-channel isolation, described on [page 117](#)
- Resolution, described on [page 117](#)
- Operation modes, described on [page 117](#)

Digital Input Lines

TEMPpoint, VOLTpoint, and MEASURpoint instruments feature eight, isolated, digital input lines.

Digital inputs operate from +3 to +28 V DC, with a switching time of 2 ms maximum. [Figure 38](#) shows the digital input circuitry; a 2.2 k Ω resistor is used in series with the LED in the opto-isolator input.

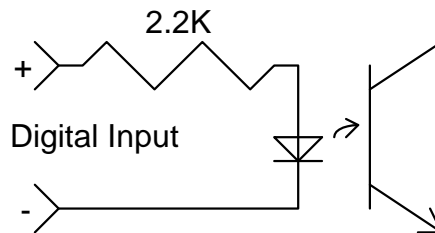

1 of 8 Opto-Isolators


Figure 38: Digital Input Circuitry

A digital line is high (switch is closed) if its value is 1; a digital line is low (switch is open) if its value is 0.

Digital Output Lines

TEMPpoint, VOLTpoint, and MEASURpoint instruments feature eight, latched and isolated digital output lines. The outputs are solid-state relays that operate at ± 30 V and 400 mA peak (AC or DC). Switching time is 2 ms maximum.

Figure 39 shows the digital output circuitry.

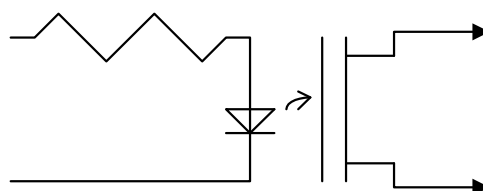

1 of 8 Solid State Relays

Figure 39: Digital Output Circuitry

Digital outputs resemble a switch; the switch is closed if the state of the digital output line is 1, and the switch is open if the state of the digital output line is 0. On power up or reset, the digital outputs are disabled.

Channel-to-Channel Isolation

Each TEMPpoint, VOLTpoint, and MEASURpoint instrument includes channel-to-channel isolation of up to 250 V between digital I/O lines. If you require greater channel-to-channel isolation, use every other digital line. This reduces the number of digital I/O lines, but provides channel-to-channel isolation of 500 V (one channel can be +250 V while the adjacent channel can be -250 V).

Resolution

Each TEMPpoint, VOLTpoint, and MEASURpoint instrument provides 8 bits of resolution for the digital input port to accommodate the 8 digital input lines and 8 bits of resolution for the digital output port to accommodate the 8 digital output lines. These lines are organized as isolated, dedicated ports. You cannot configure port resolution through software.

Operation Modes

Using software, you can read from a single digital input line or the entire digital input port, or write to a single digital output line or the entire digital output port. You can also return the value of the entire digital input port in the analog input data stream if you want to correlate analog input data with digital events; refer to [page 112](#) for more information.



Troubleshooting

General Checklist	120
Technical Support	122
If Your Instrument Needs Factory Service	123

General Checklist

Should you experience problems using a TEMPpoint, VOLTpoint, or MEASURpoint instrument, do the following:

1. Read all the documentation provided for your product, including any “Read This First” information.
2. Check the MEASURpoint Software CD for any README files and ensure that you have used the latest installation and configuration information available.
3. Check that your system meets the requirements stated in [Chapter 2](#).
4. Check that you have installed your hardware properly using the instructions in [Chapter 3](#).
5. Check that you have wired your signals properly using the instructions in [Chapter 4](#).
6. Check that you have installed Java and configured your web browser appropriately using the instructions on [page 73](#).
7. Search the DT Knowledgebase in the Support section of the Data Translation web site (at www.datatranslation.com) for an answer to your problem.

If you still experience problems, try using the information in [Table 7](#) to isolate and solve the problem. If you cannot identify the problem, refer to [page 122](#).

Table 7: Troubleshooting Problems

Symptom	Possible Cause	Possible Solution
Instrument is not found.	The instrument cannot communicate with the network.	Ensure that your instrument is properly connected; see the instructions in Chapter 3 .
		If your PC has a static IP address, reconfigure it for Auto-IP using the instructions on page 149 .
		Check your LAN configuration; see the instructions on page 83 .
		Check the IP address of the instrument by opening a Command Prompt window (Start -> Programs -> Accessories -> Command Prompt) and entering the command "ipconfig /all". The IP settings of your instrument are returned.
		Ping the instrument by opening a Command Prompt window (Start -> Programs -> Accessories -> Command Prompt) and entering the command "ping address", where <i>address</i> is the IP address of your instrument. If a timeout message is returned, the IP address is incorrect. If a "no host" error message is returned, the subnet mask is incorrect. Refer to page 43 for more information on IP and subnet addresses.
		If needed, reset the instrument using the instructions on page 46 .

Table 7: Troubleshooting Problems (cont.)

Symptom	Possible Cause	Possible Solution
Instrument does not respond.	The instrument configuration is incorrect.	Check your LAN configuration; see the instructions on page 83 .
		Check the IP address of the instrument by opening a Command Prompt window (Start -> Programs -> Accessories -> Command Prompt) and entering the command "ipconfig /all". The IP settings of your instrument are returned.
		Ping the instrument by opening a Command Prompt window (Start -> Programs -> Accessories -> Command Prompt) and entering the command "ping address", where <i>address</i> is the IP address of your instrument. If a timeout message is returned, the IP address is incorrect. If a "no host" error message is returned, the subnet mask is incorrect. Refer to page 43 for more information on IP and subnet addresses.
		If needed, reset the instrument using the instructions on page 46 .
	The instrument is damaged.	Contact Data Translation for technical support; refer to page 122 .
Intermittent operation.	Loose connections or vibrations exist.	Check your wiring and tighten any loose connections or cushion vibration sources; see the instructions in Chapter 4 .
	The instrument is overheating.	Check environmental and ambient temperature; consult the specifications on page 140 of this manual and the documentation provided by your computer manufacturer for more information.
	Electrical noise exists.	Check your wiring and either provide better shielding or reroute unshielded wiring; see the instructions in Chapter 4 .
Data appears to be invalid.	An open connection exists.	Check your wiring and fix any open connections; see the instructions in Chapter 4 .
	A transducer is not connected to the channel being read.	Check the transducer connections; see the instructions in Chapter 4 .
	The thermocouple, RTD, or voltage input that you connected to the channel does not match the software configuration for that channel.	Check your wiring and ensure that what you specify in software matches your hardware configuration; see the instructions in Chapter 4 .
	Your instrument may need recalibration.	<p>The instrument is calibrated at the factory. Thereafter, yearly calibration is recommended. Use the Measurement Instrument Calibration Utility, described on page 23, or return your instrument to Data Translation for recalibration.</p> <p>For information on factory recalibration, contact Data Translation at 508-481-3700, ext. 1323 (if you are in the USA) or call your local distributor (if you are located outside the USA); see our web site (www.datatranslation.com) for the name and telephone number of your nearest distributor.</p>

Technical Support

Note: TEMPpoint, VOLTpoint, and MEASURpoint instruments have a 1 year warranty from the factory. If you open the instrument's enclosure, you will void this warranty.

If you have difficulty using your TEMPpoint, VOLTpoint, or MEASURpoint instrument, Data Translation's Technical Support Department is available to provide technical assistance.

To request technical support, go to our web site at <http://www.datatranslation.com> and click on the Support link.

When requesting technical support, be prepared to provide the following information:

- Your product serial number
- The hardware/software product you need help on
- The version of the MEASURpoint Software CD you are using
- Your contract number, if applicable

If you are located outside the USA, contact your local distributor; see our web site (www.datatranslation.com) for the name and telephone number of your nearest distributor.

If Your Instrument Needs Factory Service

If your TEMPpoint, VOLTpoint, or MEASURpoint instrument must be returned to Data Translation, do the following:

1. Record the instrument's serial number, and then contact the Customer Service Department at (508) 481-3700, ext. 1323 (if you are in the USA) and obtain a Return Material Authorization (RMA).

If you are located outside the USA, call your local distributor for authorization and shipping instructions; see our web site (www.datatranslation.com) for the name and telephone number of your nearest distributor. All return shipments to Data Translation must be marked with the correct RMA number to ensure proper processing.

2. Using the original packing materials, if available, package the instrument as follows:
 - Wrap the instrument in an electrically conductive plastic material. Handle with ground protection. A static discharge can destroy components on the instrument.
 - Place in a secure shipping container.
3. Return the instrument to the following address, making sure the RMA number is visible on the outside of the box.

Customer Service Dept.
Data Translation, Inc.
100 Locke Drive
Marlboro, MA 01752-1192



Specifications

Basic Instrument Specifications	126
Thermocouple Specifications	127
RTD Specifications	132
Temperature Specifications	133
Voltage Measurement Specifications	135
Isolation and Protection Specifications	137
Memory Specifications	138
Digital I/O Specifications	139
Power, Physical, and Environmental Specifications	140
Regulatory Specifications	141
Connector Specifications	142
External Power Supply Specifications	145

Note: All analog input specifications are based on the Moving Average filter type.

Basic Instrument Specifications

[Table 8](#) lists the basic instrument specifications for the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 8: Basic Instrument Specifications

Feature	Specifications
Number of channels in channel list	Up to 48 analog input channels and one digital input port
A/D converter type	High stability 24-bit Sigma-Delta

Thermocouple Specifications

[Table 9](#) lists the specifications for thermocouple channels on the DT8871, DT8871U, and DT8874 instruments.

Table 9: Thermocouple Specifications

Feature	Specifications
Thermocouple types (software-selectable)	B, E, J, K, N, R, S, T
A/D resolution	24-bits
Sample rate	10 Samples/s
Thermal disturbance channel-to-channel	None
Upscale break detection current DT8871U and DT8874: DT8871:	+10 nA +100 nA
System temperature error DT8871U and DT8874: DT8871:	See Table 10 and Table 11 on page 128 See Table 12 on page 130

System Temperature Error for the DT8871U and DT8874

Table 10 lists the typical accuracy of the DT8871U and DT8874 for each thermocouple type at several temperature points over the dynamic range of the instrument.

Table 10: Typical Thermocouple Accuracy of the DT8871U and DT8874

Input Temp.	Thermocouple Type ^a							
	J	K	T	E	S	R	B	N
–100° C	±0.17°C	±0.17°C	±0.16°C	±0.16°C	-----	-----	-----	±0.16°C
0° C	±0.15°C	±0.16°C	±0.16°C	±0.15°C	±0.20°C	±0.20°C	-----	±0.16°C
100° C	±0.18°C	±0.15°C	±0.16°C	±0.15°C	±0.18°C	±0.18°C	-----	±0.15°C
300° C	±0.15°C	±0.17°C	±0.16°C	±0.15°C	±0.18°C	±0.18°C	±0.23°C	±0.15°C
500° C	±0.15°C	±0.15°C	-----	±0.15°C	±0.18°C	±0.17°C	±0.21°C	±0.15°C
700° C	±0.15°C	±0.15°C	-----	±0.16°C	±0.18°C	±0.18°C	±0.17°C	±0.16°C
900° C	±0.15°C	±0.17°C	-----	±0.17°C	±0.18°C	±0.18°C	±0.19°C	±0.16°C
1100° C	±0.15°C	±0.16°C	-----	-----	±0.19°C	±0.18°C	±0.18°C	±0.16°C
1400° C	-----	-----	-----	-----	±0.18°C	±0.18°C	±0.17°C	-----

a. Conditions for accuracy measurements:

MEASURpoint warm-up time of 1 hour. Inclusive of typical 0.15°C CJC error. Exclusive of thermocouple errors.

Table 11 lists the maximum accuracy of the DT8871U and DT8874 for each thermocouple type at several temperature points over the dynamic range of the instrument.

Table 11: Maximum Thermocouple Accuracy of the DT8871U and DT8874

Input Temp.	Thermocouple Type ^a							
	J	K	T	E	S	R	B	N
–100° C	±0.35°C	±0.38°C	±0.39°C	±0.34°C	-----	-----	-----	±0.43°C
0° C	±0.33°C	±0.35°C	±0.35°C	±0.32°C	±0.96°C	±0.98°C	-----	±0.40°C
100° C	±0.34°C	±0.31°C	±0.34°C	±0.31°C	±0.77°C	±0.76°C	-----	±0.37°C
300° C	±0.31°C	±0.36°C	±0.32°C	±0.30°C	±0.67°C	±0.65°C	±1.52°C	±0.35°C
500° C	±0.30°C	±0.33°C	-----	±0.30°C	±0.64°C	±0.61°C	±1.02°C	±0.34°C
700° C	±0.30°C	±0.33°C	-----	±0.31°C	±0.62°C	±0.58°C	±0.80°C	±0.35°C
900° C	±0.30°C	±0.36°C	-----	±0.31°C	±0.60°C	±0.56°C	±0.72°C	±0.35°C
1100° C	±0.31°C	±0.35°C	-----	-----	±0.59°C	±0.54°C	±0.65°C	±0.35°C
1400° C	-----	-----	-----	-----	±0.57°C	±0.53°C	±0.59°C	-----

a. Conditions for accuracy measurements:

MEASURpoint warm-up time of 1 hour. Maximum accuracy inclusive of 0.25°C CJC error. Exclusive of thermocouple errors.

The histograms shown in [Figure 40](#) and [Figure 41](#) characterize the Gaussian system noise distribution for each of the available filter types on the DT8871U and DT8874. Note that converting μV error to temperature error depends on thermocouple type. For example, a K thermocouple changes approximately $39 \mu\text{V}$ per degrees C; therefore, a noise level of $0.1 \mu\text{V}$ adds less than 0.003°C error ($0.1 \mu\text{V} / 39 \mu\text{V}$) for a type K thermocouple.

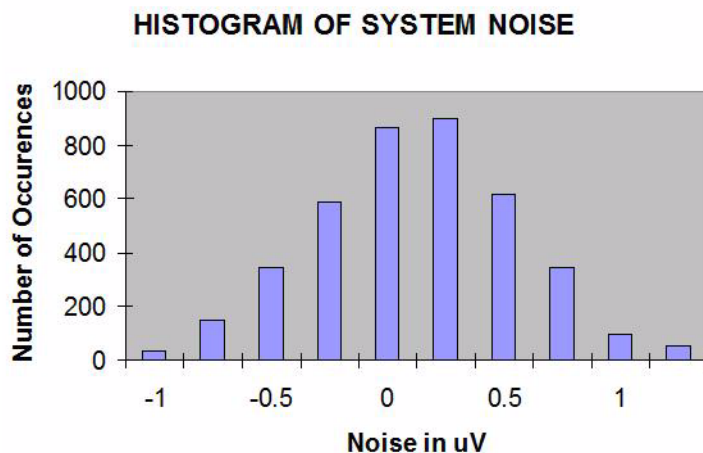


Figure 40: System Noise on the DT8871U and DT8874 Using No Software Filter (Raw Filter)

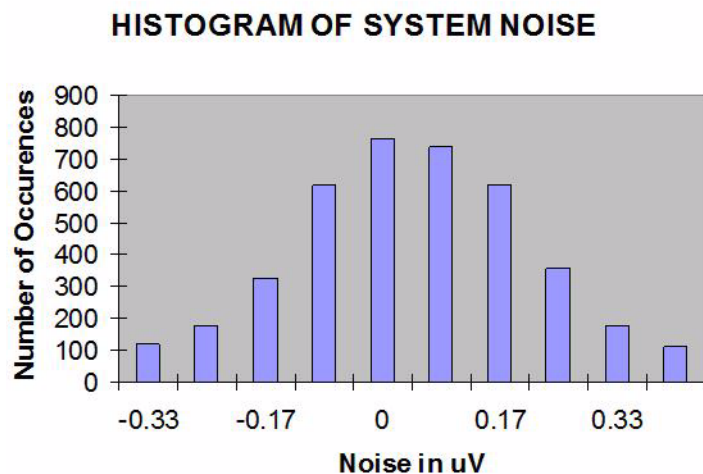


Figure 41: System Noise on the DT8871U and DT8874 Using the Moving Average Filter

System Temperature Error for the DT8871

Table 12 lists the typical accuracy of the DT8871 for each thermocouple type at several temperature points over the dynamic range of the instrument.

Table 12: Typical Thermocouple Accuracy of the DT8871

Input Temperature	Thermocouple Type ^a							
	J	K	T	E	S	R	B	N
-100° C	±0.33°C	±0.37°C	±0.38°C	±0.31°C	-----	-----	-----	±0.44°C
0° C	±0.30°C	±0.33°C	±0.33°C	±0.28°C	±1.12°C	±1.14°C	-----	±0.39°C
100° C	±0.31°C	±0.29°C	±0.31°C	±0.27°C	±0.88°C	±0.86°C	-----	±0.35°C
300° C	±0.29°C	±0.34°C	±0.29°C	±0.26°C	±0.75°C	±0.71°C	±1.84°C	±0.33°C
500° C	±0.28°C	±0.31°C	-----	±0.26°C	±0.71°C	±0.66°C	±1.20°C	±0.33°C
700° C	±0.27°C	±0.30°C	-----	±0.27°C	±0.68°C	±0.63°C	±0.92°C	±0.33°C
900° C	±0.27°C	±0.34°C	-----	±0.28°C	±0.66°C	±0.60°C	±0.80°C	±0.33°C
1100° C	±0.28°C	±0.34°C	-----	-----	±0.64°C	±0.58°C	±0.71°C	±0.34°C
1400° C	-----	-----	-----	-----	±0.62°C	±0.56°C	±0.64°C	-----

a. **Conditions for accuracy measurements:**

MEASURpoint warm-up time of 1 hour. Inclusive of typical 0.2°C CJC error (maximum CJC error is 0.3°C).

Exclusive of thermocouple errors.

The histograms shown in Figure 42 and Figure 43 characterize the Gaussian system noise distribution for each of the available filter types on the DT8871. Note that converting μV error to temperature error depends on thermocouple type. For example, a K thermocouple changes approximately 39 μV per degrees C; therefore, a noise level of 10 μV adds 0.3° C error (10 μV / 39 μV) for a type K thermocouple.

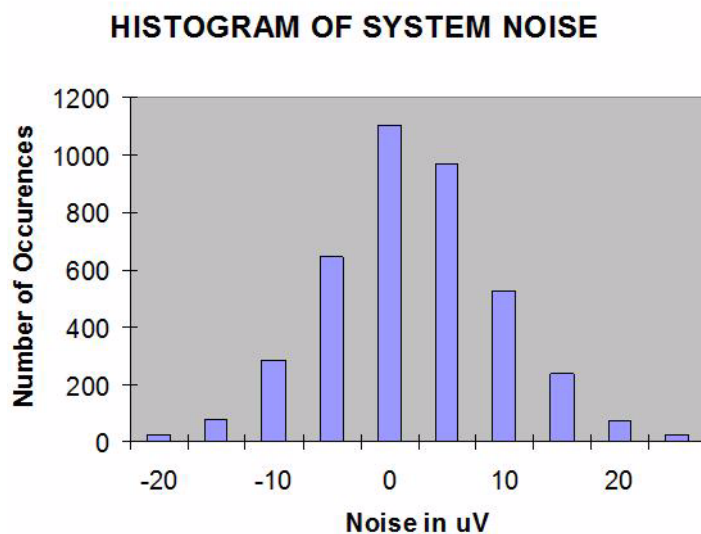


Figure 42: System Noise on the DT8871 Using No Software Filter (Raw Filter)

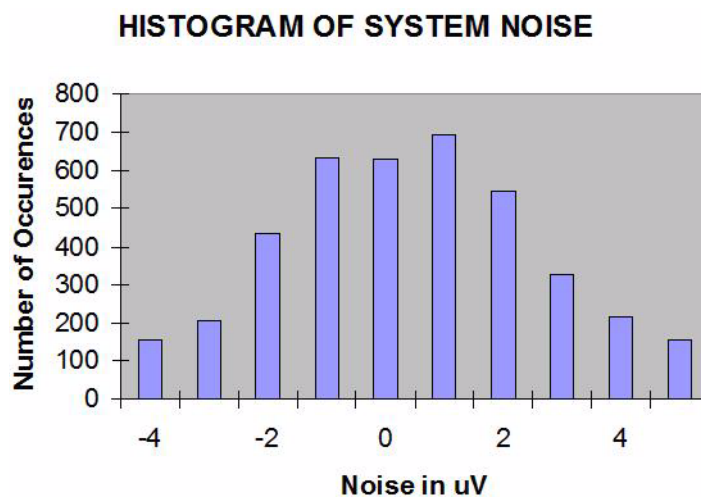


Figure 43: System Noise on the DT8871 Using the Moving Average Filter

RTD Specifications

[Table 13](#) lists the specifications for RTD channels on the DT8872 and DT8874 instruments.

Table 13: RTD Specifications

Feature	Specifications
RTD types (software-selectable)	Platinum 100 Ω , 500 Ω , and 1000 Ω
A/D converter resolution	24-bits
Sample rate	10 Samples/s
Supported temperature range	-200 to +850° C (European standard)
Current source Absolute current:	425 μ A, \pm 0.5% at 25° C (calibrated in firmware)
Drift:	10 ppm/° C maximum
Drift per year:	\pm 100 ppm typical
Internal reference	+1.250 \pm 0.002 V
Thermal disturbance channel-to-channel	None
Supported RTD alpha curves	See Table 14

[Table 14](#) lists the RTD alpha curves that are supported by RTD channels.

Table 14: Supported RTD Alpha Curves

Alpha (Average Temperature Coefficient of Resistance (/°C))	Nominal Resistance at 0° C	Organization	Standard
0.00385	100 Ω	British Standard	BS1904: 1984
		Deutschen Institut fur Normung	DIN 43760: 1980
0.00392	98.129 Ω	Scientific Appartus Manufacturers of America	SAMA RC-4-1966

Temperature Specifications

Table 15 lists the temperature specifications for thermocouple channels on the DT8871, DT8871U, and DT8874 instruments.

Table 15: Temperature Stability Specifications for Thermocouple Channels

Feature	Specifications
Additional error due to ambient temperature change ^a J-type thermocouple: K-type thermocouple: B-type thermocouple: E-type thermocouple: N-type thermocouple: R-type thermocouple: S-type thermocouple: T-type thermocouple:	0.010° C per degree ambient change, typical 0.011° C per degree ambient change, typical 0.014° C per degree ambient change, typical 0.010° C per degree ambient change, typical 0.011° C per degree ambient change, typical 0.012° C per degree ambient change, typical 0.012° C per degree ambient change, typical 0.010° C per degree ambient change, typical
MEASURpoint warm-up time	1 hour
CJC Error (maximum): Accuracy: Drift per year:	±0.25° C Corrected in ROM @ 25° C to zero error ±50 ppm typical

a. Includes the A/D reference, gain, and CJC errors.

Table 16 lists the temperature specifications for RTD channels on the DT8872 and DT8874 instruments.

Table 16: Temperature Specifications for RTD Channels

Feature	Specifications
System temperature error ^a	
Pt100:	Offset (typical): $\pm 0.03^{\circ}\text{C}$ Offset (maximum): $\pm 0.30^{\circ}\text{C}$ RMS noise: 0.03°C Temperature resolution: 0.002°C Maximum system error: $\pm 0.80^{\circ}\text{C}^b$
Pt500:	Offset (typical): $\pm 0.007^{\circ}\text{C}$ Offset (maximum): $\pm 0.07^{\circ}\text{C}$ RMS noise: 0.007°C Temperature resolution: 0.0004°C Maximum system error: $\pm 0.16^{\circ}\text{C}^b$
Pt1000:	Offset (typical): $\pm 0.003^{\circ}\text{C}$ Offset (maximum): $\pm 0.03^{\circ}\text{C}$ RMS noise: 0.003°C Temperature resolution: 0.0002°C Maximum system error: $\pm 0.08^{\circ}\text{C}^b$
Warm-up time	
MEASURpoint:	1 hour
RTD sensors and external calibration resistors:	1 minute

a. Includes the A/D reference and gain errors.

b. Includes a maximum linearity error of 10 ppm and a calibration setup error of 10 ppm. Users must be aware that subtle resistor value tolerances and self-heating of the external calibration resistors contribute calibration setup errors.

Voltage Measurement Specifications

Table 17 lists the voltage measurement specifications for the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 17: Voltage Measurement Specifications

Feature	Specifications
Input voltage range (no compensation) DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$\pm 0.0750\text{ V}$ $\pm 1.2500\text{ V}$ $\pm 1.2500\text{ V}$ $\pm 10\text{ V}$, $\pm 100\text{ V}$, or $\pm 400\text{ V}^a$
A/D converter resolution	24-bits
Voltage resolution DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$0.015\text{ }\mu\text{V}$ $0.3\text{ }\mu\text{V}$ $0.3\text{ }\mu\text{V}$ $1.2\text{ }\mu\text{V}$ for the $\pm 10\text{ V}$ input range; $12\text{ }\mu\text{V}$ for the $\pm 100\text{ V}$ input range; $48\text{ }\mu\text{V}$ for the $\pm 400\text{ V}$ input range
Sample rate	10 Samples/s
Input impedance DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$5\text{ M}\Omega$ typical $5\text{ M}\Omega$ typical $> 100\text{ M}\Omega$ $> 1\text{ M}\Omega$ (Power ON or OFF)
Input common mode voltage	$\pm 500\text{ V}$
Common mode rejection @ 60 Hz and 50 Hz	$> 150\text{ dB}$
Coupling	DC
System linearity DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$\pm 0.005\%$ $\pm 0.005\%$ $\pm 0.001\%$ $\pm 0.001\%$
System gain error (includes all noise sources; gain = 1) DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$\pm 0.00075\%$ of full-scale range $\pm 0.00075\%$ of full-scale range $\pm 0.00075\%$ of full-scale range $\pm 0.01\%$ of reading
System zero error (includes all noise sources; no filter) DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$0.25\text{ }\mu\text{V RMS}$ $5\text{ }\mu\text{V RMS}$ $\pm 12\text{ }\mu\text{V}$ $\pm 300\text{ }\mu\text{V}$ for the $\pm 10\text{ V}$ input range; $\pm 2\text{ mV}$ for the $\pm 100\text{ V}$ input range; $\pm 8\text{ mV}$ for the $\pm 400\text{ V}$ input range

Table 17: Voltage Measurement Specifications (cont.)

Feature	Specifications
System drift error, zero DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$\pm 0.02 \mu\text{V}/^\circ\text{C}$ typical $\pm 0.02 \mu\text{V}/^\circ\text{C}$ typical $\pm 0.10 \mu\text{V}/^\circ\text{C}$ $\pm 0.5 \mu\text{V}/^\circ\text{C}$ for the $\pm 10 \text{ V}$ input range; $\pm 5 \mu\text{V}/^\circ\text{C}$ for the $\pm 100 \text{ V}$ input range; $\pm 20 \mu\text{V}/^\circ\text{C}$ for the $\pm 400 \text{ V}$ input range
System drift error, gain DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$\pm 4 \text{ ppm}/^\circ\text{C}$ $\pm 4 \text{ ppm}/^\circ\text{C}$ $\pm 10 \text{ ppm}/^\circ\text{C}$ $\pm 15 \text{ ppm}/^\circ\text{C}$
A/D reference Drift: Drift per year:	$\pm 8 \text{ ppm}/^\circ\text{C}$ maximum $\pm 100 \text{ ppm}$ typical
Full-scale long-term stability DT8871U and DT8874 thermocouple channels: DT8871: DT8872 and DT8874 RTD channels: DT8873 and DT8874 voltage channels:	$\pm 100 \text{ ppm/year}$ typical $\pm 100 \text{ ppm/year}$ typical $\pm 0.05^\circ\text{C}$ per year @ 0°C ($\pm 0.27^\circ\text{C}$ per year @ full-scale temperature) $\pm 100 \text{ ppm/year}$ typical
MEASURpoint warm-up time	1 hour

a. You configure the input range for each channel using software.

Isolation and Protection Specifications

Table 18 lists the isolation and protection specifications for the analog input subsystem on the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 18: Isolation and Protection Specifications

Feature	Specifications
DT8871U, DT8871, and DT8874 Thermocouple Channels Overvoltage Protection (Power On/Off) Pin 2 referenced to pin 3: Pin 2 and 3 referenced to earth ground:	$\pm 40\text{ V}$ $\pm 500\text{ V}$
DT8872 and DT8874 RTD Channels Overvoltage Protection (Power On/Off) Pin 1 referenced to pin 4: Pin 2 referenced to pin 4: Pin 3 referenced to pin 4: Pin 1, 2, or 3 referenced to earth ground:	$\pm 4\text{ V}^a$ $\pm 40\text{ V}$ $\pm 20\text{ V}$ $\pm 500\text{ V}$
DT8873 and DT8874 Voltage Input Channels Overvoltage Protection (Power On/Off) Pin 1 referenced to pin 3: Pins 1 and 3 referenced to earth ground:	$\pm 600\text{ V}$ $\pm 500\text{ V}$
ESD protection per standard EN6100-4-2:2009 (see page 141 for more) Arc: Contact:	8 kV 4 kV
Isolation voltage to the host computer	$\pm 500\text{ V}$
Channel-to-channel isolation	$\pm 500\text{ V}$

- a. Determined by internal protection diodes to the power supply. No damage occurs if current is limited to $\pm 10\text{ mA}$.

Memory Specifications

Table 19 lists the memory specifications for the analog input subsystem on the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 19: Memory Specifications

Feature	Specifications
Data memory onboard	4 MByte
For Data logger built in, maximum time before old data is overwritten ^a	
48 channels @ 10 Hz:	30 minutes
48 channels @ 1 Hz:	5 hours
48 channels @ 0.1 Hz:	50 hours

a. Assumes limit detection is off for all channels, and for thermocouple channels, assumes CJC data is not collected. If power fails, all temperature data in the system is lost. The channel input type and filter settings are still available after power on, but the channel and digital I/O labels and channel limits are lost.

Digital I/O Specifications

Table 20 lists the specifications for the digital input (DIN) and digital output (DOUT) subsystems on the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 20: Digital I/O Specifications

Feature	Specifications
Number of digital I/O lines	16 (8 In, 8 Out)
Number of ports	2, 8-bit (1 In, 1 Out)
Inputs Input type: High input voltage: Low input voltage: High input current: Low input current: Termination	DC +3 to +28 V < +1.5 V 2.2 k Ω resistor to 1.2 V 2.2 k Ω resistor to 1.2 V Series 2.2 k Ω
Outputs Output type: Output driver: High output: Low output: Breakdown voltage: Contact impedance:	Solid-state relay CMOS ± 30 V 0.4 V @ 400 mA ± 60 V 1 Ω
Isolation voltage To computer ground: Channel to channel	± 500 V ± 250 V ^a

- a. Determined by the pin spacing in the 37-pin digital connector. For greater channel-to-channel isolation, use every other digital I/O line; using every other digital I/O line allows ± 500 V isolation channel-to-channel.

Power, Physical, and Environmental Specifications

Table 21 lists the power, physical, and environmental specifications for the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 21: Power, Physical, and Environmental Specifications

Feature	Specifications
External power requirements	+5 V \pm 0.25V @ 2 A (0.9 mA typical)
Physical Dimensions of enclosure: Weight:	88.14 (H) x 212.85 mm (W) x 211.43 mm (D) 1704 g
Environmental Operating temperature range: Storage temperature range: Relative humidity: Altitude:	0° C to 55° C –25° C to 85° C to 95%, noncondensing up to 10,000 feet

Regulatory Specifications

The DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments are CE-compliant. [Table 22](#) lists the regulatory specifications for the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 22: Regulatory Specifications

Feature	Specifications
Emissions (EMI)	FCC Part 15, Class A EN55011:2007 (Based on CISPR-11, 2003/A2, 2006)
Immunity	EN61326-1:2006 Electrical Equipment for Measurement, Control, and Laboratory Use <u>EMC Requirements</u> EN61000-4-2:2009 Electrostatic Discharge (ESD) 4 kV contact discharge, 8 kV air discharge, 4 kV horizontal and vertical coupling planes EN61000-4-3:2006 Radiated electromagnetic fields, 3 V/m, 80 to 1000 MHz; 3 V/m, 1.4 GHz to 2 GHz; 1 V/m, 2 GHz to 2.7 GHz EN61000-4-4:2004 Electrical Fast Transient/Burst (EFT) 1 kV on data cables EN61000-4-6:2009 Conducted immunity requirements, 3 Vrms on data cables 150 kHz to 80 MHz
RoHS (EU Directive 2002/95/EG)	Compliant (as of July 1st, 2006)

Connector Specifications

This section lists the specifications for the following connector types:

- Thermocouple connectors
- RTD connectors
- Voltage connectors
- Ethernet connector

Thermocouple Connectors

[Table 23](#) lists the specifications for the thermocouple connectors used on the DT8871, DT8871U, and DT8874 instruments.

Table 23: Thermocouple Connector Specifications

Feature	Specifications
Thermocouple jacks	Omega plugs SMPW-U-M – For voltage measurements SMPW-J-M – For J thermocouple type SMPW-K-M – For K thermocouple type SMPW-T-M – For T thermocouple type SMPW-E-M – For E thermocouple type SMPW-S-M – For S thermocouple type SMPW-R-M – For R thermocouple type SMPW-B-M – For B thermocouple type SMPW-N-M – For N thermocouple type
Thermocouple connector	Omega part# PCC-SMP-U-100-R-CE-ROHS

CAUTION:

When connecting inputs to the thermocouple connectors on a MEASURpoint or TEMPpoint instrument, it is highly recommended that you use only original Omega thermocouple plugs (SMPW), as connectors from other suppliers may not be equivalent mechanically.

If you use connectors from suppliers other than Omega, there is a risk that you may mechanically damage the thermocouple connectors on the MEASURpoint or TEMPpoint instrument.

RTD Connectors

[Table 24](#) lists the specifications for the RTD connectors used on the DT8872 and DT8874 instruments.

Table 24: RTD Connector Specifications

Feature	Specifications
4-Position screw terminal block header	Phoenix Contact 1803293
4-Position screw terminal block plug	Phoenix Contact 1803594

Voltage Connectors

[Table 25](#) lists the specifications for the voltage connectors used on the DT8873 and DT8874 instruments.

Table 25: Voltage Connector Specifications

Feature	Specifications
4-Position screw terminal block header	Phoenix Contact 1803293
4-Position screw terminal block plug	Phoenix Contact 1803594

Ethernet (RJ45) Connector

The Ethernet (RJ45) connector used on the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments is shown in [Figure 44](#).

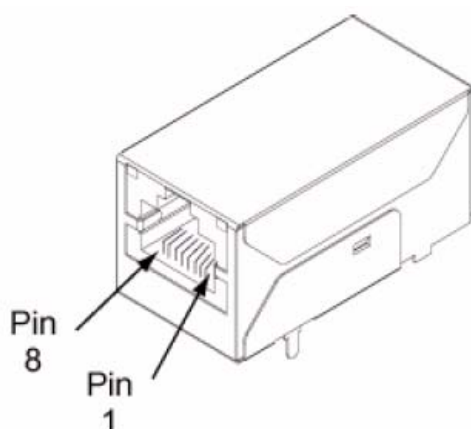


Figure 44: Ethernet (RJ45) Connector

The pin assignments of this connector are described in [Table 26](#):

Table 26: Ethernet Connector Pin Assignments

Pin	Signal Name	Description
1	TXD+	Transmit Data+
2	TXD–	Transmit Data–
3	RXD+	Receive Data+
4	EPWR+	Power from Switch+
5	EPWR+	Power from Switch+
6	RXD–	Receive Data–
7	EPWR–	Power from Switch–
8	EPWR–	Power from Switch–

Note: DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments do not support Auto-MDIX.

External Power Supply Specifications

Table 27 lists the specifications for the EP361 +5 V external power supply that is used with the DT8871, DT8871U, DT8872, DT8873, and DT8874 instruments.

Table 27: External Power Supply (EP361) Specifications

Feature	Specifications
Type	Total Power medical power supply (TPES22-050400 or TPEMG24-S050400-7)
Input voltage	Typical 90 - 264 V AC
Input current TPES22-050400	Typical 0.38 A at 115 V AC, 0.15 A at 230 V AC
TPEMG24-S050400-7	Typical 0.347 A at 115 V AC, 0.215 A at 230 V AC
Frequency	47 to 63 Hz
Inrush current TPES22-050400	35 A at 230 V AC typical or less than 30 A by adding thermistor
TPEMG24-S050400-7	6.274 A RMS at 230 V AC
Output voltage	5 V DC
Output current	4.0 A
Output wattage TPES22-050400	Typical 22 - 24 W
TPEMG24-S050400-7	Typical 20 - 24 W
Noise and ripple	1% peak to peak
Regulatory specifications TPES22-050400	UL, N, CE, FCC Class B
TPEMG24-S050400-7	UL, ITE, CE, FCC Class B, Energy Star compliant



Connector Pin Assignments

Table 28 lists the pin assignments for the 37-pin digital I/O connector on TEMPpoint, VOLTpoint, and MEASURpoint instruments.

Table 28: Digital I/O Connector Pin Assignments

Pin	Description	Pin	Description
1	Digital Input 0+	–	
2	Digital Input 1+	20	Digital Input 0–
3	Digital Input 2+	21	Digital Input 1–
4	Digital Input 3+	22	Digital Input 2–
5	Digital Input 4+	23	Digital Input 3–
6	Digital Input 5+	24	Digital Input 4–
7	Digital Input 6+	25	Digital Input 5–
8	Digital Input 7+	26	Digital Input 6–
9	Not Connected	27	Digital Input 7–
10	Digital Output 0	28	Not Connected
11	Digital Output 1	29	Digital Output 0
12	Digital Output 2	30	Digital Output 1
13	Digital Output 3	31	Digital Output 2
14	Digital Output 4	32	Digital Output 3
15	Digital Output 5	33	Digital Output 4
16	Digital Output 6	34	Digital Output 5
17	Digital Output 7	35	Digital Output 6
18	Not Connected	36	Digital Output 7
19	Not Connected	37	Not Connected



Configuring Network Settings on Your PC


Configuring the PC to Use Auto-IP	150
Specifying a Static IP Address for your Instrument	153
Reconfiguring the PC to Use a Static IP Address	154

Configuring the PC to Use Auto-IP


To set up the a TEMPpoint, VOLTpoint, or MEASURpoint instrument when the LAN does not support a DHCP server and your PC is configured to use a static IP address, you must temporarily reconfigure the PC to use Auto-IP by performing the following steps:

Note: This procedure may differ slightly depending on your computer and the version of Windows you are using. Windows XP instructions are shown here.


1. From the Windows Start menu, click **Settings**, and then click **Network Connections**.
2. Right-click **Local Area Connection**, and select **Properties**.

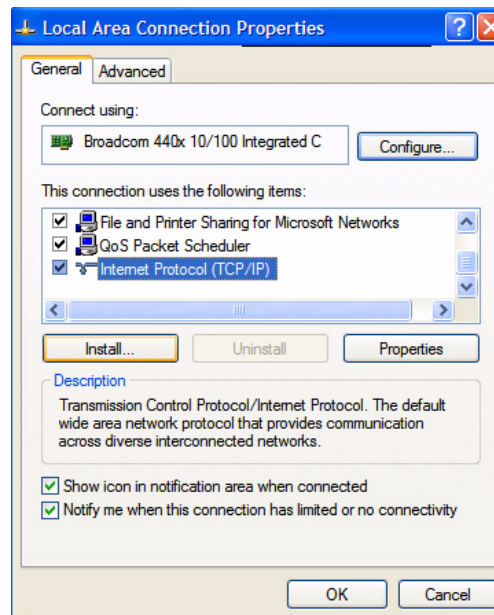


3. In the General tab window, double-click **Internet protocol (TCP/IP)**. (If a TCP/IP selection is not listed, click **Install**, select **Protocol**, click **Add**, select the TCP/IP protocol, and click **Install**, and repeat step 3).

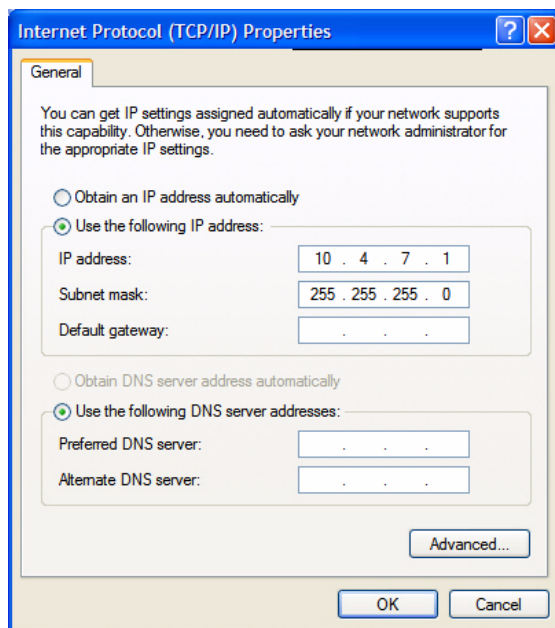

4. **IMPORTANT:** Write down the IP address and subnet mask that is displayed! You will need this information later.
5. Select **Obtain an IP address automatically**, and then click **OK**.

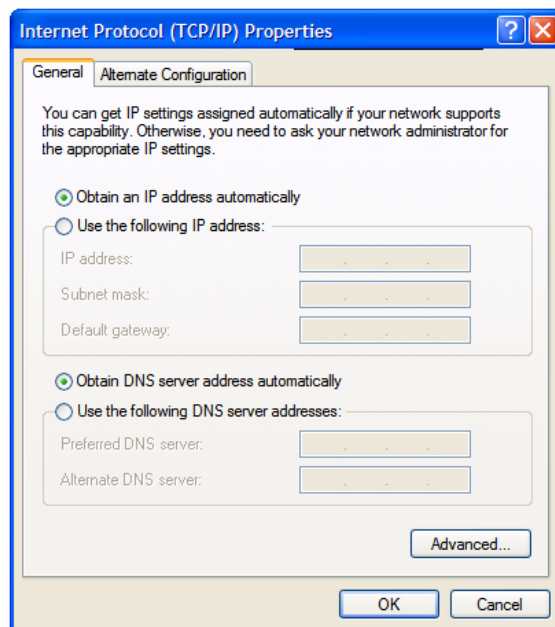

6. Select the **Alternate Configuration** tab, and ensure that **Automatic private IP address** is selected.

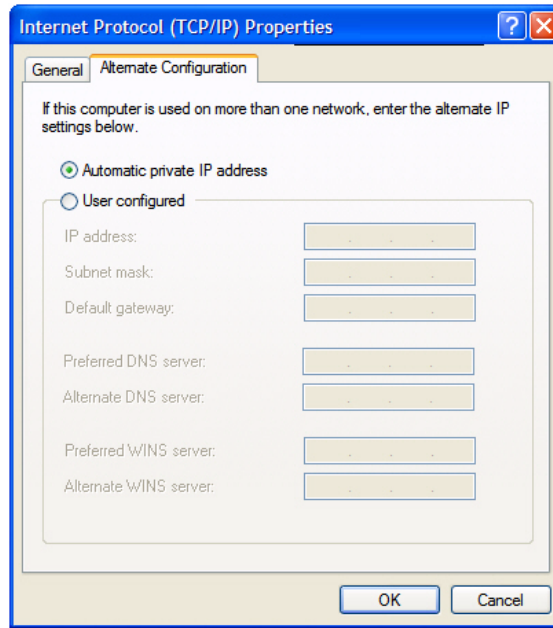

7. Renew the IP address of the computer. From the Windows Start menu, click **Settings** -> **Network Connections** -> **Local Area Connection** -> **Support** -> **Repair**.

Or, if you prefer to do this from the command prompt window, click **Run** from the Windows Start menu, enter **cmd**, and click **OK** to bring up the command prompt window. Then, from the command prompt window, enter:


```
ipconfig /renew  
ipconfig /all
```

renews the IP address
checks the IP address

Specifying a Static IP Address for your Instrument

To specify a static IP address for your TEMPpoint, VOLTpoint, or MEASURpoint instrument, use the LAN Configuration page of the web interface as follows:

1. From the LAN Configuration page, click **Modify**.
2. Specify the username as **sysadmin**, and specify the password (the default password is **user**). You can change the password, if you desire.
3. Uncheck the checkbox called **Automatic private IP address enabled**.
4. Click **Static**.
5. Specify a static IP address for the instrument, so that it will be on the same subnet as your PC:

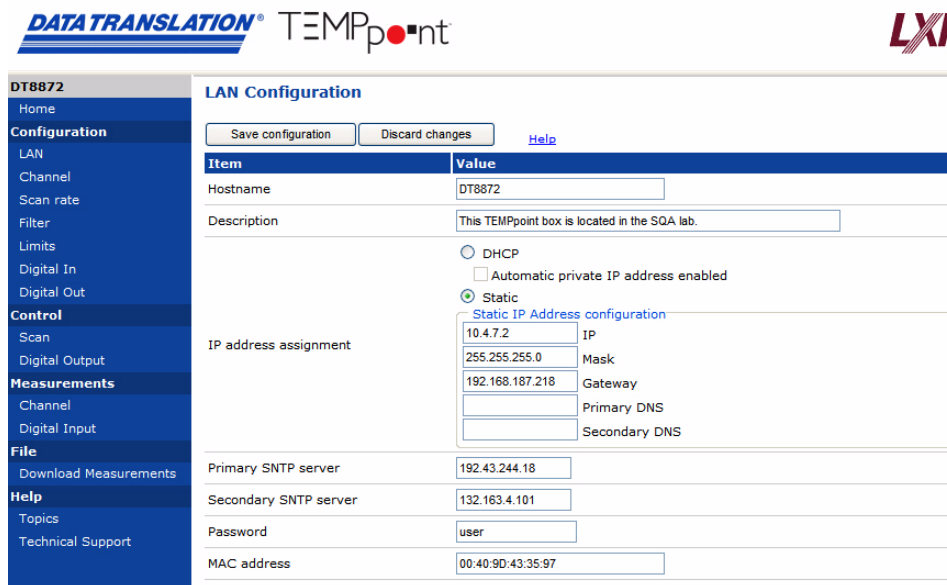

DATA TRANSLATION TEMPpoint **LXI**

DT8872

LAN Configuration

Save configuration Discard changes Help


Item	Value
Hostname	DT8872
Description	This TEMPpoint box is located in the SQA lab.
IP address assignment	<p><input type="radio"/> DHCP</p> <p><input type="checkbox"/> Automatic private IP address enabled</p> <p><input checked="" type="radio"/> Static</p> <p>Static IP Address configuration</p> <p>10.4.7.2 IP</p> <p>255.255.255.0 Mask</p> <p>192.168.187.218 Gateway</p> <p>Primary DNS</p> <p>Secondary DNS</p>
Primary SNTP server	192.43.244.18
Secondary SNTP server	132.163.4.101
Password	user
MAC address	00:40:9D:43:35:97

Note: You need a Simple Network Time Protocol (SNTP) time server on the LAN; otherwise, you need to provide a gateway. See your network administrator for more details.

Reconfiguring the PC to Use a Static IP Address

After you have set up your instrument, you can reconfigure your PC to use a static IP address using this procedure:

1. From the Windows Start menu, click **Settings**, and then click **Network Connections**.
2. Right-click **Local Area Connection**, and select **Properties**.
3. In the General tab window, double-click **Internet protocol (TCP/IP)**.
4. Select **Use the following IP address**;, specify the static IP address and subnet mask that was initially assigned to the PC (see [page 150](#)), and click **OK**.

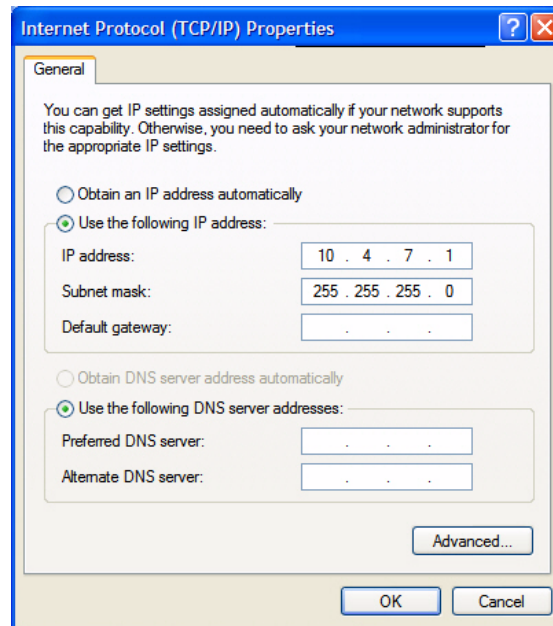

5. Renew the IP address of the computer. From the Windows Start menu, click **Settings** -> **Network Connections** -> **Local Area Connection** -> **Support** -> **Repair**.

Or, if you prefer to do this from the command prompt window, click **Run** from the Windows Start menu, enter **cmd**, and click **OK** to bring up the command prompt window. Then, from the command prompt window, enter:

```
ipconfig /renew  
ipconfig /all
```

renews the IP address
checks the IP address



About ISO-Channel Technology

ISO-Channel Technology.....	156
Why ISO-Channel Technology is Your Best Return On Investment.....	157
Floating Signal Inputs Offer New Application Advantages	163

ISO-Channel Technology

All TEMPpoint, VOLTpoint, and MEASURpoint products use ISO-Channel™ technology to eliminate common mode noise and ground loop problems.

This appendix includes two white papers that describe the benefits of using ISO-Channel technology.

Why ISO-Channel Technology is Your Best Return on Investment


When connecting signal sources to an instrument, it is important to eliminate the sources of error that can contribute to inaccuracies in your measurements. In most measurement instruments, this burden is on the customer. Instruments that use ISO-Channel technology, however, solve this problem for you – saving you tremendous setup and debug time and reducing costly grounding problems when connecting signals.

In today's economy, we understand that every equipment decision needs to make good fiscal sense. This section describes why instruments with ISO-Channel technology offer you the best return on investment.

Understanding Ground Loops

When measuring signals, users often assume that the grounds of their signals and their measurement system are at the same potential. However, these ground potentials can differ by hundreds of millivolts.

If the difference in ground potential is large enough, current flows between the signal and your measurement system; this is called a ground loop (see [Figure 45](#)). Ground loops contribute noise that can greatly affect the accuracy of your measurements, especially when you are trying to measure low level signals precisely. Ground loop problems are the most common source of error in all measurements! Eliminating these errors, therefore, is critical when taking high accuracy measurements.

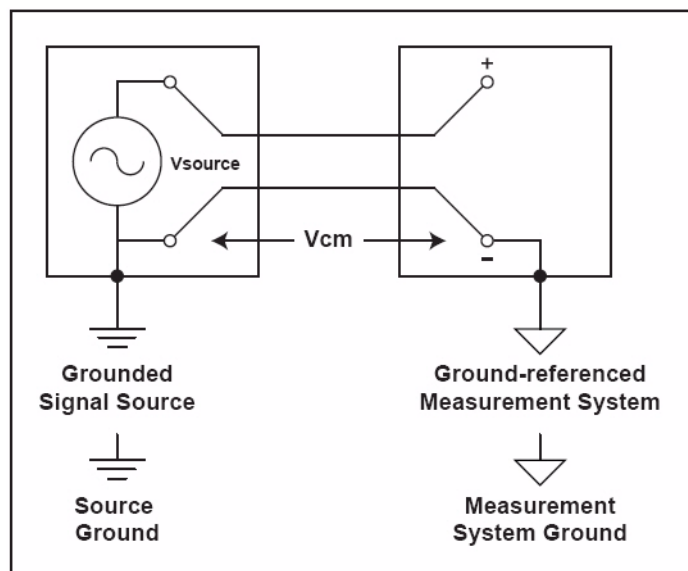

When a ground loop exists, the measured voltage, V_{out} , is the sum of the signal voltage, V_{source} , and the ground potential difference, V_{cm} , which exists between the signal source ground and the measurement system ground. These errors often appear as transients or periodic signals in the measurement. For example, if a ground loop is formed with 50 Hz or 60 Hz AC power lines, the unwanted AC signal appears as a periodic voltage error in the measurement.

Figure 45: Measurement System with a Ground Loop

ISO-Channel Eliminates Ground Loops and Increases Common-Mode Rejection

ISO-Channel technology eliminates ground loop problems by using a **differential, isolated, floating front-end**. As you can see in [Figure 46](#), a floating voltage signal is not referenced to system ground.

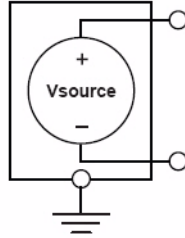


Figure 46: Floating Signals

To measure floating signal sources, ISO-Channel technology uses differential analog input signals, a 24-bit Delta-Sigma A/D converter for each channel, and channel-to-channel isolation, as shown in [Figure 47](#).

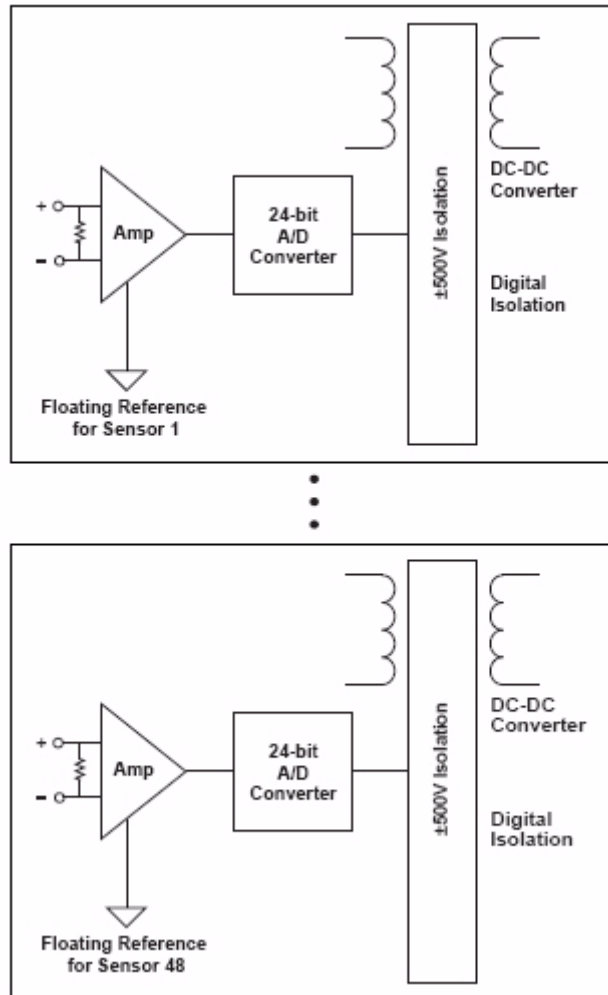


Figure 47: ISO-Channel Technology

Floating, Differential Signals

ISO-Channel technology implements a virtually ideal differential measurement system that reads only the potential difference between the positive and negative terminals of the amplifier. For each channel, the differential signals are isolated in that they are referenced to a ground reference point that is not connected to earth ground. Ground loop problems are eliminated by ensuring that only one ground reference is used for each channel in the measurement system. The signal sources are isolated from each other and from the measurement instrument.

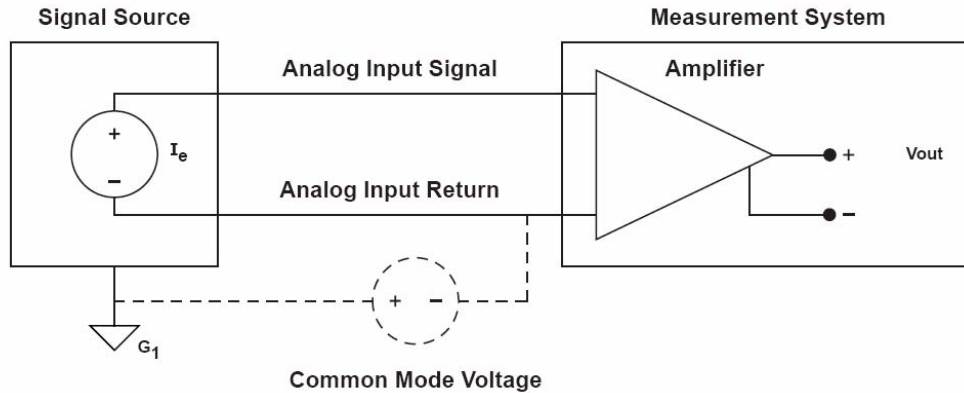


Figure 48: Differential Signals and Common-Mode Voltage

When the measurement instrument and signal source are at different ground potentials, the difference in potential is called common-mode voltage. The measurement instrument cannot discern between the signal and the common-mode voltage believing that the sum of these voltages is the actual signal. Of course, the common-mode potential is simply an error.

ISO-Channel technology provides common-mode rejection of 150 dB, which contributes an almost imperceptible error (33.5 million to 1) to V_{out} . Compare this to traditional data acquisition measurement instruments, which typically provide only 80 dB of common-mode rejection and therefore, contribute much more error on the order of 1 part per 10,000.

Simultaneous Architecture

Many measurement instruments on the market today provide multiplexed architectures, where one A/D is used to measure multiple channels. In this kind of architecture, if one channel goes down, all channels go down.

ISO-Channel technology, on the other hand, uses a simultaneous architecture, where each channel has its own dedicated 24-bit Delta-Sigma A/D, as shown in [Figure 49](#).

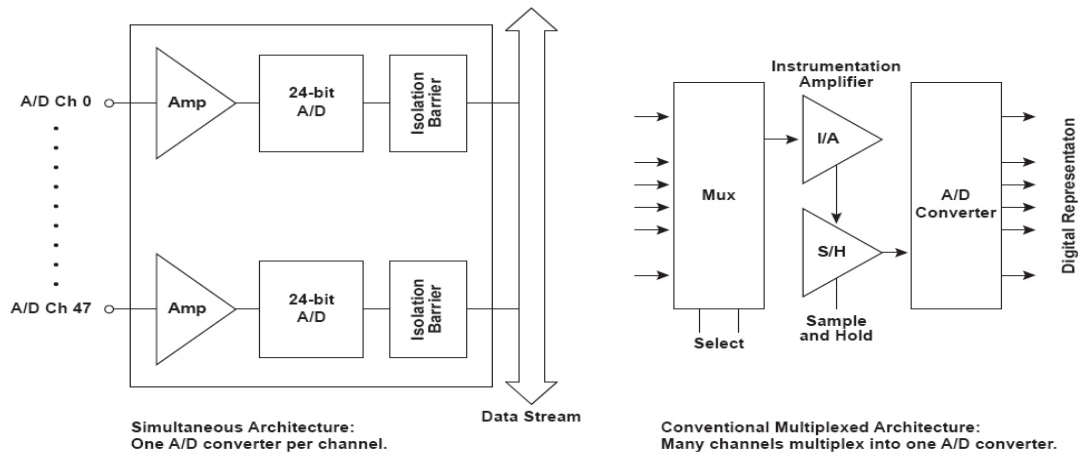


Figure 49: Simultaneous vs. Multiplexed Architectures

Channel-to-Channel Isolation

Besides differential inputs, floating channels, and a simultaneous architecture, ISO-Channel technology provides channel-to-channel isolation, not just isolation from the analog front-end to the computer ground. With this kind of isolation, the channels are individually isolated from each other and from other system components.

Typically, instrument manufacturers have used relays, isolation amplifiers, or optical isolation to provide channel-to-channel isolation. These methods have the following advantages and limitations:

- Relays – This technology provides good galvanic separation and can provide good accuracy and thermal properties, but relays are slow as they operate on one channel at a time (10 cycles/s), wear out over time, and are sensitive to magnetic fields. If one relay sticks, staying closed, the entire system fails!
- Isolation amplifiers – Isolation amplifiers are used in multiplexed architectures. While they are solid-state, they are expensive, not as accurate, require more power, and generate more noise and heat than other solutions.
- Optical isolation - Optical isolation is good in digital isolation systems but causes accuracy problems in analog isolation systems. It is also subject to long-term drift and requires considerably more power.

With ISO-Channel technology, the A/D is on the sensor side and has its own custom DC/DC converter. Then, optical or transformer isolation is used to transfer the A/D output data (the sensor data) **digitally**. And, due to the simultaneous architecture of ISO-Channel technology, all data is transferred in parallel.

Summary

ISO-Channel technology offers built in system redundancy to protect your investment - if one channel fails, the remaining channels are completely unaffected! Instruments with ISO-Channel technology also adapt to the sensors that they are connected to, allowing a different ground reference for each signal without introducing errors! For these key reasons, ISO-Channel technology protects against problems in the field, and thereby, reduces costs – what a great return on your investment.

Floating Signal Inputs Offer New Application Advantages

Precision measurement systems are often limited in that all inputs are connected to a single ground. Typically, multiplexer input configurations are set up this way, since all signal inputs are connected to the same return. Even differential input configurations use the same ground reference. The result is that accuracy and flexibility for accurate measurements can be severely compromised when noise or common mode voltage is present (see [Figure 50](#)).

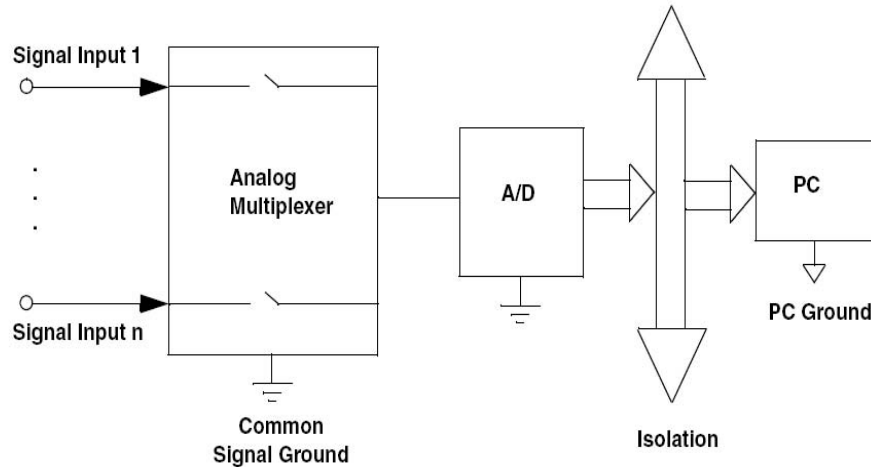


Figure 50: In multiplexed systems, all inputs are connected to a signal ground, which can cause errors when noise or common mode voltage is present.

Crosstalk from one input signal can easily be reflected onto another input. The design movement to an A/D per channel can help this problem. But that is not sufficient in many cases (see [Figure 51](#)).

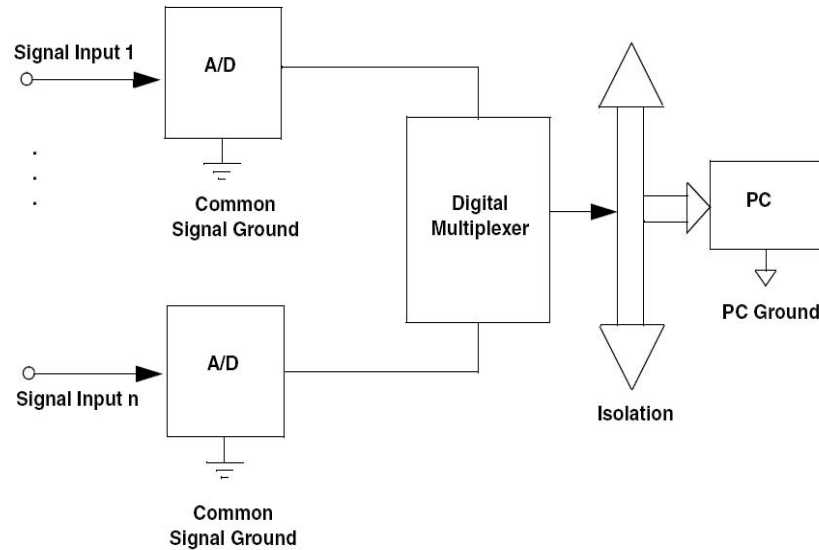


Figure 51: Even when using an A/D per channel, noise can contribute errors to your measurement results.

To minimize noise and ground loops, some newer systems offer isolation between the input signal ground reference and the computer ground. This effectively separates the computer ground from the measurement portion of the system. But still, there is no isolation between input sensor channels, which is a common source of error and frustration for user applications. Why?

The assumption is made that all signal sources have the same exact ground reference. After all...ground is ground...isn't it? Often this is not the case. For example, thermocouples for measuring temperature may be dispersed widely throughout an industrial setting, such as in the manufacture of air frames or in curing ovens. Grounds for these sensors may differ by several volts or even hundreds of volts. The resulting common mode voltage causes current to flow in the signal path, producing serious errors, which are very hard to diagnose and correct.

Isolating Each Input

Oftentimes it is NOT apparent that ground references from various sensors such as thermocouples, RTDs, strain gages, etc., are at different voltage potentials. Factors that can contribute to these ground differences are extensive wiring from long runs, crosstalk from motors or generators, or high source impedance from the signal source. Without recognizing this extraneous voltage, the measurement system "sees" this noise or common mode voltage as the actual signal. These unwanted noise sources lead to measurement errors (see [Figure 52](#)).

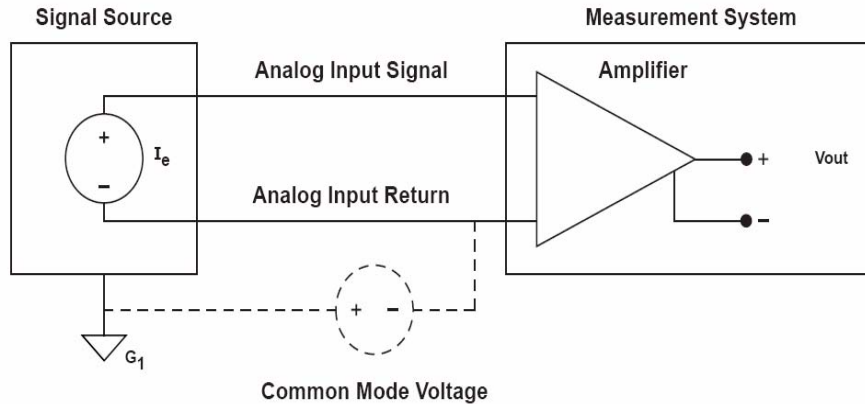


Figure 52: Common mode voltage is present when different ground potentials exist in your measurement system.

In many applications, noise is a fact and a common occurrence. To prevent this noise from entering the signal path, the signal must be isolated on a channel-to-channel basis as well as from the PC ground reference.

Technology breakthroughs now allow channel-to-channel isolation to be accomplished effectively. Using an A/D per channel with a DC-DC converter for each A/D allows each signal input channel to be isolated from one another (see [Figure 53](#)). With this individual isolation per channel, each input channel can now “float” to its own ground reference. Separate channels are then effectively isolated from each other by the isolation barrier, up to ± 500 V for each channel. Now any noise or common mode voltage to that level is eliminated from the system measurement, allowing pristine results from each sensor without any interaction from any other sensor.

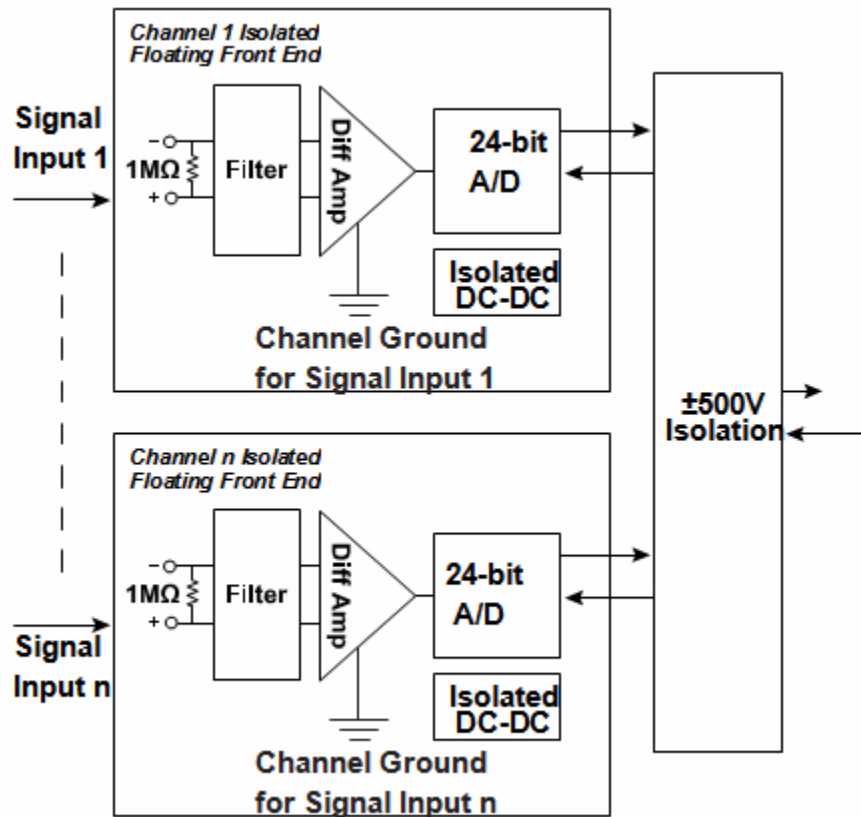


Figure 53: An A/D per channel and a DC-to-DC converter for each A/D provides channel-to-channel isolation, where each signal can float to its own ground reference (± 500 for the DT8874).

Input channel return references are effectively separate instruments when the inputs are isolated. This individual isolation now allows the ground reference of each channel to measure at the level of this common mode voltage, up to ± 500 V. This capability allows some new application ideas to flourish.

Measurement of two signals, as shown in [Figure 54](#), can now have essentially 3 separate ground references: each signal input (signal 0 and signal 1) has a separate return reference; additionally, the PC has a third ground reference. This scheme can be extended for many signal inputs, such as 48 inputs in a single small measurement box, for a total of 49 different ground references.

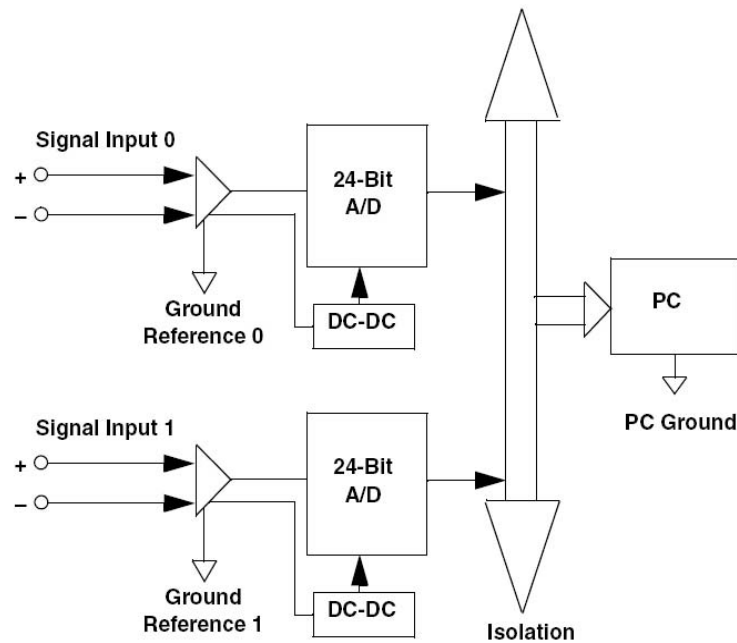


Figure 54: When measuring two input signals with channel-to-channel isolation, three ground references are provided (signal 0, signal 1, and PC ground).

New Application Derived from Isolated Channels

A typical application of measuring 48 channels of varying voltages from sensors, such as batteries, thermocouples, RTDs pressure sensors, etc., often must use different instruments because of the various ranges needed. Standard ranges of ± 10 V may handle some applications, but not others, to the required resolution and accuracy.

With isolation per channel, combinations of channels can be used to measure higher voltage ranges. [Figure 55](#) shows a configuration of 2 separate channels “ganged up” to measure a signal of up to 20 V. Normally each input would measure ± 10 V. But, by using two identical channels, a range of twice that level can be accommodated. The output readings of each A/D are then summed to give the very accurate result. This is possible because the isolation between channels allows the return of the first channel to “float up” to a level halfway between the input signal. This reflects the accurate impedance balance of each input, and the high common mode rejection of each stage.

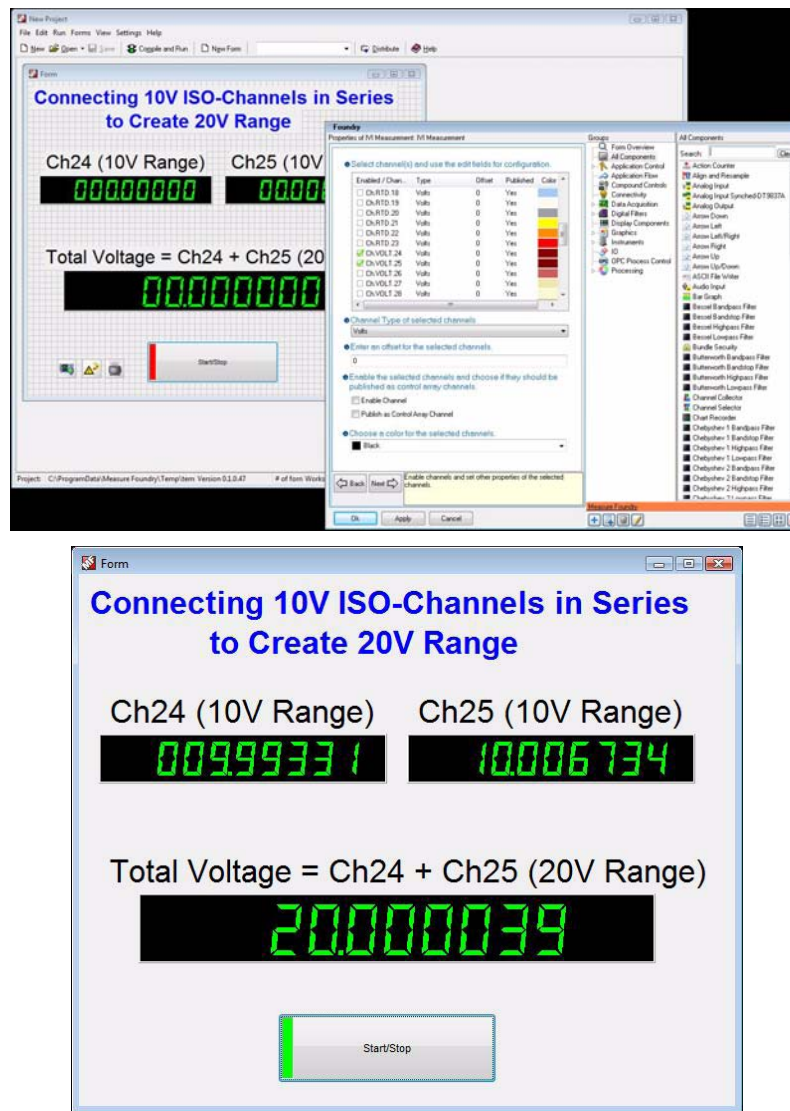


Figure 55: Because each floating signal input is isolated from each other, you can use two separate channels, normally each configured for $\pm 10\text{V}$, to measure a $\pm 20\text{V}$ signal. Simply sum the result of each channel to get your result.

Summary

When you need the highest accuracy and the most flexibility from your measurement system, ensure that floating signal inputs are provided. This approach allows noise-free measurements in tough industrial settings. It also saves countless days of tracking down erroneous readings that inevitably result if these precautions are not taken from the project's beginning.

Index

A

- accessories [24](#)
- accuracy specifications, thermocouple [128](#), [130](#)
- Active Scripting [73](#)
- activity, Ethernet LED [44](#)
- address string [43](#)
- Agilent VISA [33](#)
- alarm limit configuration [88](#)
- alias, VISA [43](#)
- alpha curves [132](#)
- analog input [105](#)
 - basic instrument specifications [126](#)
 - calibration [110](#)
 - channels [105](#)
 - CJC circuit [107](#)
 - configuration [84](#)
 - conversion modes [112](#)
 - data format for RTD channels [114](#)
 - data format for thermocouple channels [114](#)
 - data format for voltage channels [114](#)
 - differential configuration [51](#), [53](#)
 - error conditions [115](#)
 - filtering [114](#)
 - input ranges [108](#)
 - open thermocouple detection [107](#)
 - out of range data [109](#), [110](#)
 - resolution [110](#)
 - RTD specifications [132](#)
 - RTD types [108](#)
 - sample clock [111](#)
 - thermocouple specifications [127](#)
 - thermocouple types [106](#)
 - trigger source [111](#)
 - wiring current loop inputs to RTD channels [64](#)
 - wiring current loop inputs to thermocouple channels [62](#)
 - wiring current loop inputs to voltage channels [65](#)
 - wiring RTD inputs [53](#)
 - wiring thermocouple inputs [51](#)
 - wiring voltage inputs to RTD channels [59](#)
 - wiring voltage inputs to thermocouple channels [57](#)
 - wiring voltage inputs to voltage channels [60](#)
- application wiring
 - current loop inputs to RTD channels [64](#)
 - current loop inputs to thermocouple channels [62](#)

- current loop inputs to voltage channels [65](#)
- digital inputs [68](#)
- digital outputs [69](#)
- RTD inputs [53](#)
- thermocouple inputs [51](#)
- voltage inputs to RTD channels [59](#)
- voltage inputs to thermocouple channels [57](#)
- voltage inputs to voltage channels [60](#)
- applying power [41](#)
- associating CSV files [78](#)
- attaching the module to the computer [37](#)
- Auto-IP [39](#), [43](#), [150](#)

B

- block diagrams [100](#)
 - DT8871 [101](#)
 - DT8871U [100](#)
 - DT8872 [102](#)
 - DT8873 [103](#)
 - DT8874 [104](#)

C

- cables [38](#)
 - crossover [40](#)
 - standard LAN (EP372) [39](#)
- calibration [110](#)
- channel-to-channel isolation [117](#)
- CJC circuit [107](#)
- clients [73](#)
- clocks, analog input [111](#)
- cold junction compensation [107](#)
- configuring
 - alarm limits [88](#)
 - analog input channels [84](#)
 - digital inputs [89](#)
 - digital outputs [90](#)
 - filters [87](#)
 - LAN [83](#)
 - scan rate [86](#)
 - triggers [89](#)
- configuring network settings on PC [149](#)
- connecting signals
 - current loop inputs to RTD channels [64](#)
 - current loop inputs to thermocouple channels [62](#)
 - current loop inputs to voltage channels [65](#)

- digital inputs [68](#)
- digital outputs [69](#)
- RTD inputs [53](#)
- thermocouple inputs [51](#)
- voltage inputs to RTD channels [59](#)
- voltage inputs to thermocouple channels [57](#)
- voltage inputs to voltage channels [60](#)
- connecting to the LAN [37](#)
 - private LAN [39](#)
 - site LAN [38](#)
- connector pin assignments
 - digital I/O connector [147](#)
 - Ethernet connector [144](#)
- continuous analog input [112](#)
- conversion modes [112](#)
 - continuous analog input (scan mode) [112](#)
 - digital I/O [117](#)
 - simultaneous single-value analog input [112](#)
- conversion rate [113](#)
- crossover cable [40](#)
- CSV files [78](#)
- customer service [123](#)

D

- data encoding [114](#)
- data format
 - RTD channels [114](#)
 - thermocouple channels [114](#)
 - voltage channels [114](#)
- DHCP server [38, 39, 43](#)
- differential channels [51, 53](#)
- digital I/O
 - channel-to-channel isolation [117](#)
 - connecting input signals [68](#)
 - connecting output signals [69](#)
 - connector pin assignments [147](#)
 - controlling the outputs [92](#)
 - input configuration [89](#)
 - lines [116, 117](#)
 - operation modes [117](#)
 - output configuration [90](#)
 - reading the digital input port in the analog data stream [112](#)
 - reading the inputs [93](#)
 - resolution [117](#)
 - specifications [139](#)
 - subsystem specifications [139](#)
- digital trigger [111](#)
- discovery utility, Eureka [21, 33, 79](#)
- DNS server [43](#)

- downloading measurements [94](#)

E

- encoding data [114](#)
- ENet Activity LED [44](#)
- ENet Link LED [44](#)
- environmental specifications [140](#)
- EP333 cable assembly [24, 67](#)
- EP372 LAN cable [39](#)
- EP373 single rack mount kit [24](#)
- EP374 dual rack mount kit [24](#)
- error conditions [115](#)
- Ethernet activity [44](#)
- Ethernet cable [38, 39](#)
- Ethernet connector specifications [143](#)
- Ethernet crossover cable [40](#)
- Eureka Discovery Utility [21, 33](#)
 - firewall settings [80](#)
 - running [79](#)
 - troubleshooting [80](#)
 - using [79](#)
- Excel [78](#)
 - using to display data [95](#)
- external digital trigger [111](#)

F

- factory service [123](#)
- features [16](#)
- FIFO [113](#)
- filters [87, 114](#)
- floating-point data [114](#)
- formatting data
 - RTD channels [114](#)
 - thermocouple channels [114](#)
 - voltage channels [114](#)
- frequency [111](#)

G

- GMT [84](#)

H

- hardware features [16](#)
- high drive digital outputs [69](#)
- host name [43](#)
- hub
 - using with a private LAN [39](#)
 - using with a site LAN [38](#)

I

- input ranges [108](#)
- installing the software [33](#)
 - prerequisites [33](#)
- instrument web interface [21](#)
- Internet Explorer browser settings [73](#)
 - JavaScript [73](#)
 - pop-up blockers [77](#)
 - security levels [74](#)
- Internet zone [74](#)
- Intranet zone [75](#)
- IP address [43](#)
- ISO-Channel technology [155](#)
- isolation [117](#)
- isolation specifications [137](#)
- IVI-COM driver [23](#)

J

- Java [73](#)

L

- LAN
 - configuration [83](#)
 - connecting to a private LAN [39](#)
 - connecting to a site LAN [38](#)
 - LED [44](#)
- launching the web interface [82](#)
- LEDs
 - ENet Activity [44](#)
 - ENet Link [44](#)
 - LAN [44](#)
 - LMT [44](#), [109](#), [110](#)
 - OPN [44](#), [107](#), [109](#)
 - Power [41](#)
 - USB [44](#)
- limit configuration [88](#)
- lines, digital I/O [116](#), [117](#)
- LMT LED [44](#), [109](#), [110](#)

M

- Measurement Instrument Calibration Utility [23](#)
- mechanical relays, controlling [69](#)
- memory specifications [138](#)
- Microsoft Excel [78](#)
- Microsoft Notepad [78](#)
- moving average filter [114](#)

N

- network settings [149](#)
- NI-VISA [33](#)
- Notepad [78](#)

O

- open thermocouple detection [107](#)
- operation modes
 - continuous analog input (scan mode) [112](#)
 - digital I/O [117](#)
 - simultaneous single-value analog input [112](#)
- OPN LED [44](#), [107](#), [109](#)
- opto-isolators [116](#)
- out of range data
 - RTD channels [110](#)
 - thermocouple channels [109](#)
 - voltage channels [110](#)

P

- password [84](#)
- physical specifications [140](#)
- pinging the instrument [120](#), [121](#)
- pop-up blockers [77](#)
- power
 - applying [41](#)
 - specifications [140](#)
- prerequisite software [33](#)
- private LAN [39](#)
 - connecting directly to a computer [40](#)
 - connecting using a hub or switch [39](#)
- protection specifications [137](#)

Q

- QuickDAQ
 - Advanced FFT Analysis option [22](#)
 - Base version [21](#)
 - FFT Analysis option [22](#)

R

- rack mounting [24](#)
- raw filter [114](#)
- recommendations for wiring [49](#)
- regulatory specifications [141](#)
- requirements [32](#)

- requirements for web interface [73](#)
 - associating CSV files [78](#)
 - Internet Explorer browser settings [73](#)
 - Java [73](#)
- Reset pin [44](#), [46](#)
- resetting the instrument [46](#)
- resolution
 - analog input [110](#)
 - digital I/O [117](#)
- returning boards to the factory [123](#)
- RJ45 connector specifications [143](#)
- RMA [123](#)
- router, using with a site LAN [38](#)
- RTD alpha curves [132](#)
- RTD channels
 - data format [114](#)
- RTD connections
 - 2-wire [55](#)
 - 3-wire [55](#)
 - 4-wire [54](#)
- RTD connector specifications [143](#)
- RTD specifications [132](#)
- RTD types [108](#)

S

- sample clock [111](#)
- sample rate [113](#)
- scan rate [86](#)
- SCPI
 - clients [73](#)
 - programming [23](#)
- security levels [74](#)
 - Internet zone [74](#)
 - Intranet zone [75](#)
 - Trusted Site zone [76](#)
- SENSOR_IS_OPEN [108](#)
- simultaneous single-value analog input [112](#)
- site LAN [38](#)
 - connecting using a hub, switch, or router [38](#)
 - connecting without using a hub, switch, or router [39](#)
- software trigger [111](#)
- solid-state relays [117](#)
 - controlling [69](#)
- sourcing [69](#)
- specifications [125](#), [149](#)
 - basic instrument [126](#)
 - digital I/O [139](#)
 - environmental [140](#)
 - Ethernet connector [143](#)

- external power supply [145](#)
- isolation and protection [137](#)
- memory [138](#)
- physical [140](#)
- power [140](#)
- regulatory [141](#)
- RJ45 connector [143](#)
- RTD [132](#)
- RTD connectors [143](#)
- system temperature error [128](#), [130](#)
- temperature [133](#)
- thermocouple [127](#)
- thermocouple connectors [142](#)
- voltage connectors [143](#)
- voltage measurement [135](#)
- static IP addresses [84](#), [150](#), [154](#)
- STP37 screw terminal panel [24](#), [67](#)
- switch
 - using with a private LAN [39](#)
 - using with a site LAN [38](#)
- system requirements [32](#)
- system temperature error [128](#), [130](#)

T

- TCP/IP configuration [43](#)
- technical support [122](#)
- temperature error [128](#), [130](#)
- temperature specifications [133](#)
- thermocouple accuracy specifications [128](#), [130](#)
- thermocouple channels
 - data format [114](#)
- thermocouple connector specifications [142](#)
- thermocouple types [106](#)
- trigger source [111](#)
 - external [111](#)
 - software [111](#)
- triggers [89](#)
- troubleshooting
 - procedure [120](#)
 - technical support [122](#)
 - troubleshooting table [120](#)
- Trusted Site zone [76](#)

U

- unpacking [31](#)
- USB LED [44](#)
- username [84](#)
- UTC [84](#)

V

VISA alias [43](#)
VISA resource string [43](#)
voltage connector specifications [143](#)
voltage measurement specifications [135](#)
VXI-11 clients [73](#)

W

warm-up time [50](#)
web interface [21](#), [82](#)
 alarm limit configuration [88](#)
 analog input channel configuration [84](#)
 clients [73](#)
 controlling the digital outputs [92](#)
 digital input and trigger configuration [89](#)
 digital output configuration [90](#)
 downloading measurements [94](#)
 filter configuration [87](#)
 LAN configuration [83](#)
 measurement and controlling the instrument [91](#)
 reading the digital inputs [93](#)
 requirements for using [73](#)
 scan rate configuration [86](#)
 starting and stopping a scan [91](#)
wiring signals
 current loop inputs to RTD channels [64](#)
 current loop inputs to thermocouple channels [62](#)
 current loop inputs to voltage channels [65](#)
 digital inputs [68](#)
 digital outputs [69](#)
 recommendations [49](#)
 RTD inputs [53](#)
 thermocouple inputs [51](#)
 voltage inputs to RTD channels [59](#)
 voltage inputs to thermocouple channels [57](#)
 voltage inputs to voltage channels [60](#)
 warm-up time [50](#)

Z

zones
 Internet [74](#)
 Intranet [75](#)
 Trusted Site [76](#)

